


Part No. 519579

April 1978

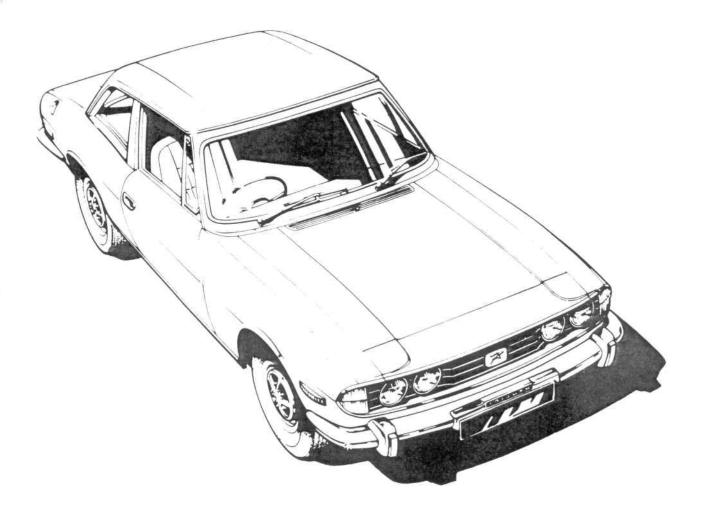



Part No. 519579

April 1978

British Leyland UK Limited
Jaguar & Rover Triumph Parts & Accessories
P.O. Box 150 Fletchamstead Highway
Coventry CV4 9DB

LD 31581

Telephone: Coventry (0203) 75511

Telex: 311322

Cables: Stanpart Coventry

ISBN - 970642 996

Whilst every effort is made to ensure the accuracy of the particulars contained in this Manual the Manufacturing Companies will not, in any circumstances, be held liable for any inaccuracies or the consequences thereof.

© Parts and Accessories Jaguar and Rover Triumph 1976

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form, electronic mechanical, photocopying, recording or other means without prior written permission of Parts and Accessories Jaguar and Rover Triumph.



Unipart parts and accessories are tested and approved by British Leyland. For full details of the Unipart range refer to the Unipart catalogue.

INTRODUCTION

This publication is completely pictorial, that is, a pictorial group index, page index and part numbered illustratic with no description. This gives a quicker look-up time and obviates the need for translation. The part number quoted on the illustrations is common to all models covered by the publication, unless otherwise stated against the heading, the part number or in the section at the bottom of the illustration.

The quantity for any part number is always one off unless a higher quantity is shown in brackets against the p. number.

Users should make themselves familiar with the various symbols and abbreviations which are used in t presentation of the publication to denote, amongst other things, Right hand Steering, Left hand Steering assemblies and components of kits.

The official description of the part, where this information is needed, is shown in the numerical index at the end the publication. The index also gives the page number on which each part appears.

INTRODUKTION

Denne publikation fremtraeder kun med illustrationer, dvs. et gruppe-indeks, et side-indeks og illustrere reservedelsnumre uden beskrivelse. Dermed er bogen hurtigere at bruge, og man undgår at skulle oversaette. Deservedelsnummer, der er anført ved illustrationerne, er faelles for alle de modeller, der omfattes af publikationerned mindre andet er anført i overskriften, ved reservedelsnummeret eller i afsnittet forneden på illustrationen.

For enhver reservedel er der altid tale om et styk, med mindre et andet kvantum er anført i parantes ud freservedelsnummeret.

Man bør saette sig inde i de forskellige symboler og forkortelser, der bruges i denne publikation for f.eks. at ang højrestyring, venstrestyring, aggregater og dele i saet.

Den officielle beskrivelse af en reservedel er, hvor denne oplysning er påkraevet, anført i det numeriske indeks sie i publikationen. Dette indeks viser også, på hvilken side den enkelte reservedel findes.

INLEIDING

Deze uitgave is volledig geillustreerd en bevat een inhoudsopgave van de onderdelengroepen en bladzijden, ever een opgave van aparte onderdelen in de vorm van genummerde illustraties zonder nadere toelichting. Op deze w wordt het opzoeken vergemakkelijkt en zijn vertalingen overbodig. De onderdelennummers in de illustraties z van toepassing op alle modellen die in de uitgave zijn genoemd, tenzij het tegendeel is vermeld bovenaan bladzijde, bij het onderdeelnummer of onder de betreffende illustratie.

Het aantal onderdelen bedraagt steeds 1 stuks, tenzij een groter aantal tussen haakjes bij het onderdeelnumme vermeld.

Gebruikers worden verzocht zich vertrouwd te maken met de verschillende symbolen en afkortingen die in d uitgave zijn vermeld en die o.a. dienen voor het aanduiden van wagens met rechts of links stuur, samengeste onderdelen, aparte onderdelen of sets.

De officiële beschrijving van de onderdelen is, indien belangrijk, vermeld in de numerieke inhoudsopgave aan eind van het boek. In de inhoudsopgave zijn tevens de nummers van de bladzijden vermeld waarop de onderde zijn afgebeeld.

FSITTELY

Tämä on pelkästään kuvajulkaisu, jossa on kuvitettu ryhmähakemisto, sisällysluettelo ja ilman nimikkeitä laadittu kuvallinen varaosanumeroiden luettelo. Kirjan käyttö nopeutuu, koska kääntäminen ei ole tarpeen. Kuvissa esitetyt varaosanumerot sopivat kaikkiin kirjan estittämiin malleihin ellei otsikossa varaosanumeron yhteydessä tai kuvan alla ole toisin mainittu.

Jokaista osaa tarvitaan yksi kappale, ellei suurempaa määrää ole mainittu sulkumerkeissä varaosanumeron yhteydessä.

Käyttäjien on tutustuttava julkaisussa käytettyihin erilaisiin merkkeihin ja lyhennyksiin huomioidakseen mm. oikean tai vasemmanpuoleisen ohjauksen, osa-asetelmat ja korjaussarjat.

Niistä osista, joiden sanallinen nimike on tarpeen, on kirjan lopussa numeroitu luettelo, jossa on myös mainittu, millä kirjan sivulla k.o. osa on kuvattu.

INTRODUCTION

Cer publication est entièrement illustrée, c'est-à-dire qu'elle comprend un index des figures, un index des pages et des rigures avec les numéros de pièce mais sans aucune désignation. Cela permet une recherche plus rapide et supprime la nécessité de la traduction. Le numéro de pièce indiqué pour chaque figure est commun à tous les modèles couverts par la publication sauf s'il en est autrement spécifié dans l'en-tête, avec le numéro de pièce ou sous la figure.

Pour chaque numéro de pièce la quantité est toujours égale à UN sauf si une quantité plus élevée est inscrite entre parenthèse à côté du numéro de pièce.

Les utilisateurs devront se familiariser avec les symboles et les abréviations employés dans la présentation de cette publication pour indiquer, entre autres, Direction à Droite, Direction à Gauche, Ensembles et Pièces composant un lot.

La désignation officielle de la pièce, lorsqu'elle est nécessaire, figure dans l'index numérique qui se trouve à la fin de la publication. Cet index donne également le numéro de la page dans laquelle chaque pièce est représentée.

EINFUHRUNG

Veröffentlichung besteht lediglich aus Abbildungen, d.h. einem bildlichen Gruppenindex, Seitenindex und teilebezeichneten Abbildungen ohne Beschreibung. Dies erleichtert das Nachschlagen und erübrigt Übersetzungen. Die in den Abbildungen aufgeführten Teilenummern sind allen in dieser Broschüre erwähnten Modellen gleich, außer wenn in der Überschrift, neben der Teilenummer oder im Abschnitt unten in der Abbildung anders angegeben.

Bei den Teilenummern handelt es sich jeweils um ein Einzelstück, außer wenn in Klammern neben der Teilenummer eine größere Menge verzeichnet ist.

Machen Sie sich bitte mit den verschiedenen Symbolen und Abkürzungen vertraut, die u.a. Rechtslenker, Linkslenker, Gruppen und Satzbestandteile darstellen.

Sofern notwendig, kann die offizielle Beschreibung eines Teiles im Nummernverzeichnis am Ende dieser Broschüre nachgeschlagen werden. Im Index ist ebenfalls die Seitennummer jedes Teiles aufgeführt.

LACKIERUNG UND AUSSTATTUNG

Für die Grundfalben und die verschiedenen Farbtöne wurde folgendes Kodesystem aufgestellt.

a) Grundfarben

Die neun Grundfarben haben folgende Nummern:

Schwarz

4. Gelb

7. Lila

2. Rot 3. Braun 5. Grün 6. Blau 8. Grau 9. Weiß

(b) Farbtöne

Für die verschiedenen Farbtöne der obigen Farben wird eine zweite Zahl, beginnend mit 1, an den Grundfarbenkode angehängt. Es sind folgende Farbtöne vorhanden:

Grundfarbe	1. Farbton	2. Farbton	3. Farbton	4. Farbton	5. Farbton	6. Farbton	7. Farbton.	8. Farbton
Schwarz	11 Black							
Rot	32 Signal	62 Inca Red	72 Pimento	82 Carmine	92 Magenta			
' jn	23 Sienna	33 New Tan	43 Saddle Tan	63 Chestnut	93 Russet			
Gelb	34 Jasmine	54 Saffron	64 Mimosa	94 Inca				
Grun	55 Laurel	65 Emerald						
Blau	26 Wedgwood	56 Royal	66 Valencia	76 Blue Print	96 Sapphire	106 Mallard	126 French	146 Tahiti
Lila	17 Damson	27 Shadow Blue						
Grau	68 Slate	78 Grey						
Weiß	19 White							

(c) Zwei Farben

Wenn zwei Farben verwendet werden, wird dies durch zwei durch einen Schrägstrich getrennte Kodes angedeutet, wobei die vorherrschende Farbe zuerst aufgeführt wird. So bedeutet z.B. 26/11 Wedgwood-Blau und Schwarz.

(d) Material für die Innenausstattung

Aus dem Buchstaben vor dem Farbkode geht hervor, was für ein Material in der Hauptsache für die nausstattung verwendet wird.

Kunstleder – kein Buchstabe, Leder – Buchstabe H, Stoff – Buchstabe C.

(e) Eintragung

Die für die Lackierung und Ausstattung verwendeten Farben und Materialien werden in die dafür vorgesehenen Kästchen auf der Inbetriebnahmeschild eingetragen.



SYMBOLE

Rechtslenker Linkslenker Rechts

Links

Sicherheitsteil Abgasentgiftung **₽**

Bezeichnet montierte Teile bis Seriennummer(n) wie unten aufgeführt.

Keine Abgasentgiftung

Bezeichnet montierte Teile ab Seriennummer(n) bis zur nächsten Seriennummer(n).

Bezeichnet montierte Teile Seriennummer(n).

Bezieht sich auf zugehörige Seite oder bezeichnet Teil oder Gruppe an das sich das Teil anschließt.

Siehe Hinweis unten auf der Seite.

ABKURZUNGEN

1ST 2ND

An oder neben den Gängen 3RD

4TH

5TH

A/C Klimaanlage

Nach Bedarf A/R

Gruppe Assy

AUTO Getriebeautomat

Vergaser-Modelle Carb.

CKD Völlig zerlegt

Verdichtungsverhältnis C/R

Gramm g

Modelle mit Benzineinspritzmotor Pelni

Modelle mit langem Radstand LWB

M/S Handlenkung

NSS Nicht getrennt lieferbar

O/D Schongang

PAS Servolenkung

Von der Service Division bestellen S/D

S00 Sonderauftrag


Wahlgrößen SS

Standardgetriebe STD

Modelle mit kurzem Radstand SWB

12.75" Länge in Zoll

Mengenbezeichnung wenn mehr als 1 Stück (2)benötigt.

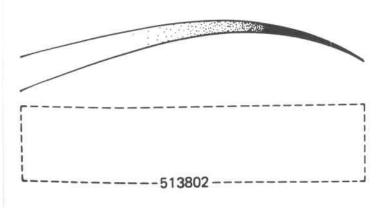

Bezeichnet Lage der Einzelheiten


Umfaßt die zu einer Gruppe oder einem Satz gehörenden Teile


Bezeichnet Anschlußteile wenn nicht in ihrem richtigen Verhältnis abgebildet.


COUNTRY ABBREVIATIONS


ADN DZ P RA AUS A BS BRN BDS B BR CDN E	Aden Algeria Angola Argentina Australia Austria Bahamas Bahrein Barbados Belgium Brazil Canada Canary Isles	CI JA JOR EAK RL NW PTM GBY MS MA P	Ivory Coast Jamaica Japan Jordan Kenya Lebanon Libya Malawi Malaysia Malta Mauritius Morocco Mozambique
RCH CO CY DK DOM	Ceuta Melilla Chile Columbia Cyprus Denmark Dominican Republic Dubai	NZ NIC WAN N PA PE	New Caledonia New Guinea New Zealand Nicaragua Nigeria Norway Panama Peru
SF F WAG D GH GBZ GB GR	Eire El Salvador Fiji Islands Finland France Gambia Germany Ghana Gibraltar Great Britain Greece	PI P SN ZA E S CH EAT/EAZ TD	Philippines Portugal Senegal S. Africa Spain Sweden Switzerland Tanzania Trinidad & Tobago Trucial States
GCA BRG NL HK IS RI IR IL	Guatemala Guyana Holland Hong Kong Iceland Indonesia Iran Israel	TR USA YV VN WS YU CB RNR EEC	Turkey USA Venezuela Vietnam W. Samoa Yugoslavia Zaire Zambia Common Market Countries


EHICLE AND SERIAL COMMENCING NUMBERS. VOGNS OG AGGREGATS SERIENUMMER EGYNDENDE MED NUMMER. AANVANGS-SERIENUMMERS VAN CHASSIS EN ONDERDELEN. AUTON A LAITTEEN ENSIMMAISET SARJANUMEROT. SERIE VEHICULE ET ORGANE NUMEROS DE DEBUT. ERIENANFANGSNUMMERN DER FAHRZEUGE UND EINHEITEN. NUMERI D'INIZIO SERIE VETTURE GRUPPI. NUMEROS PRINCIPIANTES DE VEICILOS E DE UNIDADES. NUMEROS INICIALES DE ERIE DE VEHICULO Y DE UNIDAD. BORJAN AV VAGENS OCH ENHETENS SERIENUMMER.

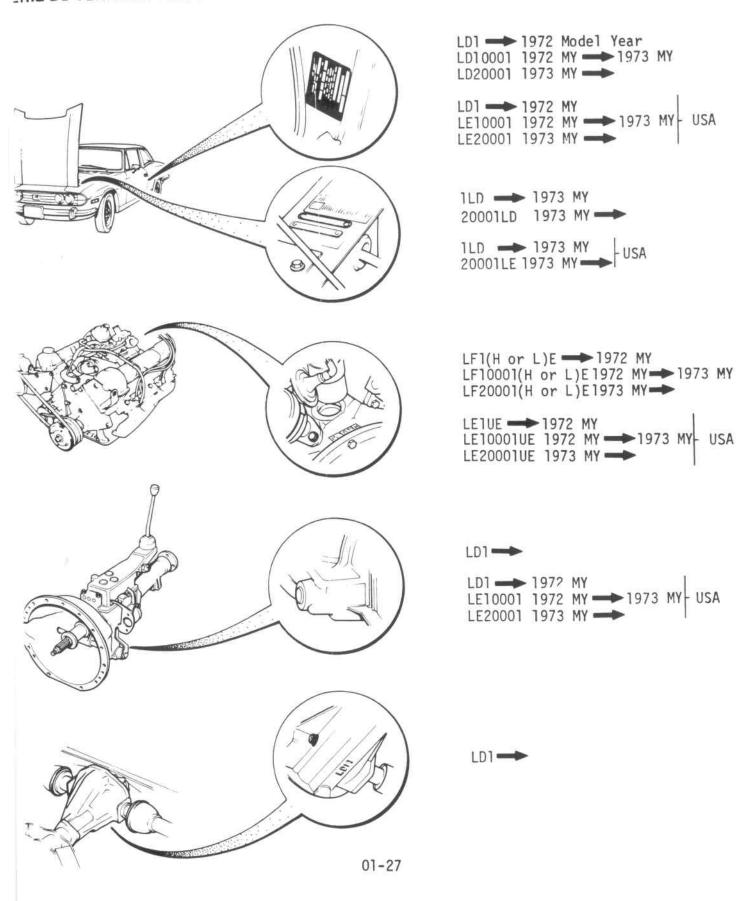

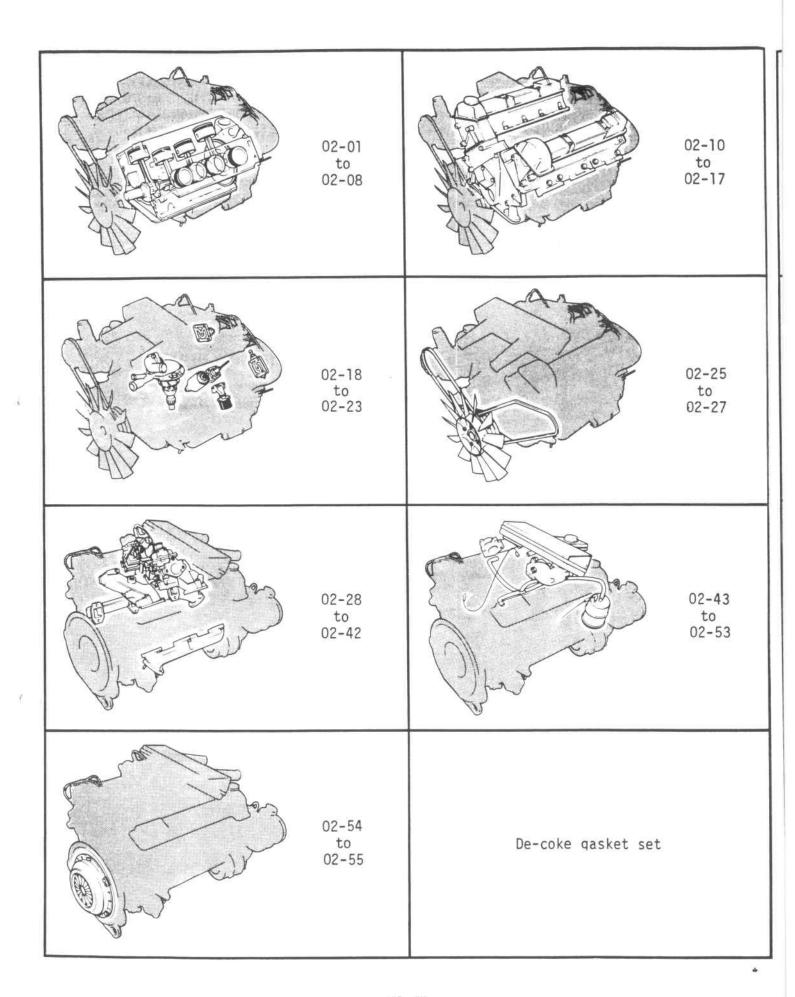

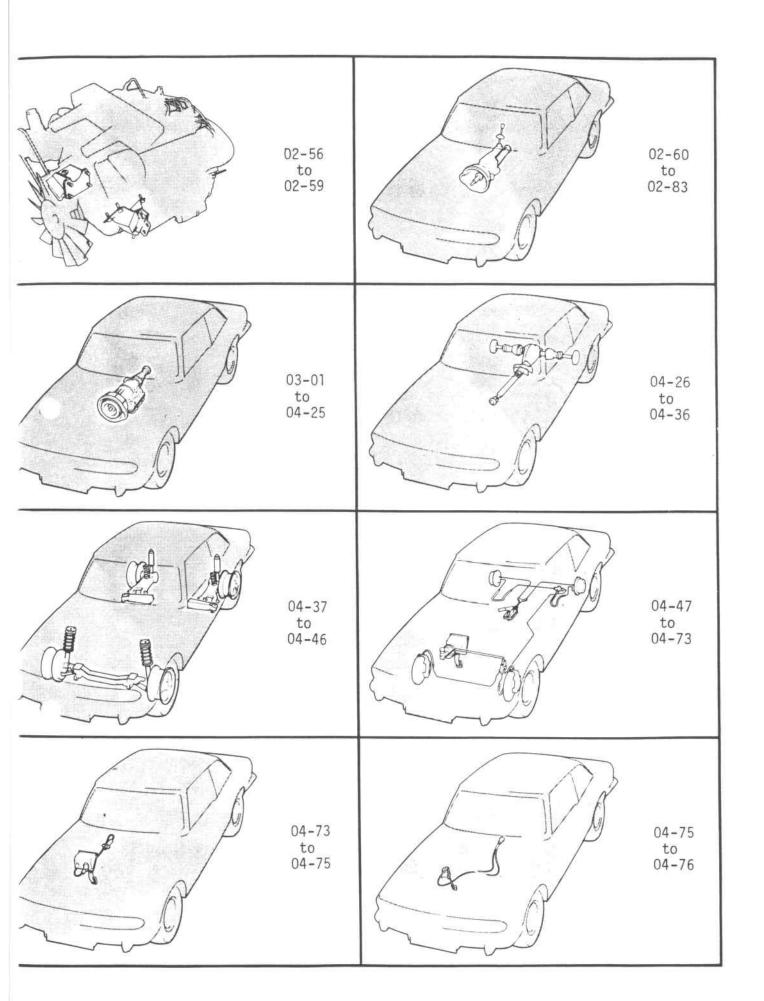

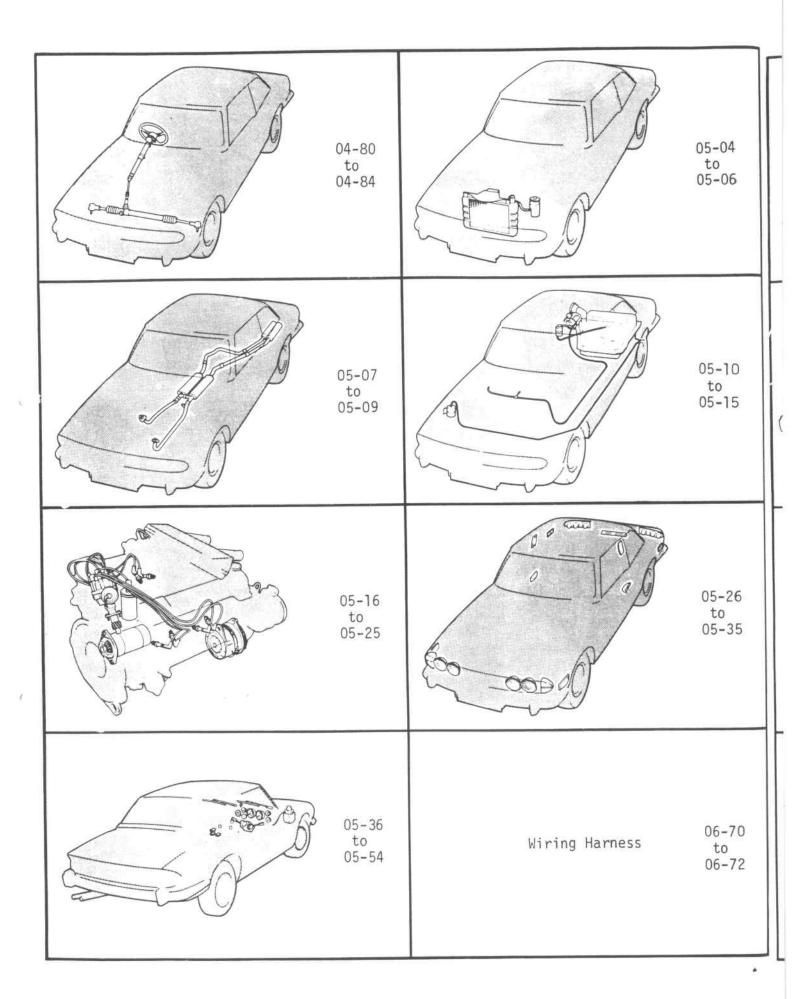

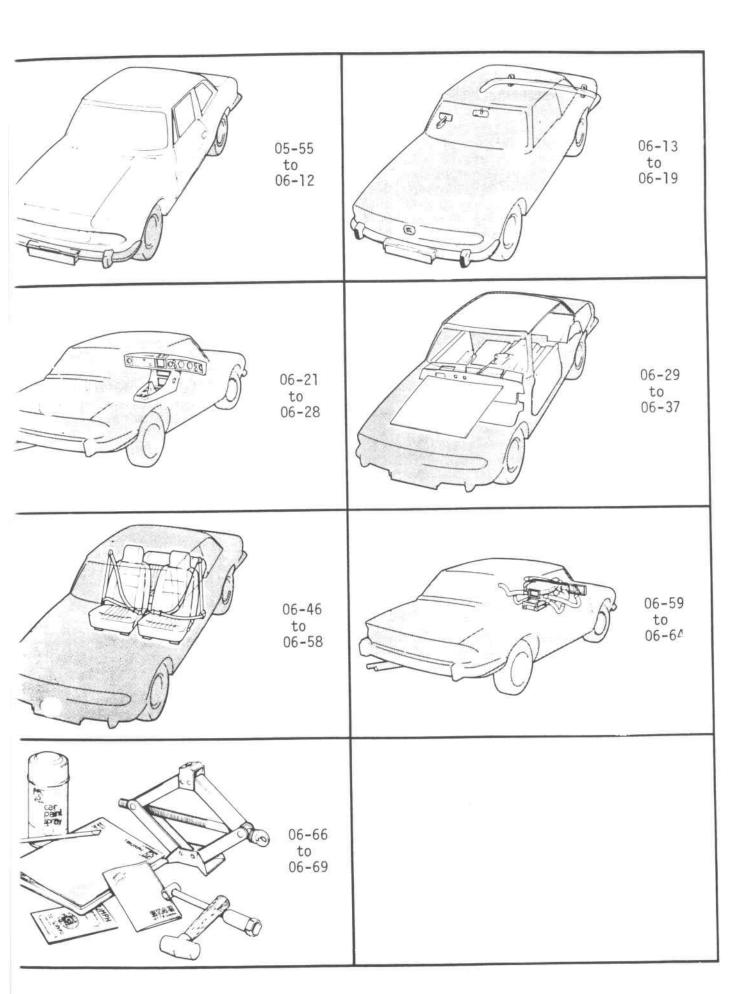

ALPHABETICAL INDEX TRIUMPH STAG

This index, in alphabetical order, gives the page number on which the item can be found.

DESCRIPTION			
A	05.54	D 1 . 0 C3 . t - L D d 3 -	04 52 5
'A' Post	05-64	Brake & Clutch Pedals	04-52,5
Accelerator Controls		Brakes Front (Discs)	04-47
Accelerator Pedals and Cables			04-62,€ 04-71
Air Cleaner	02-50,51,52		05-47
Air Cleaner Attachments	02-53	Brake Light Switch	04-73
Air Cleaner Attachments	02-54	Brake, Master Sylinder	04-73
Air Conditioning, Compressor & Clut	ch 02-34	Brakes, Rear (Drum) Brakes Rear, (Drum Service Kit)	04-51
Air Conditioning Condensor, Fan,	06-63,64	Brakes, Rr Hydraulic Pipes	04-65
Pipes Etc. Air Conditioning Pipework	06-62	Brake Servo Unit	04-55
Air Conditioning Unit & Controls		4Brake Servo (Service Kit)	04-56
Air Intake, Grille	06-08		
Alternator Assy	05-16,17	Brake Shoes Rear	04-50,
Alternator Assy Mountings	02-33		15,46,47,48
Anti Roll Bar	04-41	Brush Set, Starter Motor	05-20
Arm, Windscreen Wiper	05-37		05-21,
Armature Starter Motor	05-20	Bumper, Front	06-19
Armrest, Door	06-06	Bumper, Rear	06-20
Ashtray	06-28		
	04-01 to 25		
Automatic Transmission '65'	03-01 to 27		
Axle, Rr	04-28 to 37		04-76
		Cable Choke	04-79
		Cable Speedo	05-42
D.	05.70	Caliper Front Brake	04-47 02-14
'B' Post Assy	05-70 06-40	Camshaft Cover	02-14
'B' Post Trim Assy 'B' Post Lamp	05-35	Cap, Oil Filler	02-10
Backlight Glass (Hard Top)	06-12	Cap, Radiator Filler	05-04,05,0
Badge Grille Front	06-07	Carburettor Assy	02-35
Badge, Leyland Stag Ft. Side	06-15	Carburettor Damper, Air Valve	
Badge Side Rear	06-16	Spring, Needle	02-36
Ball Joint Ft. Supension	04-39	Carburettor Throttle Lever, Temp	
Ball Joint Outer & Inner, Steering	04-84	Compensator	02-37
Battery, Leads & Rods	05-55	Carburettor Float Chamber, Needle	
Bearing, Big End	02-08	Valve	02-38
Bearing Clutch Throwout	02-64	Carburettor Anti Pollution Assy	02-39
Bearing, Constant Pinion	02-66,67	Carburettor (Anti Pollution) Damp	er,
Bearing, Differential, Rr Axle	04-30,31	Air Valve Spring	02-40
Bearing, Front Hub	04-38	Carburettor (Anti Pollution) Thro	02 41
Bearing, Hub, Rr Axle	04-35	Lever, Temp Compensator	02-41
Bearing, Main, Crankshaft	02-06	Carburettor (Anti Pollution) Floa	02-42
Bearing, Mainshaft	02-69 04-33	Chamber, Needle Valve Carburettor Gasket Kits	02-43
Bearing, Rr Axle Inner Shaft Blade, Windscreen Wiper	05-37	Carburettor Suction Pipes & Fuel	02 45
Block Cylinder	02-02	Trap USA/Australia	02-44
Blower Unit, Heater	06-60	Carpets, Front Floor	06−3€
Body Harness	05-57	Carpets, Gearbox Rr Floor	06-37
Body Shell	05-59	Carpets, Dash Side	06-39
	06-15,16,17,18	Casing, Gearbox & Extension	02-65
Bonnet Catch & Fittings	05-62	Casing, Rr Axle	04-31
Bonnet, Stay & Hinges	05-61,62	Chain Timing	02-16.
Bottle, Radiator Overflow	05-04,05	Chain Wheel, Crankshaft	02-16
Bottle, Windscreen Washer	05-38	Charcoal Canister, Evaporative Lo	
Bracket Front Bumper	06-19	USA	02-47,48,4
Brake Band, Ft and Servo	03-08	Choke Cable Assy	04-79
Brake Band Rr and Servo	03-10	Cigar lighter	021-110

CO CONTRACT AND A I		
C Continued Cleaner, Air, All Markets	02-50	D
Cleaner, Air, All Markets	02-51	Damper FT Suspension 04-40
Cleaner, Air, Air Markets	02-52	
Cleaner, Air, USA Anti Pollution		
Cleaner, Air, Non Anti Pollution	02-53	Dash Side Carpet 06-39
Cleaner, Air, Anti Pollution	02-54	Dash insulation Pads 06-35
Clock Electric	05-43	Dash panel (Facia Panel) 06-26
Clutch 'A' Type Overdrive	02-77	Dash side trim 06-38
Clutch Cover	02-55	Decarbonising gasket set. GEG 1208 02-01
Clutch Driven Plate	02-56	Differential Details, RR Axle (04-30
Clutch Front 35 Auto	04-08	(04-31
Clutch Front 65 Auto	03-11	Dimmer switch relay 05-54
Clutch Hydraulic Pipes	04-74	Dipstick 02-02
Clutch 'J' Type Overdrive	02-83	Dipstick Auto Gearbox (03-02
Clutch, Master Cylinder	04-73	(03-03
Clutch Operating Lever	02-64	Discbrake front 04-47
		Distributor Details (05-21
Clutch Release Bearing	02-64	(05-22
Clutch Slave Cylinder	04-75	
Clutch Throw Out Sleeve	02-64	Distributor brush & spring set, (05-21
Coat Hook (Belt Stowage)	06-57	(contact set) (05-22
Coil, Ignition, Leads & Plugs	05-23	Distributor drive shaft 02-18
Co. Ir, Valve Spring	02-13	Doors & door skins 06-01
Column, Steering	04-80	Door handles & locking mechanism 06-03,04
Column Steering Support & Nacelle	06-29	Door tread plates 06-38
Column Steering Locking Device	06-29	Door trim pad 06-05
Compensator, Link, Handbrake	04-72	Door arm rest 06-06
Console, Auto/Manual	06-28	Door quarter light vent & glass 06-10
Constant Pinion Shaft	02-66	Door windows, glass & seals 06-11
Constant Pinion Bearing	02-66	Driven gear, speedo (02-65,79,84
Contact Set, Distributor	05-21,22	(03-14
Continental Touring Kit	06-67	(04-04
Converter Torque & Housing	03-04	Driven plate, clutch 02-56
Cooler, Oil Automatic Gearbox 35	04-13	
		Drive shaft, auto gearbox 03-14
Cooler, Oil, Automatic Gearbox '65" Core Plugs	03-23	
	02-02,13	E
Counter, Revolution, Engine	05-41	Electrical equipment 05-16 to 05-58
Countershaft & Gears	02-68	Electric clock 05-43
Cover, Camshaft	02-10	Element, air cleaner (02-50
Cover, Clutch	02-55	(02-51
Cover Distributor	05-22	(02-52
Cover Gearbox	02-70,71	Engine conversion gasket set 02-01
Cd -, Rocker	02-10	
Cover, Timing	02-15	Engine mounting, auto stiffening 02-58 details.
Cover, Tonneau	06-42	
Crankshaft	02-06	Engine mountings, ft, RH & LH 02-57
Crankshaft Bearing	02-06	Engine mounting RR "Overdrive" 02-60
Crankshaft Chainwheel	02-16,17	02-62
Crankshaft Pulley	02-25	Engine mounting, RR, '65' Auto G-Box 02-61
Crossmember Front	04-37	Engine plate, rear & gearbox adaptor 02-05
Crownwheel & Pinion	04-30,31	Engine, short 02-01
Cubby Box & Lid		Evaporative loss control system (05-13
Cushion Cover Front Seat	06-25	(05-14
Cushion Cover Rr Seat	06-48	(05-15
Cylinder Block	06-54	Exhaust manifold (02-31
Cylinder Block	02-02	(02-32
Cylinder Head	02-11,12	Exhaust system, front pipes 05-07
Cylinder Head Gasket	02-13	Exhaust system silencers 05-08
Cylinder Liner	02-02	Ehausst systems tail pipes 05-09
		Enado o o o o o o o o

01-34

E Continued

DETAIL TURESTALS REPEARED

100 - 100 100 100 100 100 100 100 100 10			
Exhaust valves	02-13	Front suspension, hub, vertical link	04-3
Extension, gearbox	02-65	and tierod lever	04-31
Extension gearbox Auto '35'	04-04	Front suspension lower strut & wishbone	04-3
Exterior mirror, door	06-13	Front wing	05-6
Exterior mirror wing	06-13	Fuel gauge, facia	05-4
Eye lifting	02-12	Fuel system (05-1
250 11101119		" "	05-1
F		Fuel tank	05-1
Facia harness	05-57	Fuel tank unit	05-1
Facia level ventilator	06-24	Fuse Box	05-5
Facia panel & details	06-26	G	00 0
Facia switches	05-43	Gasket, air cleaner	02-5
Facia veneered cappings (06-22	Gasket, air cleaner	02-5
11 11 (06-23	Gasket, cylinder head	02-1
11 11 11	06-24	Gasket, engine & rear oil seal	02-0
Fan, pulley & belts (02-25	Gasket, gearbox to extension	02-6
п п (02-26	Gasket inlet manifold (02-21
11 11 11	02-27	11 11 11	02-29
"Fasten seat belt" warning light	05-43	n n n	02-31
Filler cap oil engine	02-10	Gasket kits, carburettor	02-4:
Filler cap petrol	05-10	Gasket, oil pan, auto gearbox '35' (04-0!
Filler pipe assy, petrol	05-10	" " " " " " (04-01
Filter, oil pump	02-18	Gasket oil pan, auto gearbox 65	03-0
Flange coupling drive RR axle	04-32	Gasket & oil seal kit auto gearbox	03-2
Flange, mainshaft	02-69	Gasket, RR axle	04-2!
Flexibel joint steering upper	04-80	Gasket, rocker cover	02-11
Flexible joint steering lower	04-82	Gasket set auto Gearbox '35'	04-1
Floor assy	05-68	Gasket set, gearbox	02-7:
Floor sills	05-68	Gasket sets	02-0
Flywheel, engine	02-07	Gasket, sump	02-0:
Fork, gearbox selector	02-71	Gasket, timing chain cover	02-1!
Frame assy, door vent glass	06-10	Gasket, water elbow, thermostat	02-2;
Frontal grille & badges	06-07	Gasket, water pump	02-21
Front brake caliper	04-47	Gauge, temperature facia	05-4:
Front bumper bar	06-19	Gearbox carpets	06-3
Front bumper overrider	06-19	Gearbox casing & extension	02-6
Front clutch 'A' type overdrive	02-77	Gearbox change speed lever	02-7
Front clutch '35' Auto 'G' Box	04-08	Gearbox countershaft gear	02-6
Front clutch '65' Auto 'G' Box	03-11 04-47	Gearbox extension	02-6!
Front disc brake assy		Gearbox insulation pad	02-6!
Front end panels, wing, valance and	05-06	Gearbox mainshaft	02-6
radiator support.	06-36	Gearbox mainshaft gears & constant pinion shaft	02-0
Front floor carpets Front hydraulic brake pipes L.H.S.	04-63	Gearbox reverse & countershaft gears	02-68
Front hydraulic brake pipes R.H.S.	04-62	Gearbox selector forks	02-7
Front seat assy, less headroll or	06-44	Gearbox top cover	02-70
headrest.	00 44	" " "	02-7
Front seat assy less headrest	(06-45	Gearbox unit	02-6
" " " " " " " "	(06-46	Gears, reverse, gearbox	02-6
Front seat covers	06-47	Glass, backlight	06-1
11 11 11	06-48	Glass door	06-1
и и	(06-49	Glass door ventilator	06-10
Front seat head restraint	06-51	Glass windscreen	06-0
Front seat slides ETC	(06-44	Glove box	06-2
11 11 11 11	(06-45	Glove box lamp, map lamp & switch	05-4
Front seat toproll & headrest	06-50	Grille, air intake	06-0
Front, side, flasher lamps &	05-31	Grille, frontal & badges	06-0
repeaters.		Grille speaker	06-2
Front suspension anti roll bar	04-41	Governor, automat c gearbox '65'	03-1
Front suspension, damper & road	04-40	Gudgeon pin piston	02-0
springs.		Guide valve	02-1

SCRIPTION	PAGE NO	DESCRIPTION	PAGE NO
	04.71		
andbrake detai s	04-71	L	
andbrake cables etc.	04-72	Lamps, head	(05-26
andles, door	(06-03	11 11	(05-27
II II	(06-04	n n	(05-28
arness, body	05-87		(05-29
arness, main	05-56	Lamps, front side flasher & repeaters	(05-30
arness, facia	05-57	11 11 11 11 11	(05-31)
arness, console	05-57	Lamps, RR, stop, tial, flasher & rever	
arness, relay plate	05-57	" " " " " "	(05-33
arriess, relay prace	(06-56	lamps DD number plate trunk/fllumin-	
arness, safety, front seats	(06-57	Lamps, RR number plate, trunk/Illumin-	03-35
MII 227 203 229		ation.	05 25
ard top mouldings & finishers	06-17	Lamp 'B', post & arm rest puddle	05-35
azard warning light switch	05-43	Lamp, glovebox, map &switch	05-49
ead cylinder	02-11	Lamp, 'B' post (interior lamp)	05-35
ead restraint	06-51	Leads, battery	05-55
eadlamp assy	(05-26	Leads distributor	05-23
n u	(05-27	Leads plug	05-23
11	(05-28	Lever, handbrake	04-71
n 0	(05-29	Lifting eye	02-12
ead' ip flasher switch	05-44	Lifting jack	06-67
eadlining assy & hard top trim	06-30	Light switch, master	05-45
eated backlight	06-12	Liner, cylinder	02-02
	06-59	Linkage, carburettor manual transmissi	
eater unit & pipe work			04-78
eater motor & controls	06-60	" automatic	
inge, bornet & stays	05-61	Linkage, windscreen wiper arm & blades	
inge, trunk lid	05-71	Lock, door	06-03
.orn	05-50	Lock, trunk lid	05-71
ood cover	06-32	Locking handles, door ventilator	06-10
lood sticks - soft top	06-33	Lower valve body, rear servo tubes	03-20
ose, water, & bypass pipe .	02-21	Luggage compartment trim	06-43
ousing, water pump	02-20		
ub, front suspension	04-38		
ydraulic pipes - front brakes R.	H.S(04-62	M	
ii ii ii	" (04-63	Main bearing, crankshaft	02-06
ydraulic pipes - RR brakes	04-65	Main harness	05-56
January Prince		Mainshaft	02-69
		Mainshaft bearing	02-69
72		Mainshaft flange	02-69
dler shaft (jack shaft)	02-16	Manifold exhaust	02-31 02-32
gnition coil	05-23	Manifold, inlet	(02-28
gni on switch	05-45	manifold, infec	(02-29
nertia cut out switch	05-52	11 11	
nlet manifold	(02-28		(02-30
n n	(02-29	Master cylinder, brake	04-61
п	(02-30	Master cylinder, service kit (brake)	04-61
nlet valve	02-13	Master cylinder, clutch	04-73
nstruments, facia panel	(05-41	Master cylinder service kit, (clutch)	
The state of the s	(05-42	Master light switch & Ignition switch	
0 п п	(05-43	Mirror, exterior door	06-13
. п. н.	(03-43	Mirror wing	06-13
nterior mirror	06-13	Motor windscreen wiper	05-36
		Motor window lift regulator	Q5-40
		Moulding, body & badges	(06-15
J		11 11 11	(06-16
Jack, lifting	06-67	п п п п	(06-17
The second state of the se	55.07	n n n n	(06-18
		Mountings altonnaton	02-33
(Mountings, alternator	04-76
(noh & switch nama) light	05 43	Mounting bracket, acceleration	02-57
(nob & switch panel light	05-43	Mountings engine front	
(nob, change speeds lever (gear	- 02-72	Mountings engine auto stiffening	02-58
ever knob).		Mountings engine rear	02-60
		Mountings engine, rear '65' auto	02-61
		Mountings engine rear O/D	02-62
		1 00	

DESCRIPTION	PAGE NO	DESCRIPTION	PAGE NO
N			
Nameplate front	06-15	Petrol system (pipes etc) evaporative	05-
Nameplate rear	06-19 06-16	loss control. Petrol system (pipes etc) evaporative	05-
Night dimmer switch	06-20 05-54	loss control. Petrol tank	05-
The distance Switch	00 04	Pinion, constant & mainshaft gears	02-6
0		Pinion drive assy, starter motor Piston assy & con rod	05-1 02-0
Oil cooler '65' auto	03-23	Piston rings	02-0
Oil cooler '35' auto	04-13 02-10	Pipe assy, petrol filler	05-
Oil filler cap Oil filter	02-10	Pipes exhaust & clips, front Pipes exhaust silencer	05-(05-(
Oil pan '65' auto	03-07	Pipes, exhaust tail	05-(
Oil pan '35' auto Oil Pressure indicator switch	04-05 02-02	Pipes carburettor (U.S.A. & Australia	02-4
Oil pump	02-02	Pipes, engine breathing (European)	02-4
Oil pump drive shaft	02-18	Pipes engine breathing (U.S.A.)	02-4
Oil pump filter Oil seal - RR axle	02-18 04-29	0 H H H	02-4
Oil sump - manual	02-03	Pipes, hydraulic, front brakes R.H.S.	04-1
Oil sump - automatic	02-04	Pipes hydraulic, front brakes L.H.S.	04-6
Operating lever, clutch Operating lever, gearbox, reverse	02-64 02-68	Pipes hydraulic, RR brakes Pipes petrol	04-(05-
Outer ball joint assy	04-84	" "	05-
Overdrive 'A' type	02-74	Pipe petrol filler	05-
Overdrive 'A' type to O2-	02-79 80 to 02-8	Plate skid 5 Plates tread, door	06-i
Over riders FT bumpers	06-19	Plugs, core	02-1
Over riders RR bumpers	06-20	Dlugg enoughing	02-
		Plugs sparking Pressure differential warning valve	05-1 04-1
P		Propellor shaft - manual & overdrive	04-
	06-35 06-35	Propellor shaft - automatic	04-1 06-1
Pad gearbox insulation Pad bonnet, sound insulation	06-35	Publications (handbook, manual ETC) Puddle lamp, door arm rest	05-
Paint, touch in & aerosol	06-66	Pulley crankshaft	02-
Panels, rear end Panels, rear deck, rear quarter inne	05-70	n n n	02-
rear wheelarch.	103-05	Pulley alternator	05-
Panels, hard top rear quarter light		Pump oil	02-
Panels, dash Panels, front wing, valance & radia-	05-64	Pump petrol Steering	05-
tor support.	00 00	Pump, water	02-
Panel, roof	05-65		
Panel, bonnet Panel, facia	05-61 06-26	R	
Panel, boot	05-71	Rack & pinion steering & lower shaft	04-
Panel luggage floor	05-70	Rack & pinion power assisted steering	
Parcel tray Parking rod & pawl auto '35'	06-27 04-06	Rack & pinion steering inner & outer joints.	Da1104-
Parking rod & pawl auto '65'	03-07	Radiator block	05-
Pawl, handbrake	04-71	11 11	05-
Pedal, accelerator & cable Pedal, brake	04-76 05-52	Radiator overflow bottle	05-
Pedal, clutch	04-52	n n n	05-
Petrol fillow mine	04-54	Padiaton support panel hoses clins	05- 05-
Petrol filler pipe Petrol system (pipes etc)	05-10 05-11	Radiator support panel, hoses, clips, filler carpets.	05-
	05-12	Radiator support panel, hoses, clips,	. 05-
Petrol system (pipes etc) evaporativ Loss control.	/e05-13	filler carpets. Radiator support panel, hoses, clips	05-
		filler carpets	

₹ Continued

Ratchet, handbrake	04-71	S	
Rear axle, centre assy	04-28	Safety harness "Britax"	06-56
" " RR cover & mounting plate		Safety harness "Kangol" rear type	06-57
lear axle maincase & differential	04-30	Seal, bonnet	05-61
mears (non collapsible spacer)		Seat assy, front 06-	-44 06-45
Rear axle main case & differential	04-31	Seat belt stowage hook (06-57)	06-46
lears (collapsible spacer)		Seat cover front	06-47
Rear axle front extension	04-32	Seat cover front	06-48
Rear axle inner shafts	04-33	Seat cover front	06-49
Rear axle hub & outer shaft assys	04-34	Seat roll & head rest front	06-50
up to 32900.	renu meneri	Seat head restraint front	06-57
Rear axle hub & outer shaft assys	04-35	Seat assy rear	06-52
from 32900.		Seat squab details rear	06-53
Rear axle RR hub & half shaft assy	04-36	Seat cushion cover & details rear	06-54
(U.S.A. only).	04 50	Seat slides front	06-44
Rear brake assys " " Service kits	04-50	Selector details automatic transmission	06-45 03-24
SCI TICE KIES	04-51 04-64	'65'.	03-24
Rear brake, hydraulic pipes Rear brake shoes	04-50	Selector details automatic transmission3	-04-14
Real ody mouldings	06-15	" " " " "	04-15
Rear body side mouldings	06-16	и и и и	'04-16
Rear bumper assy & spring	06-20	Selector forks, gearbox	02-71
Rear clutch '35' auto	04-09	Selector shafts gearbox	02-71
Rear clutch '65' auto	03-12	Service kits auto transmission '65'	03-25
Rear engine plate & gearbox apaptor		11 11 11 11 11	03-27
(clutch housing).	ė.	" Brake servo	04-56
Rear floor carpet	06-37	" Brake master cylinder	04-56
Rear lamp cluster	05-32	" Clutch master cylinder	04-73
Rear number plate lamp	05-34	" Clutch slave cylinder	04-75
Rear seat details		" Rear brake	04-51
Rear seat assy	06-52	Servo unit front automatic transmission	03-08
Rear seat squab	06-53	'65'.	100 60
Rear seat cushion cover & details	06-54	Servo unit RR automatic transmission '65	
Rear stop/tail/flasher lamp	05-32	Servo unit automatic transmission '35'	04-07
Pear suspension twailing arms	05-33	Servo unit, brake	04-55 04-56
Rear suspension trailing arms	04-42	Servo unit, brake service kit Shaft gearbox selector	02-71
Rear suspension - springs & damper Rear valance panel	04-43 05-70	Shaft idler (jack shaft)	02-71
Rear wheel arch	05-70	Shaft, propellor manual /OD	04-26
Regi tor motor, window lift	05-40	Shaft propellor, automatic	04-27
Relay anti run on valve	05-52	Short engine	02-01
Repair kit, master cylinder - brake	04-61	Slave cylinder, clutch	04-75
Repair kit clutch master cylinder	04-73	Sleeve clutch throwout	02-64
Reverse gears, (gearbox)	02-68	Side and flasher lamps front	05-30
Reverse light switch	05-47	Side and flahser lamps front (U.S.A)	05-31
Revolution counter (Rev counter)	05-41	Skid plate	06-65
Kings, piston	02-08	Sparking plugs	05-23
Ring starter	02-07	Starter, ring	02-07
Road wheels & trim	04-44	Speedometer	05-41
0 100 UE ME	04-45	Speedometer cable	05-42
	04-46	Speedometer trip reset flex	05-41
Rod, battery	05-55	speedo driven gear	02-65
Rod, piston connecting		- Stabilizer, voltage	05-41
Rollover bar & mountings	06-31	Switch/knob panel light	05-43 04-52
Roof panel (hard top assy) Rotor, alternator 05	05-65	Spring, clutch pedal R.H.S. Spring, brake pedal R.H.S.	04-52
Rotor, heater	05-17	Spring, clutch pedal L.H.S.	04-54
, ileater	06-60	opining, crucch pedal L.m.s.	04 04

06-67

02-70

02 - 71


Tonneau cover

Top cover gearbox

Top cover gearbox

Torque convertor and housing "65" 03-04

Tools

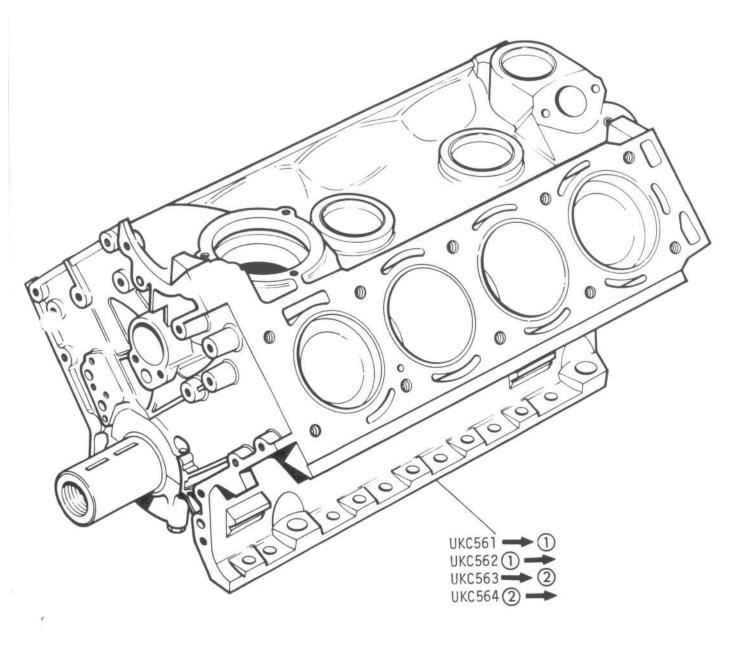

① LF20,000E

② LE20,000UE(USA)

UKC 3118 Cylinder head gasket set (All Engs) 519180 Conversion gasket set


Use in conjunction with UKC3118 for complete Engine Strip.



STAG


STAG


A STATE OF THE STA

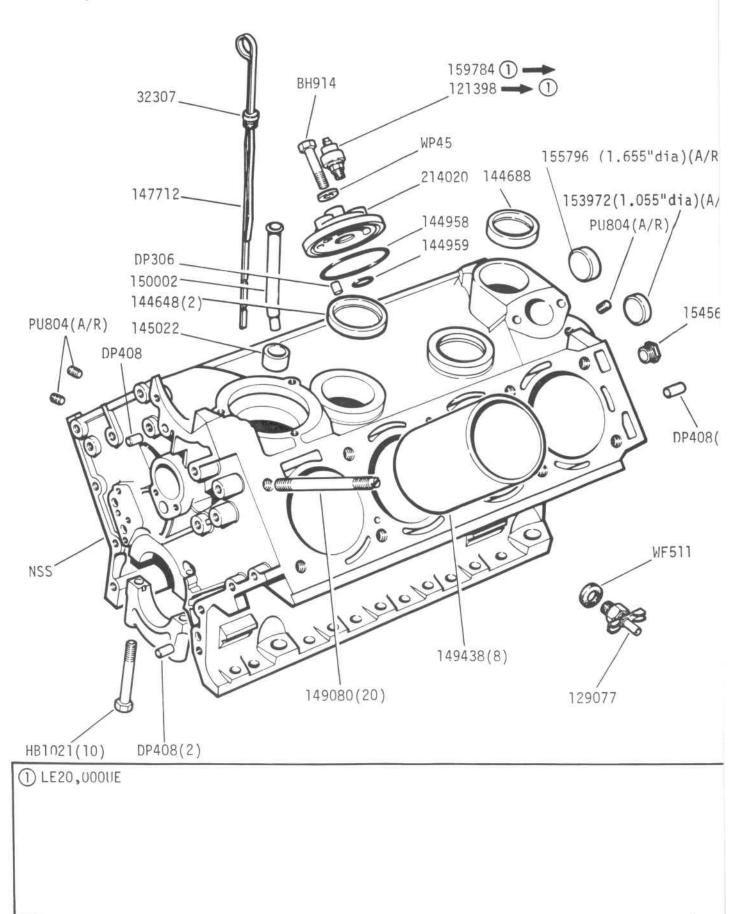

02-02

B52

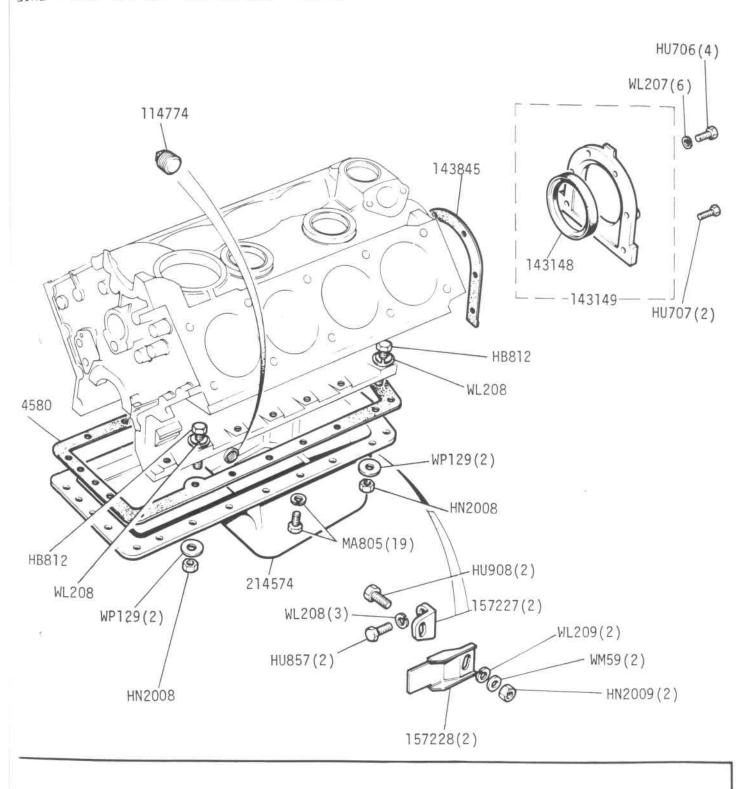

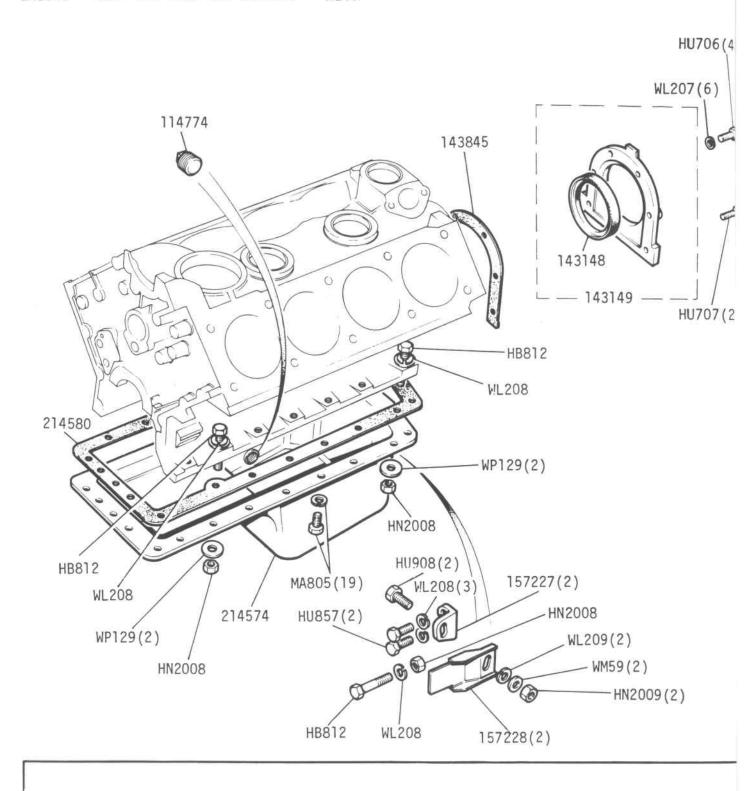



STA

02-04


B 529

GINE - Rear Engine Plate and Gearbox Adaptor Manual and Automatic

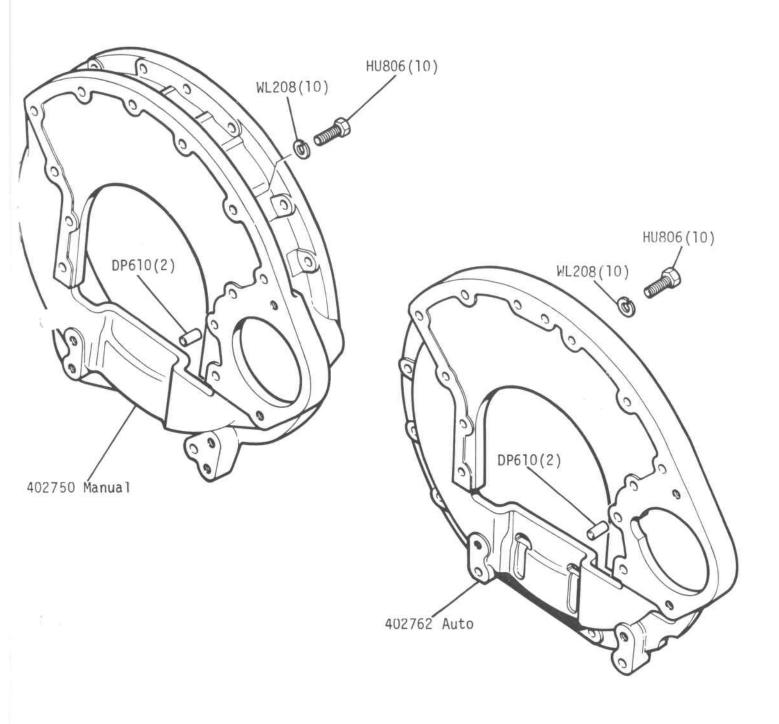


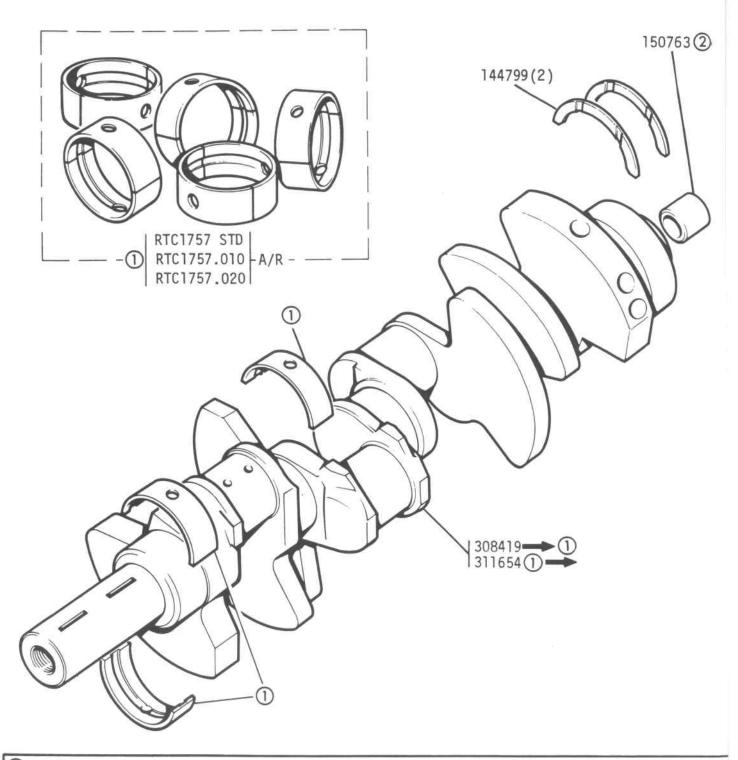




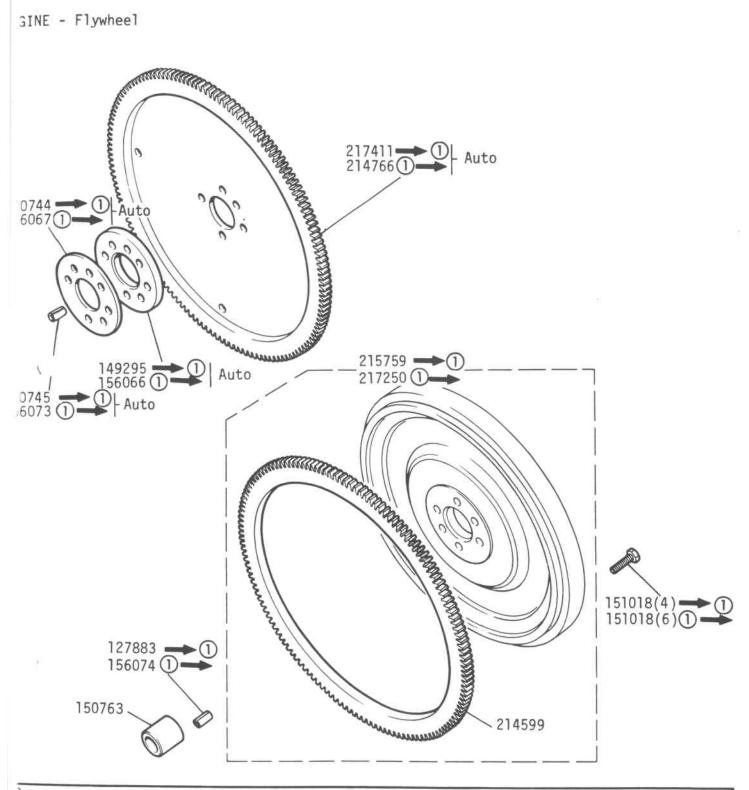

)LF273E

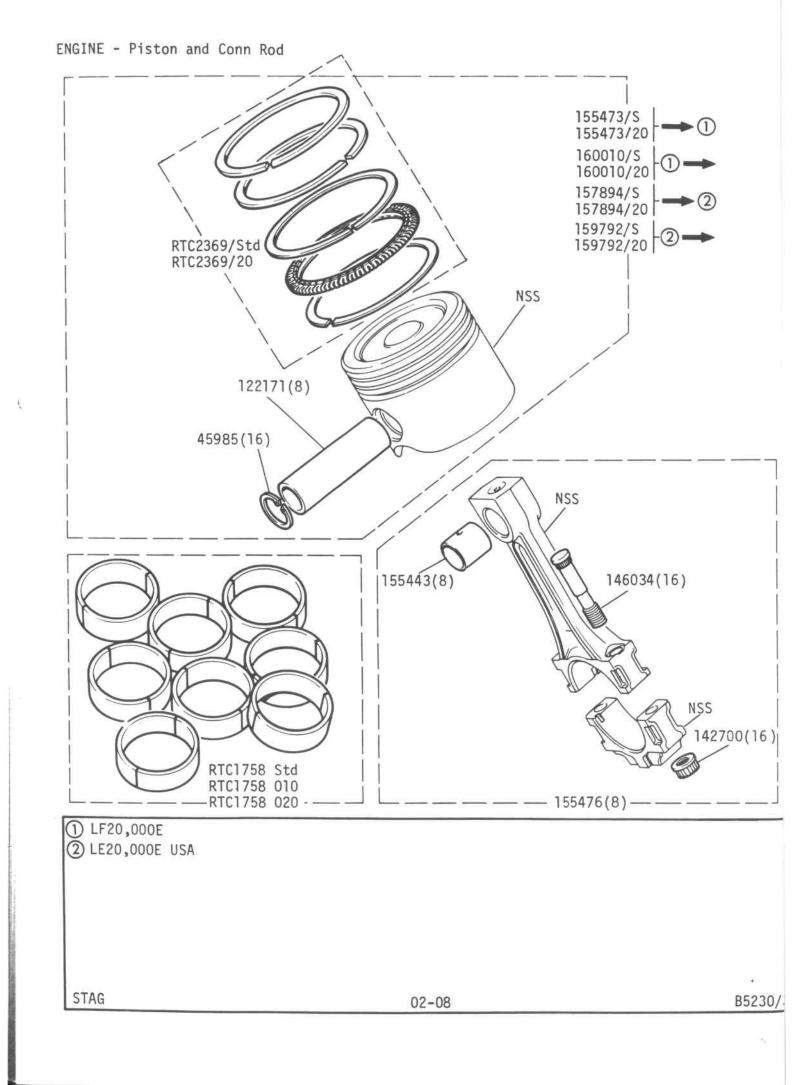


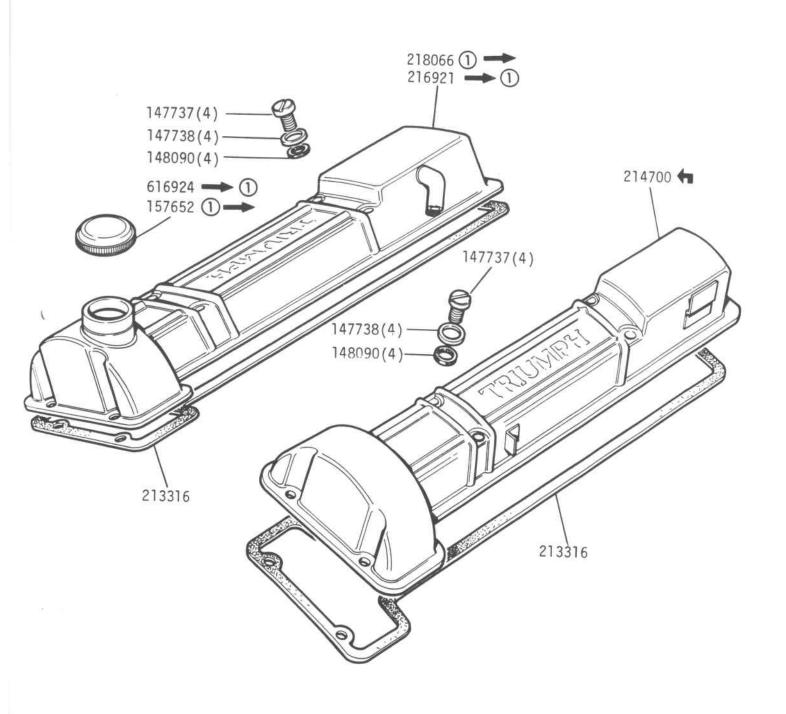

1) LF 10,000




STAG

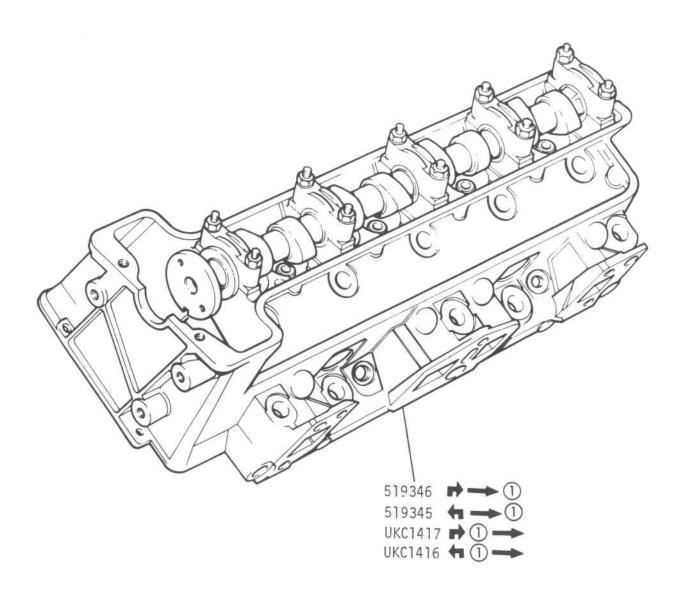


① LE20,001UE LF20,001HE





STAG

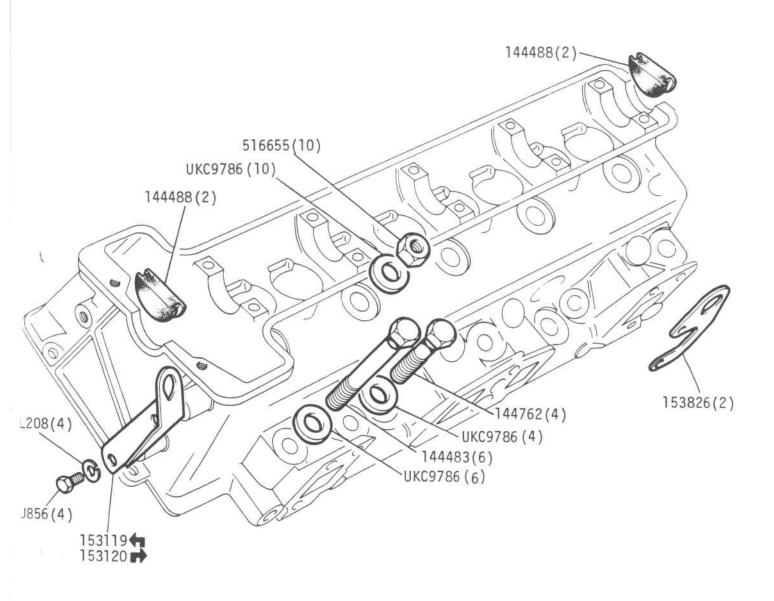

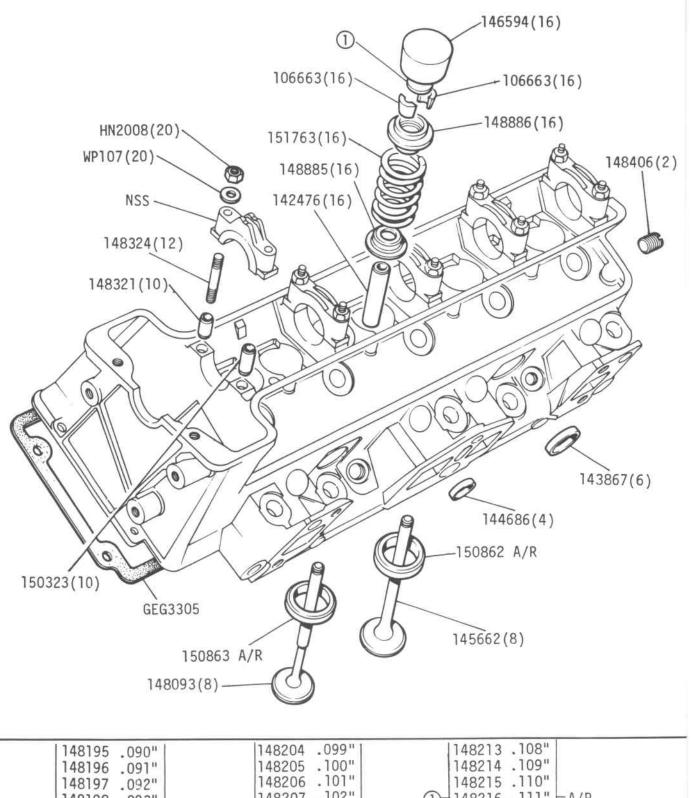

148195 .090" 148196 .091" 148197 .092" 148198 .093" 148199 .094" - A/R 148200 .095" 148201 .096" 148202 .097" 148203 .098"	148204 .099" 148205 .100" 148206 .101" 148207 .102" 148208 .103" 148209 .104" 148210 .105" 148211 .106" 148212 .107"	A/R
©		4
STAG	02-13	B5307

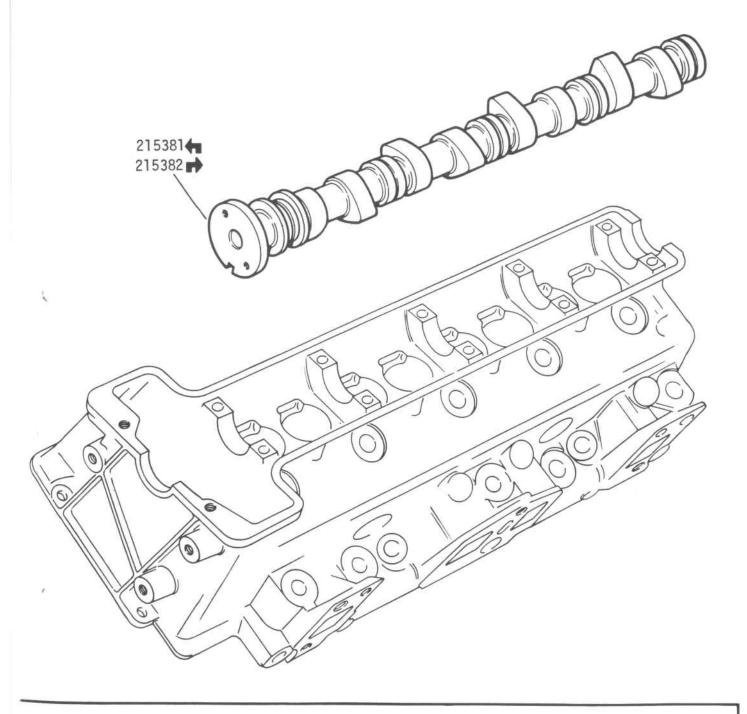


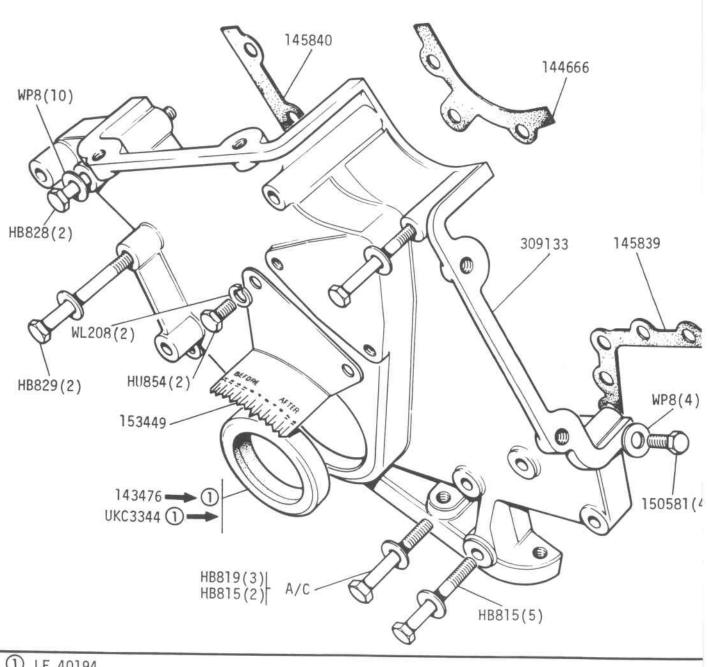

① LF 40194

02-15

B52

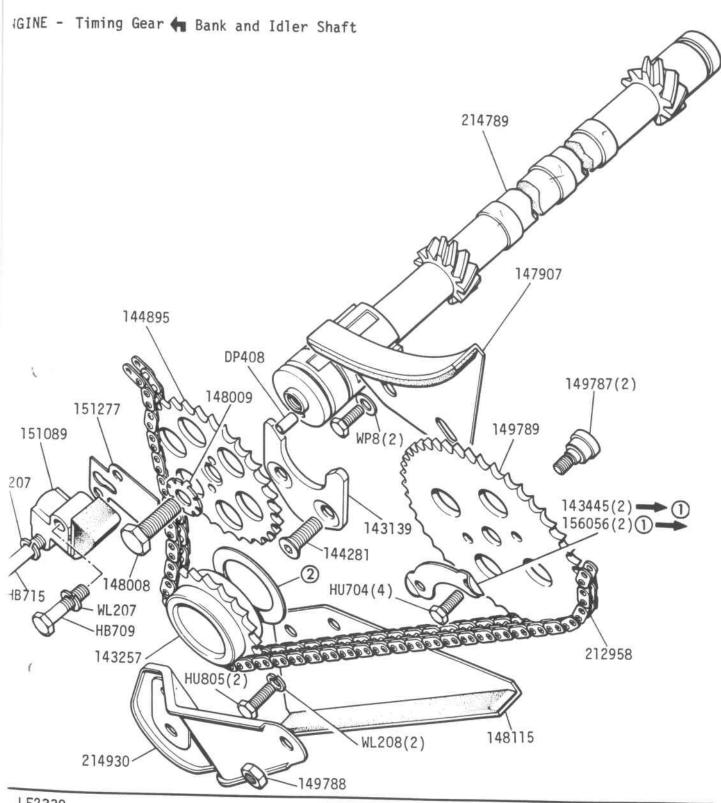


LF2330 |145275 0.004| A/R |145276 0.006| A/R


STAG


02-16

B5227

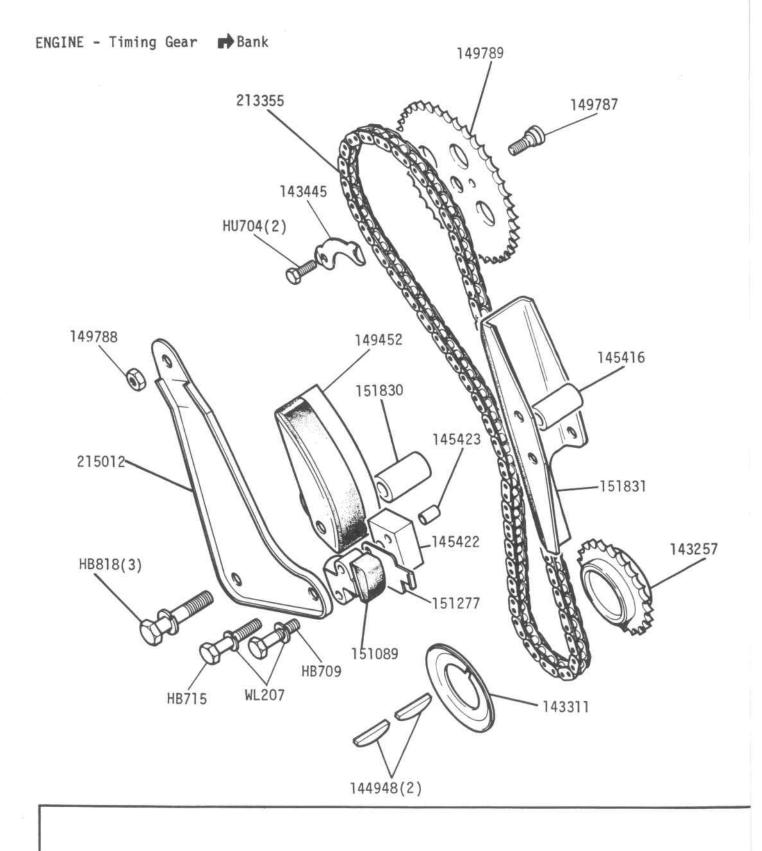

STAG

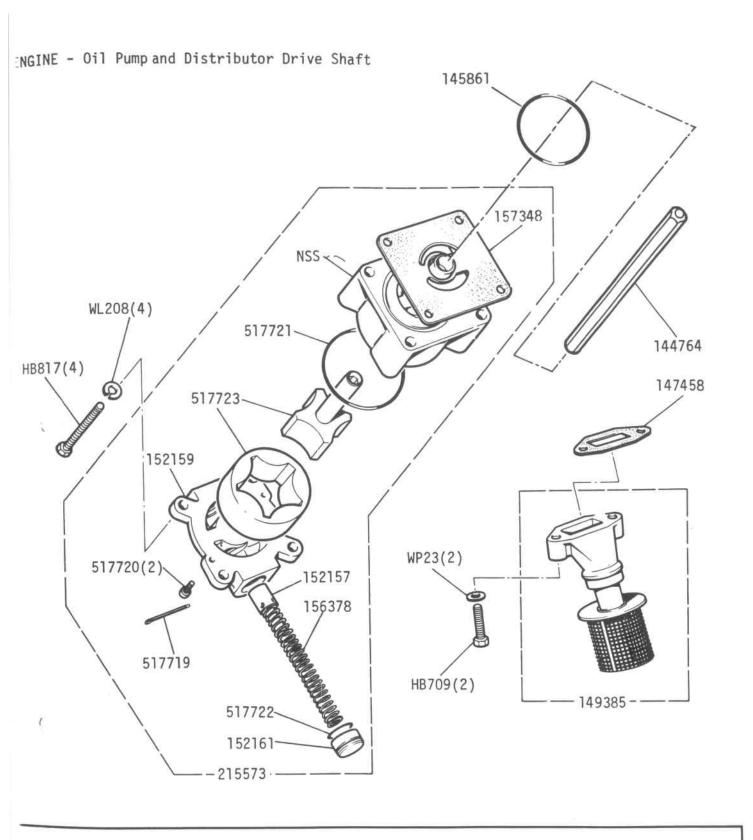

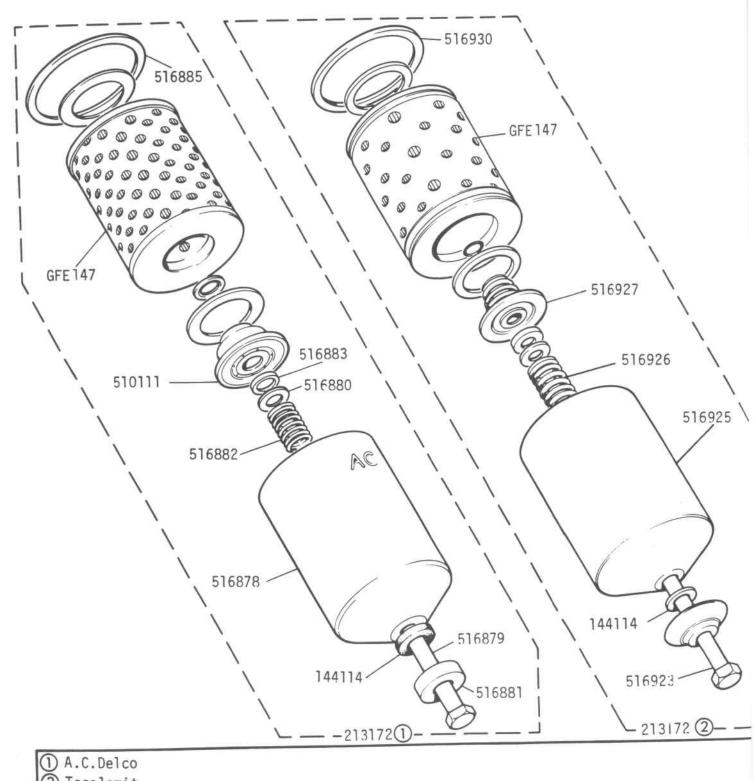


② Tecalemit

STAG

02-19

B53

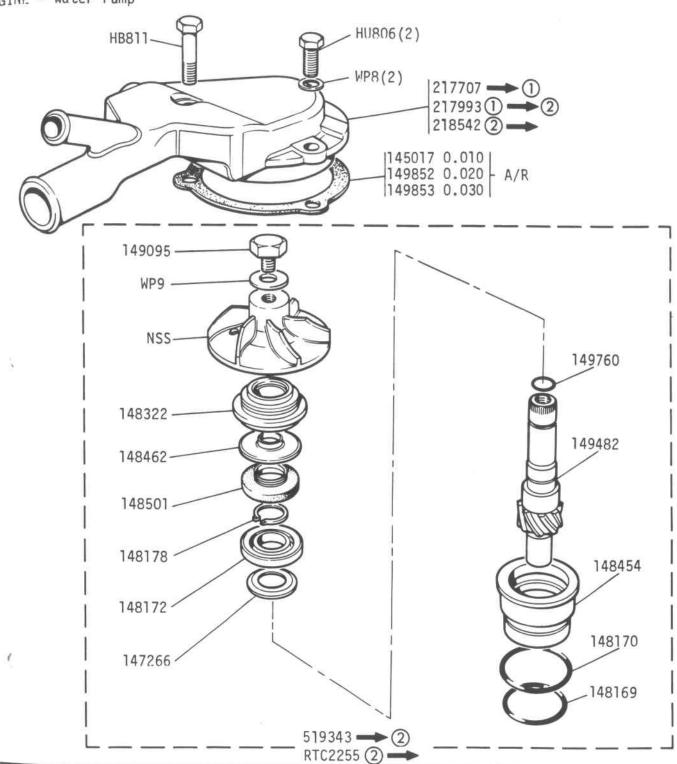


D LE10,000 USA LF2445 Non USA Markets

② LF44931

STAG


02-20

B5305/2

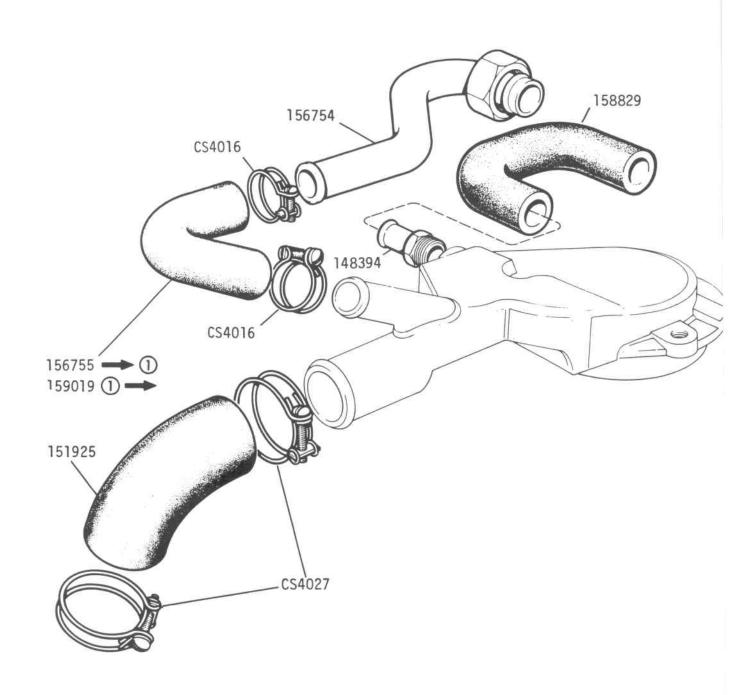

1 LF2445 LE10,000



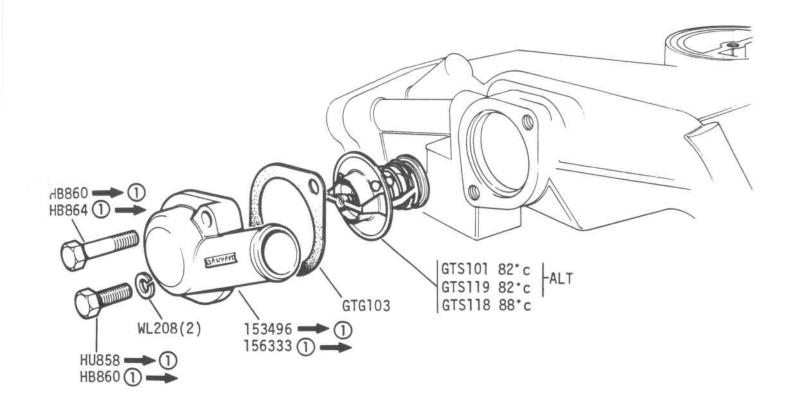


① LE712E (USA) LF311E

STAG

02-22


B5444

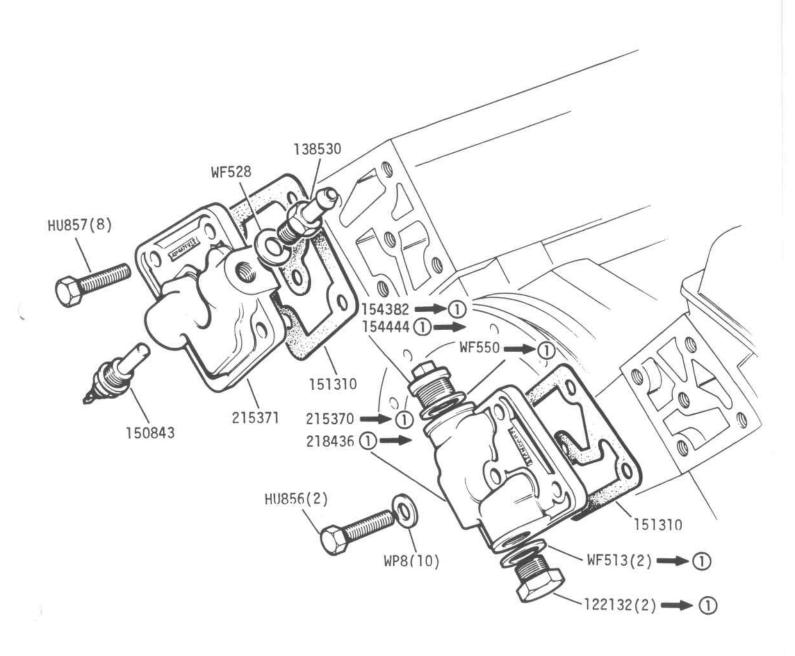


① LF 13344E


154382 TEMPERATURE WARNING LIGHT SWITCH UP TO (1) ONLY.


INE - Fan, Pulley and Fan Belt \longrightarrow LF23070 \bigcirc 02-27 For future

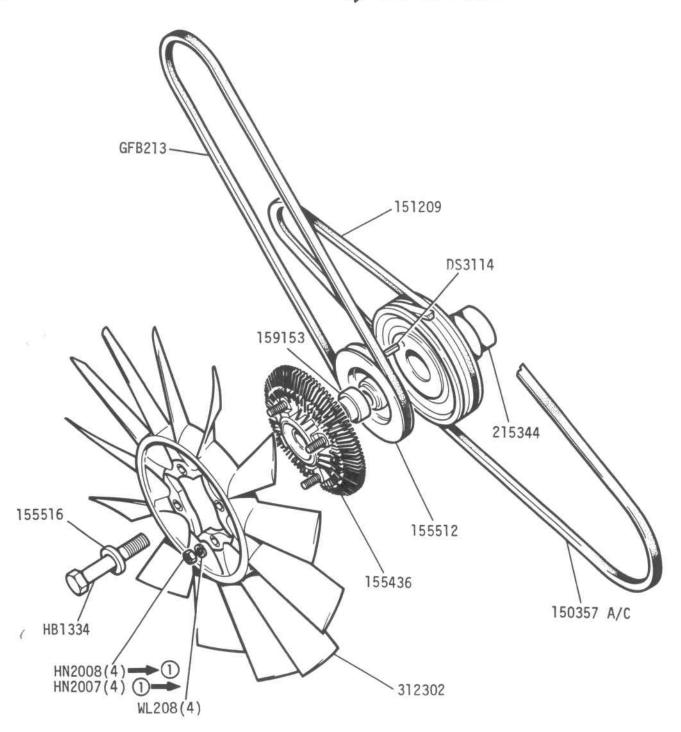


LD24662 LE112764

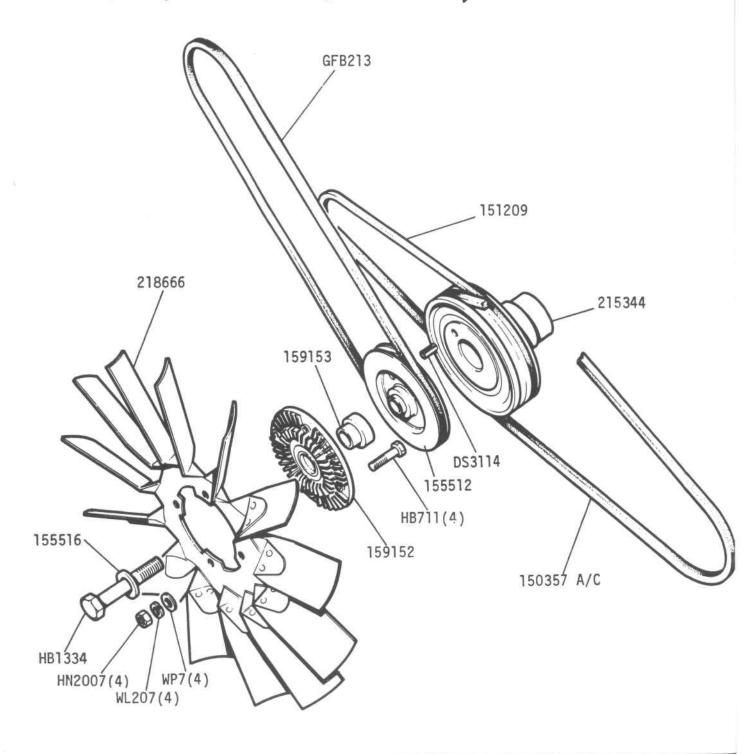

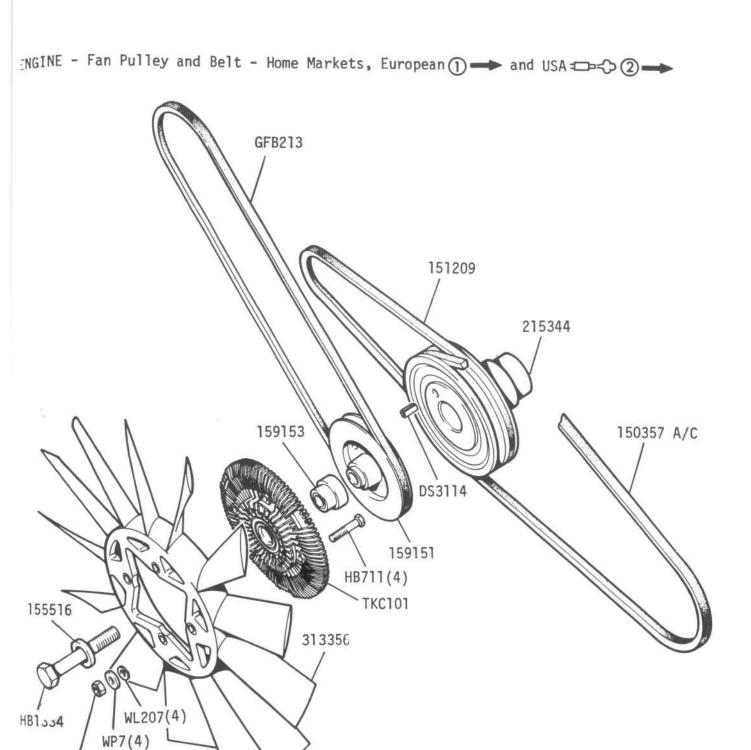

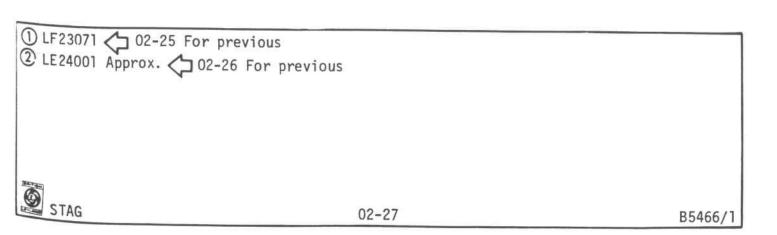


HN2007(4)

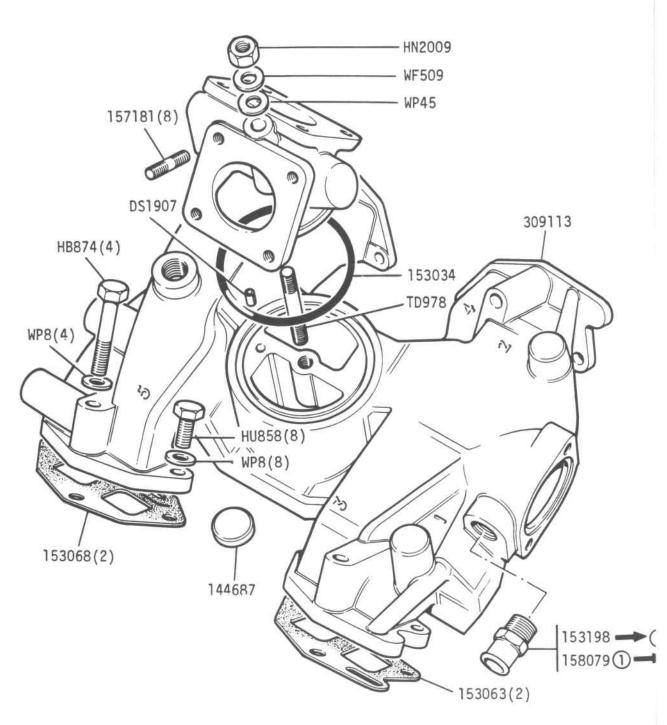


① LF2445

STAG 02-28 B5

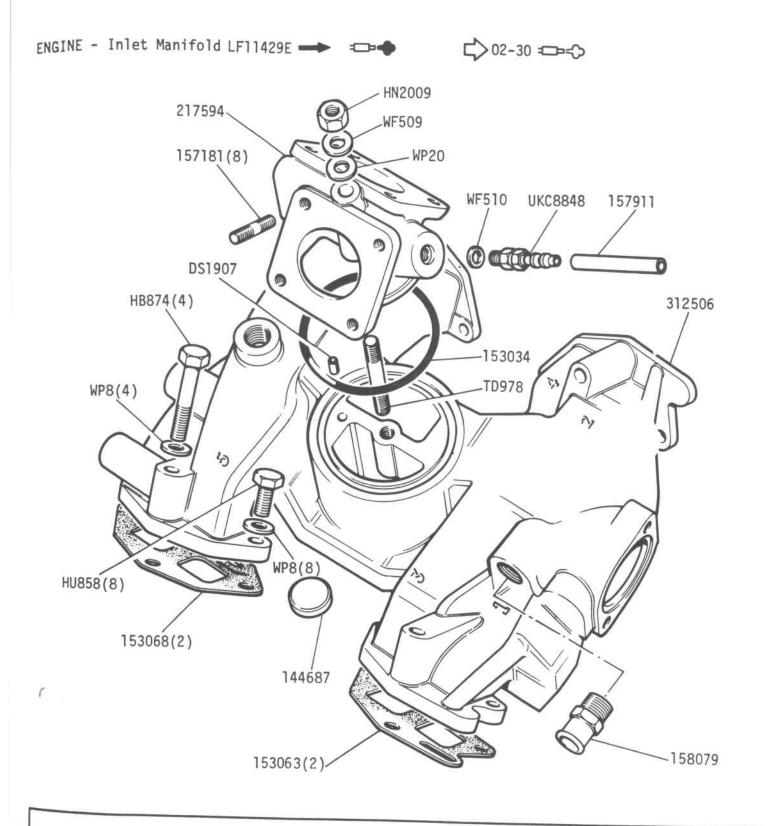



STAG 02-29 B5302/1

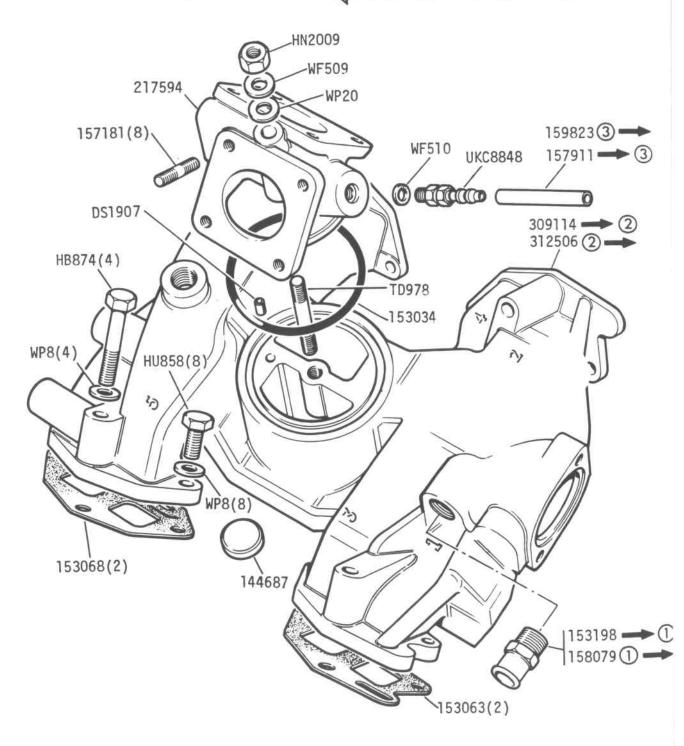


- ① LE5000
- 2 LE10,000E
- 3 LE20,000UE


NGINE - Exhaust Manifold → LF2217E → 02-32 For future

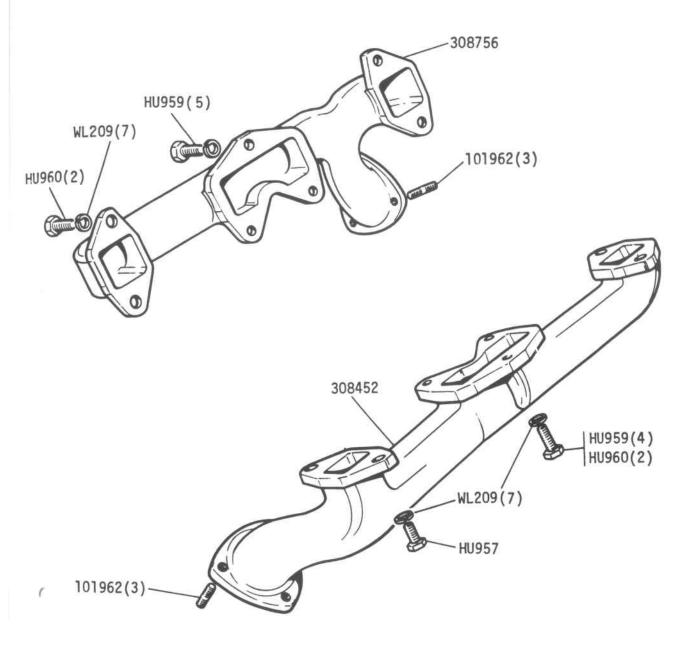

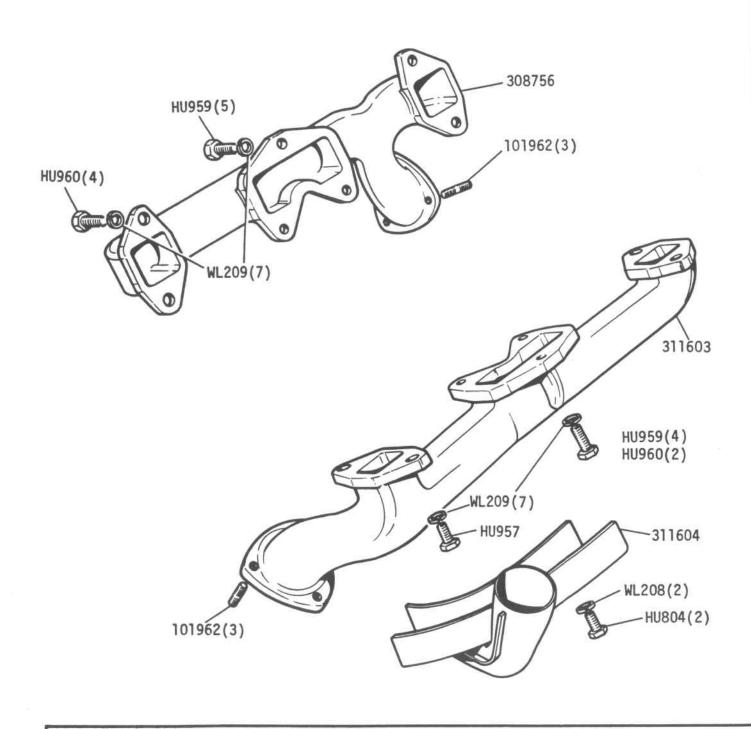


ENGINE - Alternator Mountings

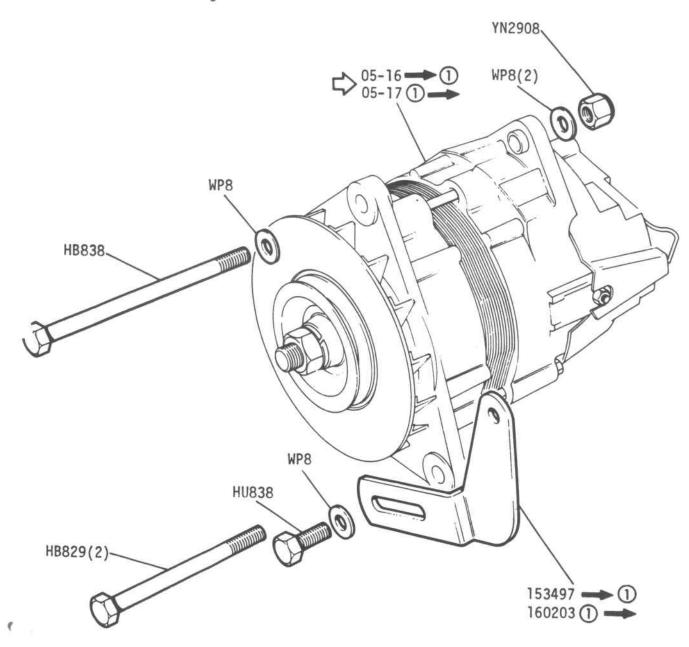

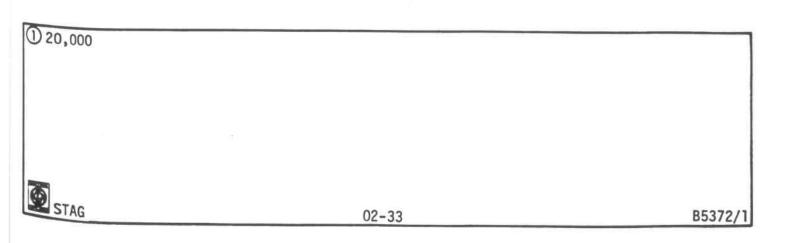

ENGINE - Air Conditioning Compressor and Clutch (special order only)

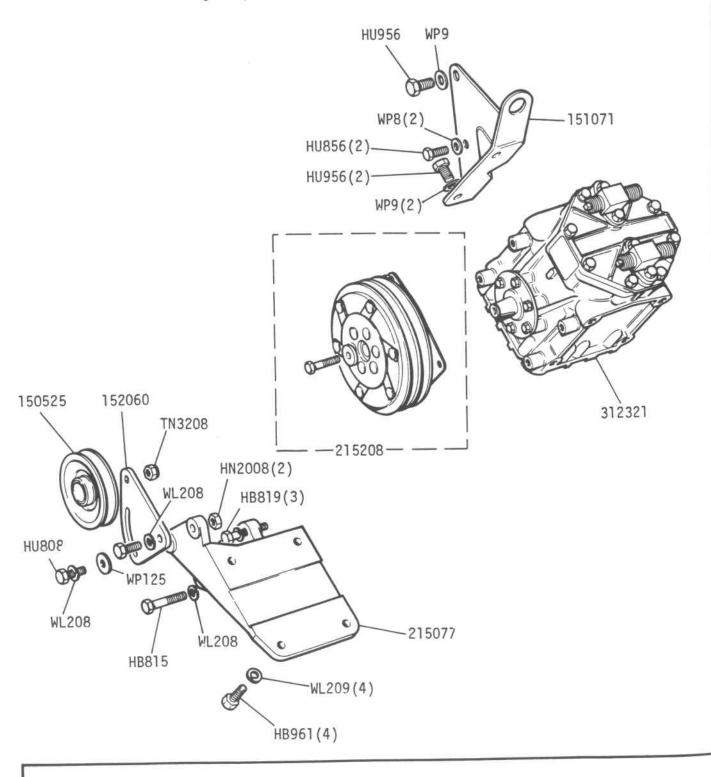


© S1

*

02-34

B

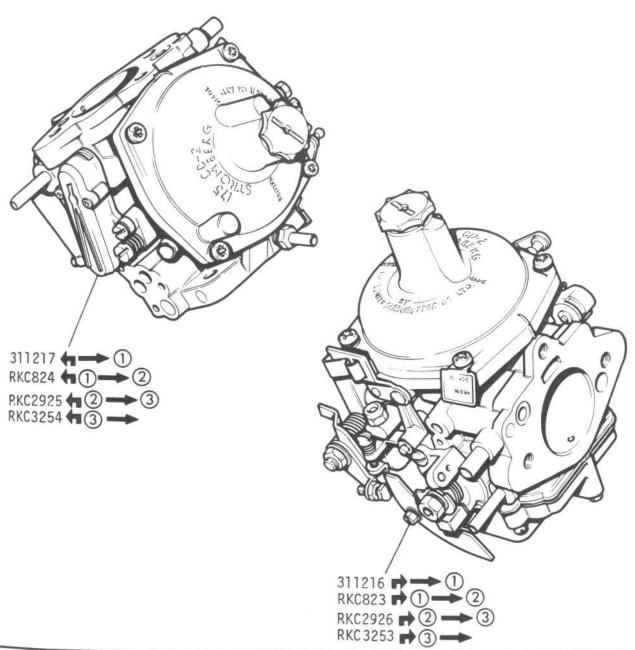


① LF23932

② LF40001

③ LF42914 (Tamper proof)


STAG

ENGINE - Carburettor Damper, Air Valve Spring, Needle ==

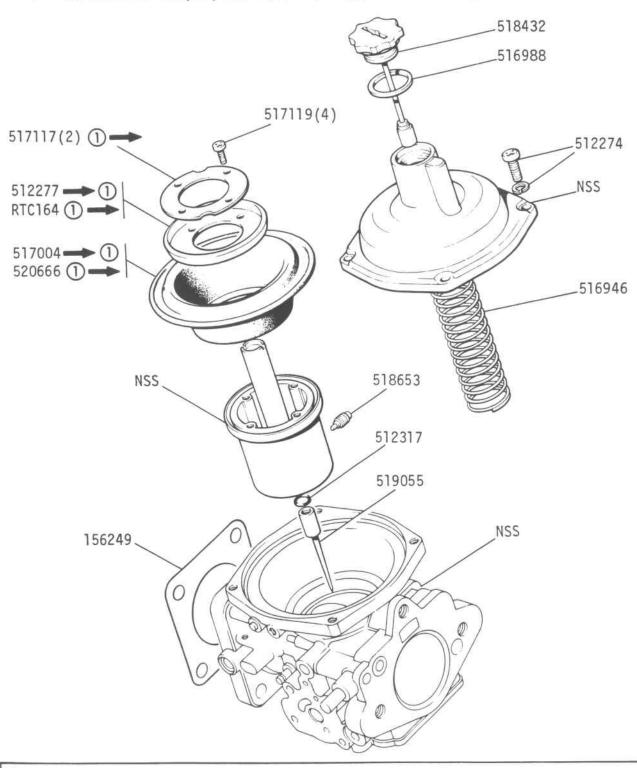

① LF23931

ENGINE - Carburettor, Throttle Lever, Temperature Compensator

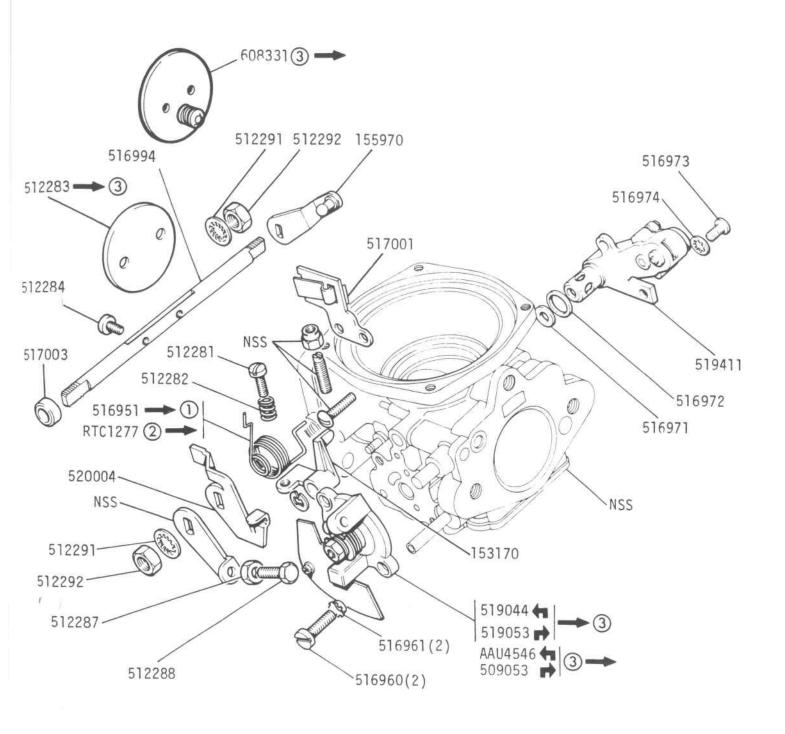





[©] Commission No. LF23932

³ Commission No. 40,001

ENGINE - Carburettor, Floatchamber, Needle Valve --

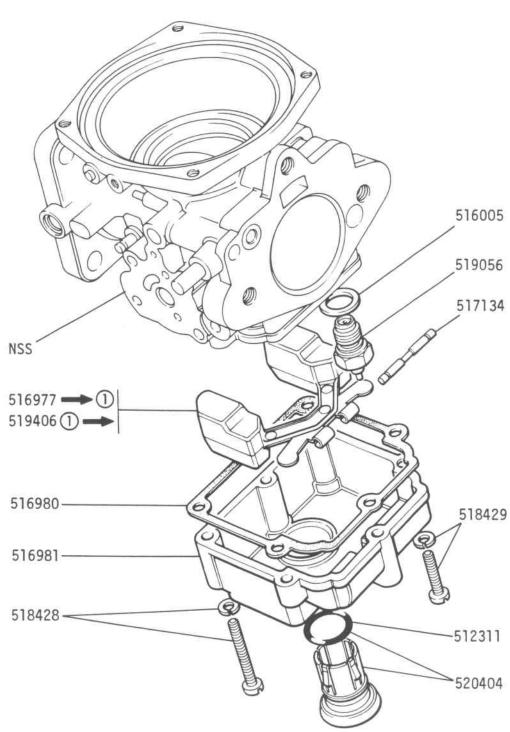



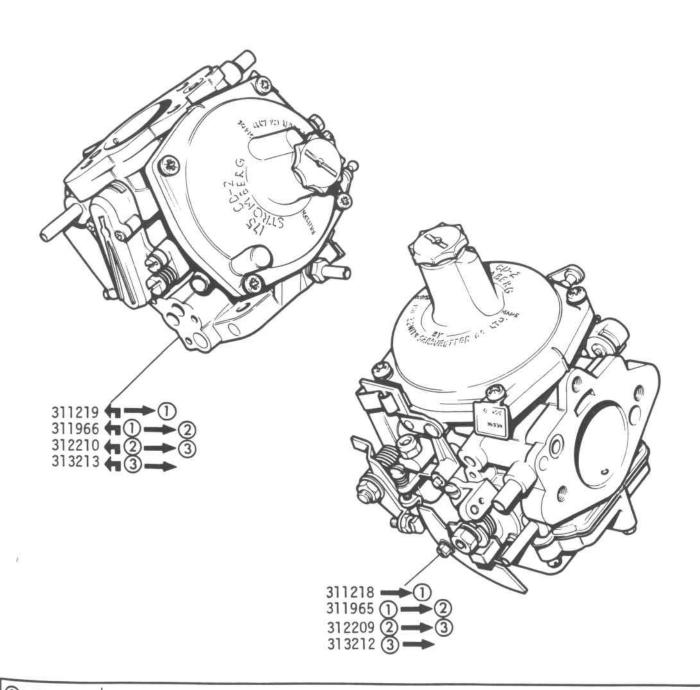

①LE947UE

②LE5001UE ③LE20001UE


-4 <-- 02-35 For ---

STAG

02-39


B2589/1


ENGINE - Carburettor Damper, Air Valve Spring, Needle =□-

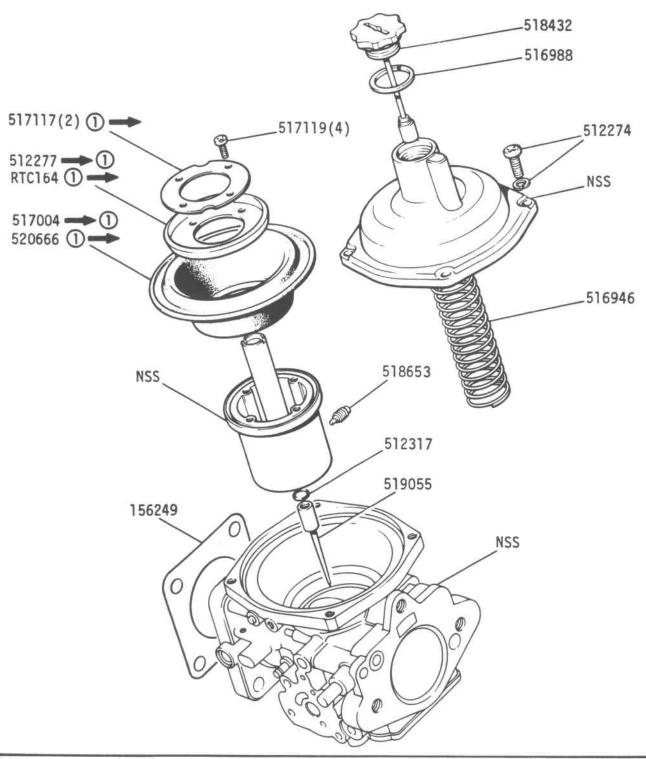


① LE20,000

NGINE-Carburettor, Throttle Lever, Temperature Compensator

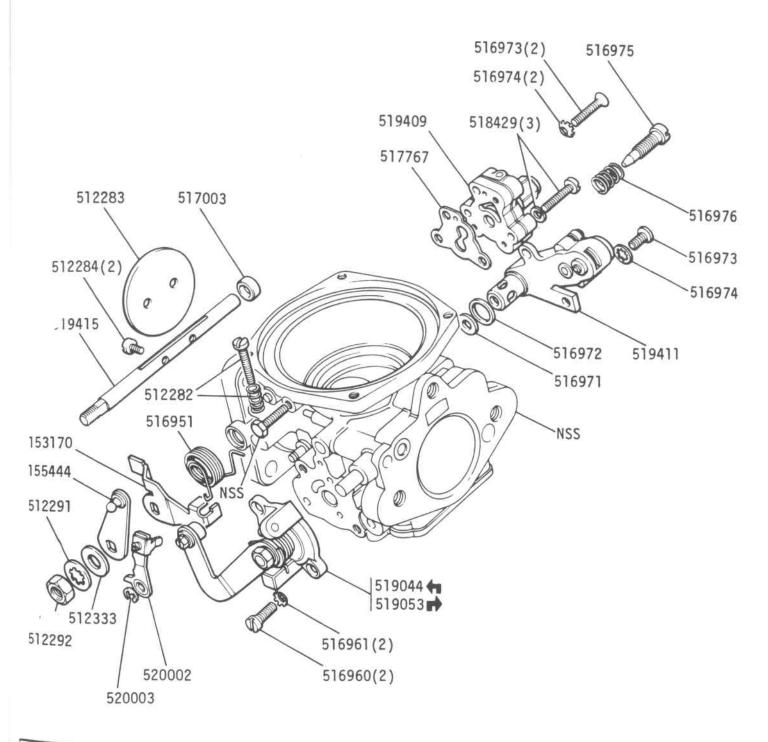


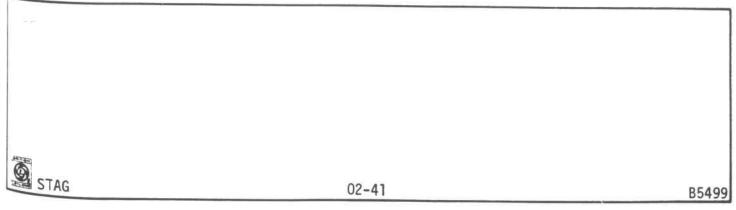


ENGINE - Carburettor, Floatchamber, Needle Valve ===

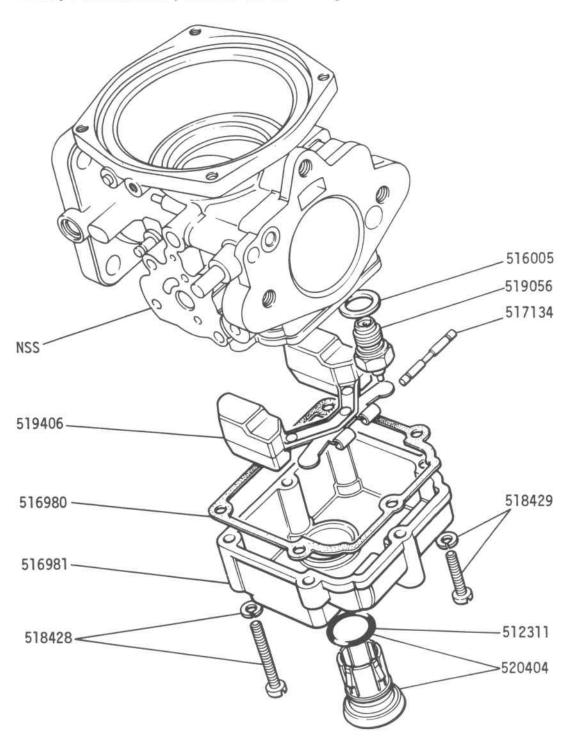


ENGINE - Carburettor gasket kits

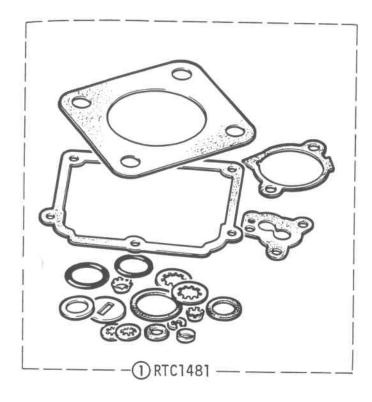

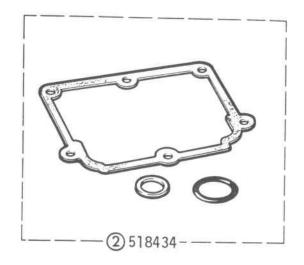



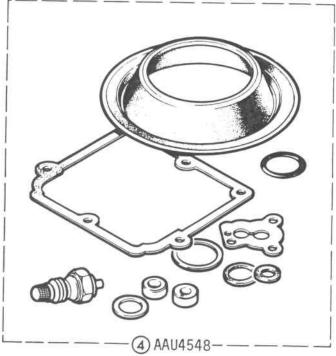


- ① Gasket pack
- ② Emission pack 12,000 miles
- 3 Needle pack
- 4 Emission pack 24,000 miles

STAG

02-43

B5999

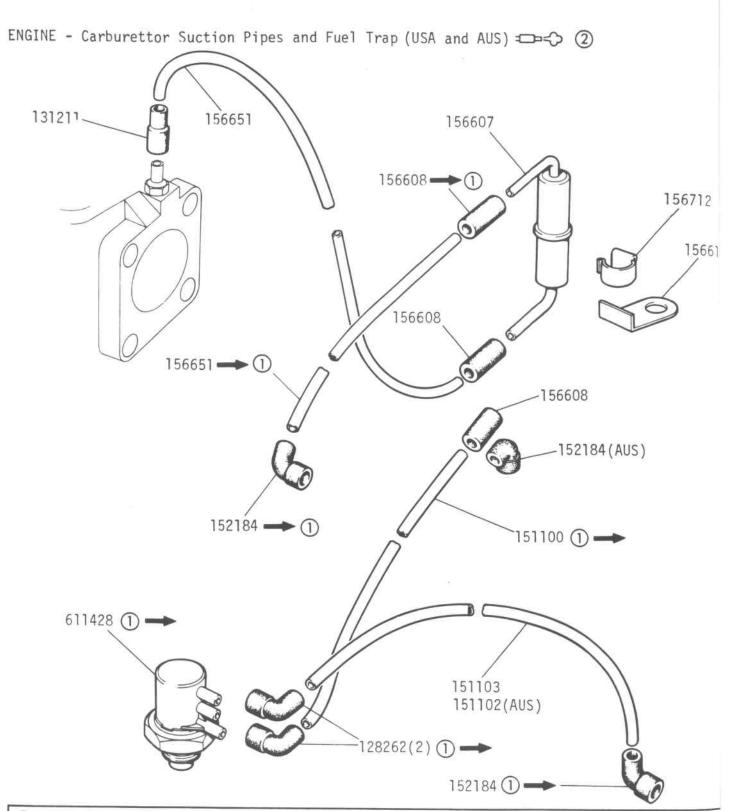



① LE12027


European type Suction Pipe details


2 - Adaptor Carbs 518425 Suction Pipe 147181 and 156657 Connector Elbow Suction Pipe 128262(2)


STAG

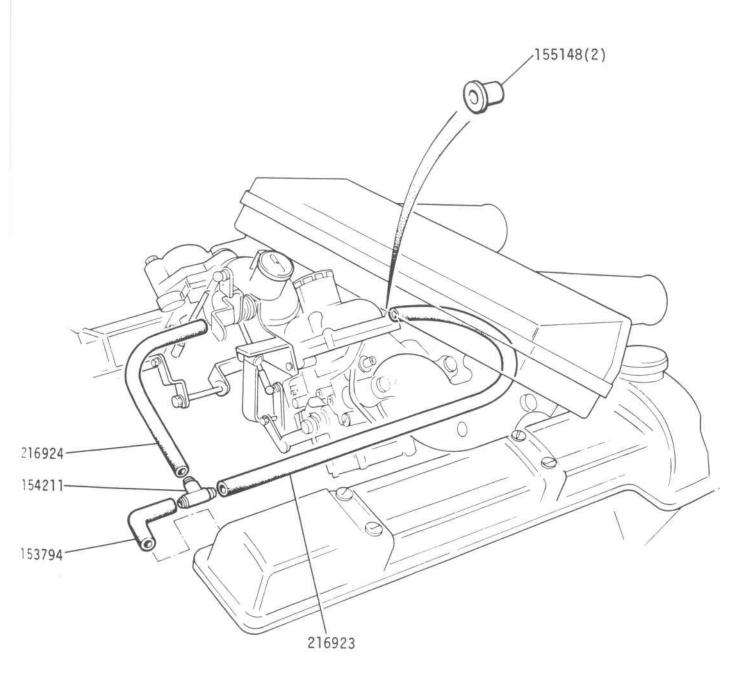

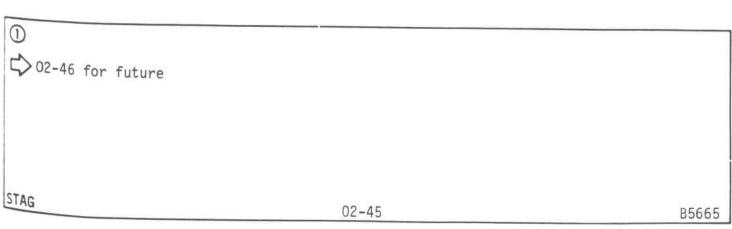


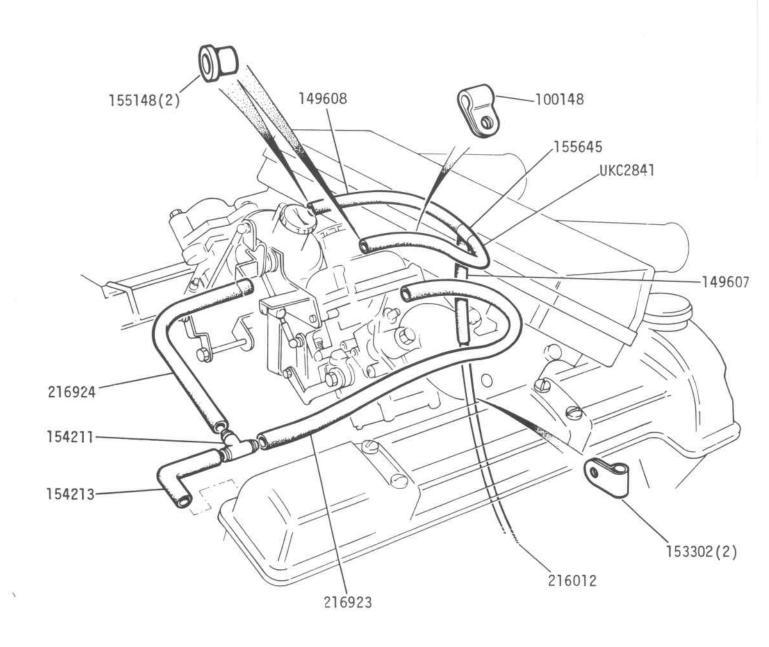


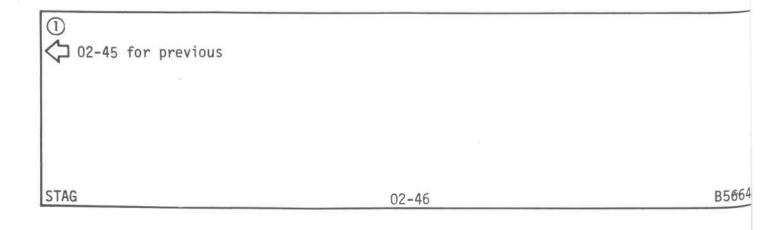


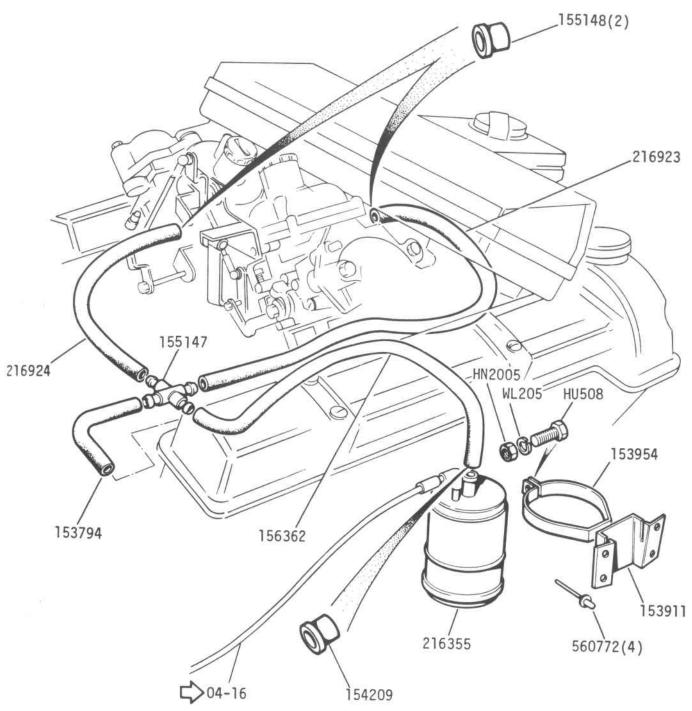


□ 02-48 and 02-49 for fu	ture	
TAG	02-47	B5666

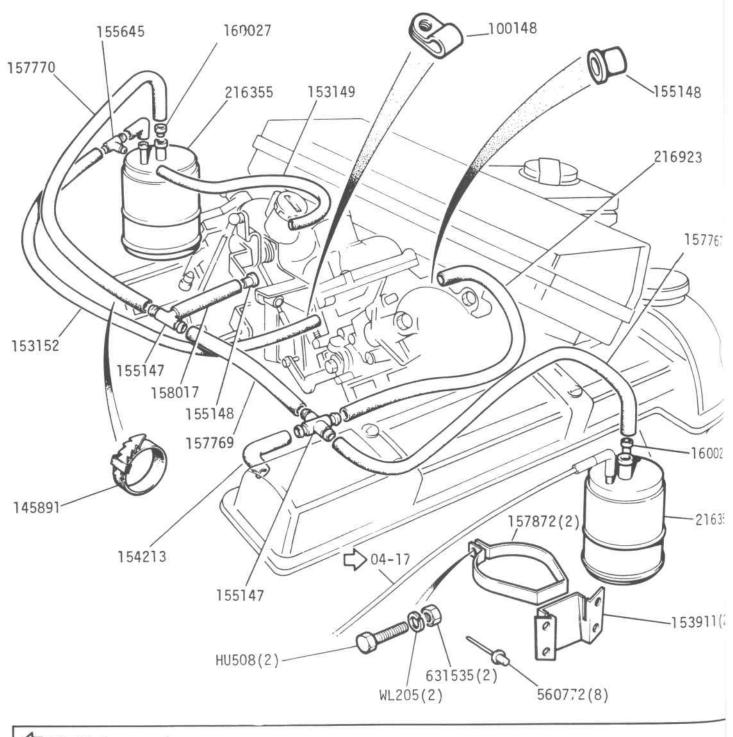

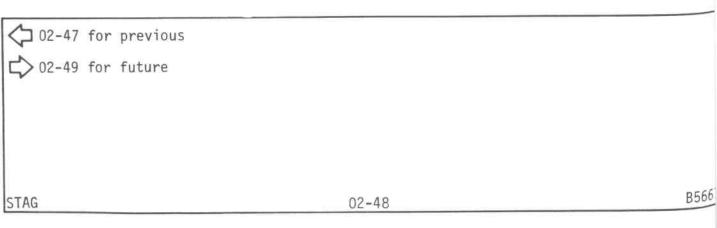

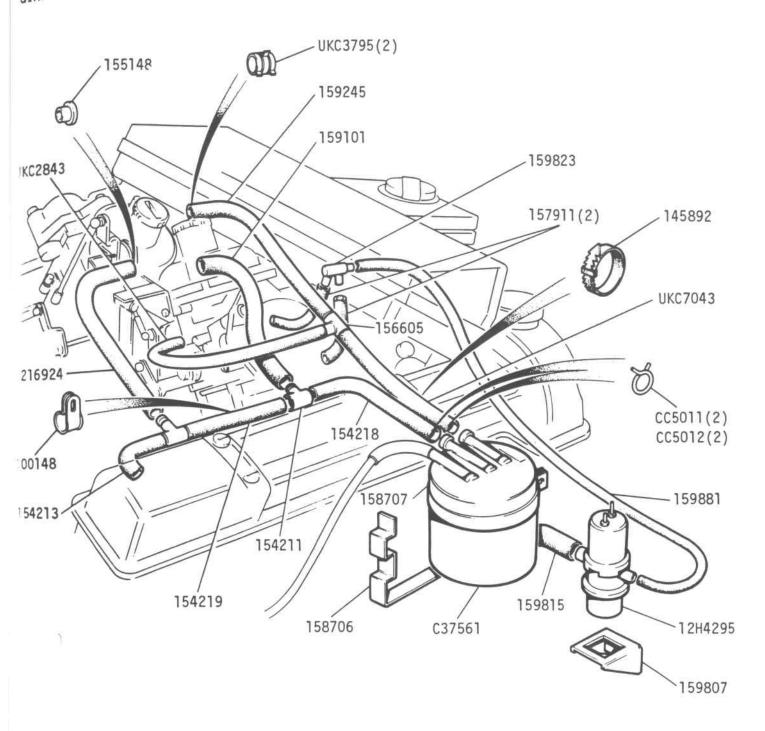

STAG 02-49

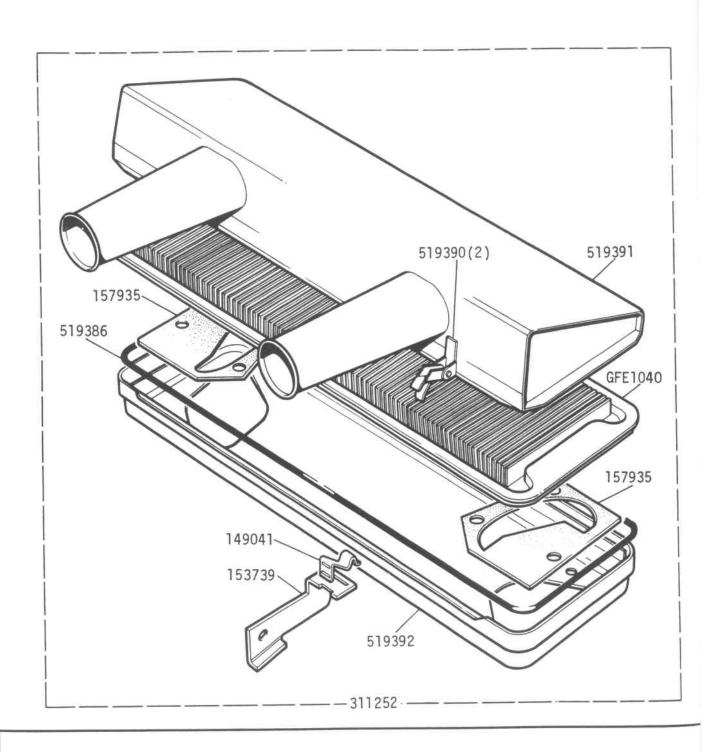



STAG


02-50

B53


ENGINE - Air Cleaner - All markets 1 \Longrightarrow 2 02-50 For previous

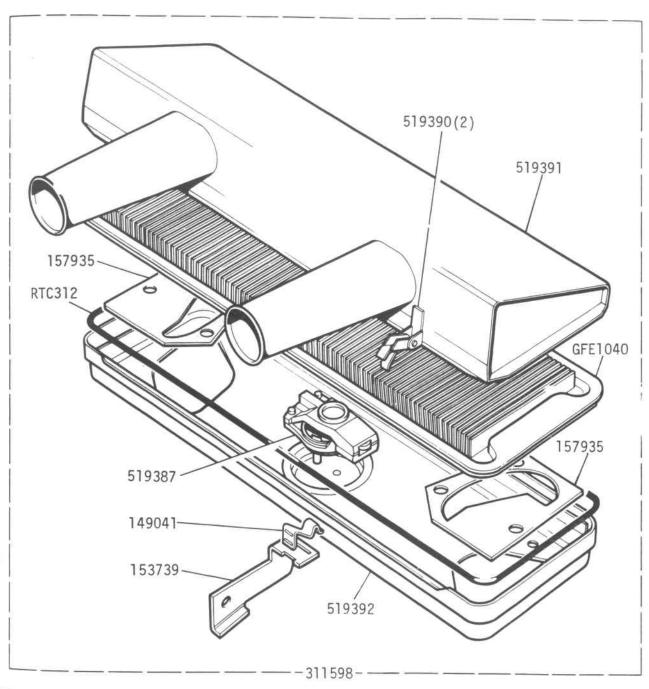

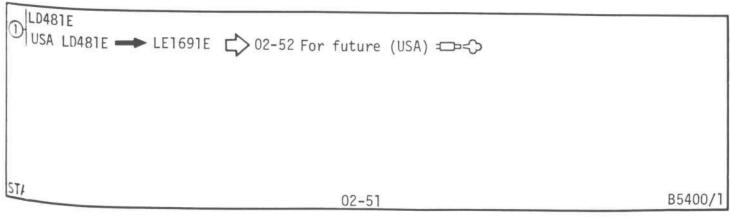


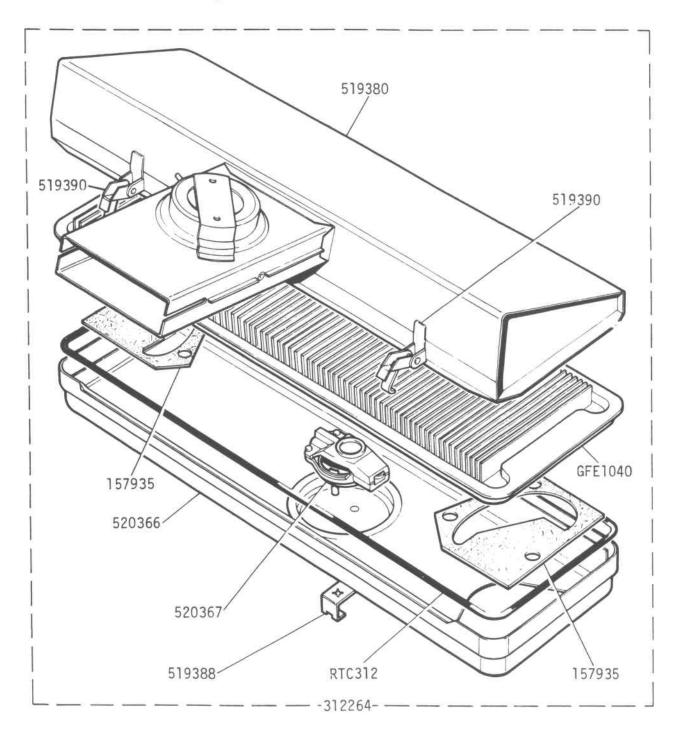


)	
02-52	B5400

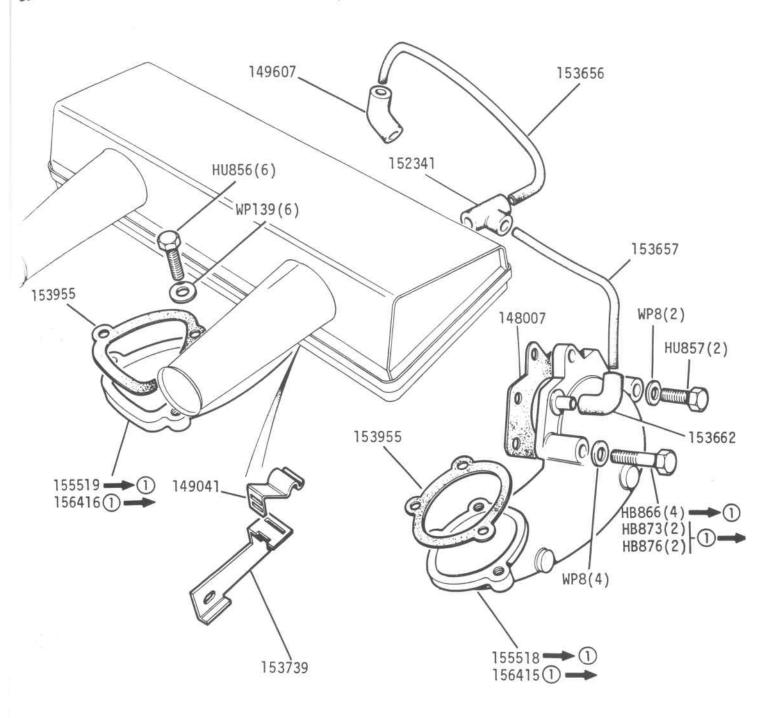


D Engine No. LD482E		
TAG	02-53	B5483

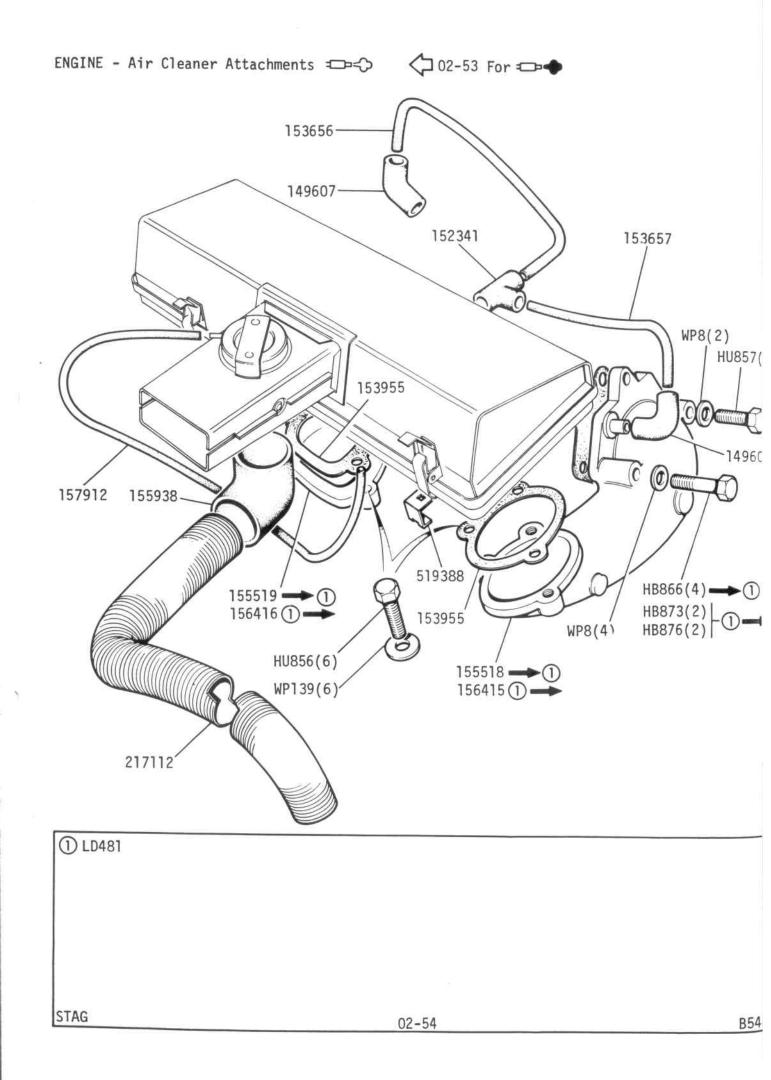


ENGINE - Clutch Cover

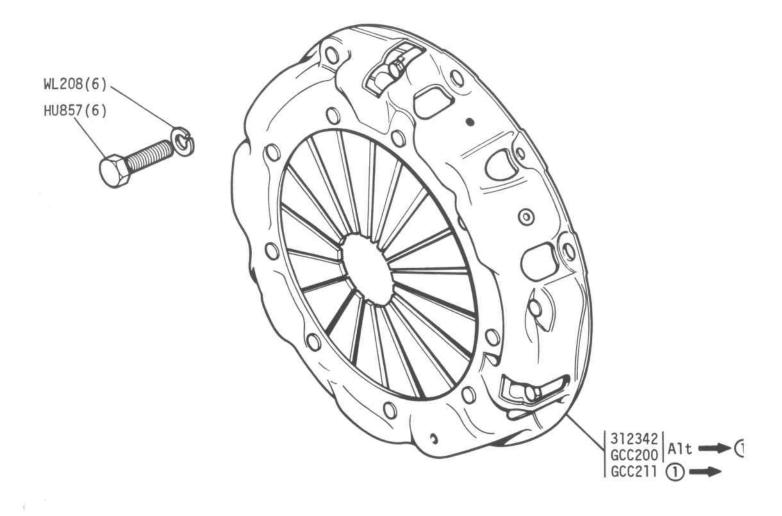


STAG	02-55	B5160/2
① LF42563		

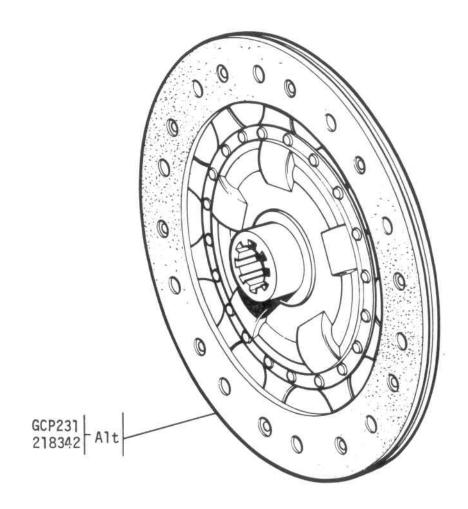


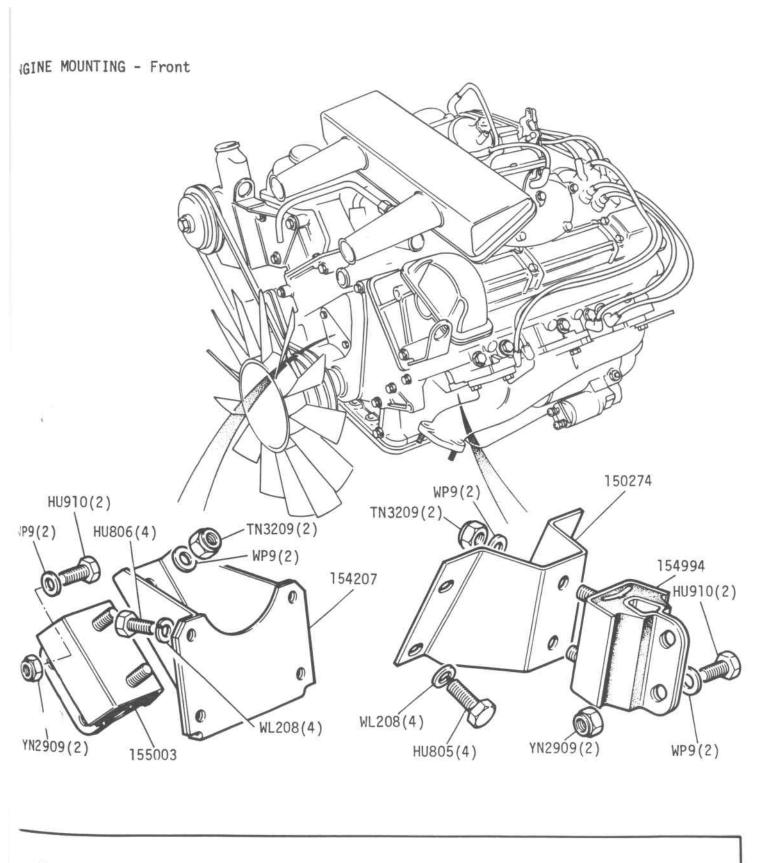


02-57

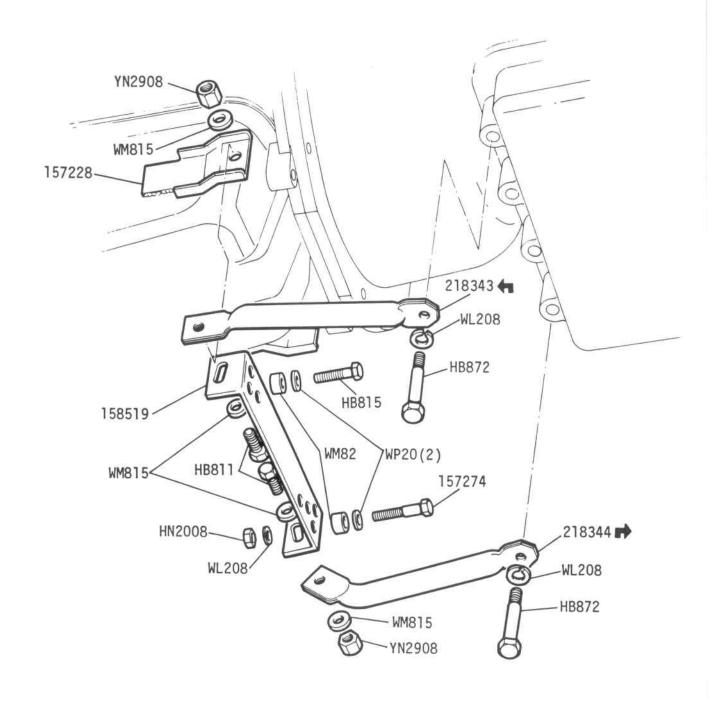

02-58

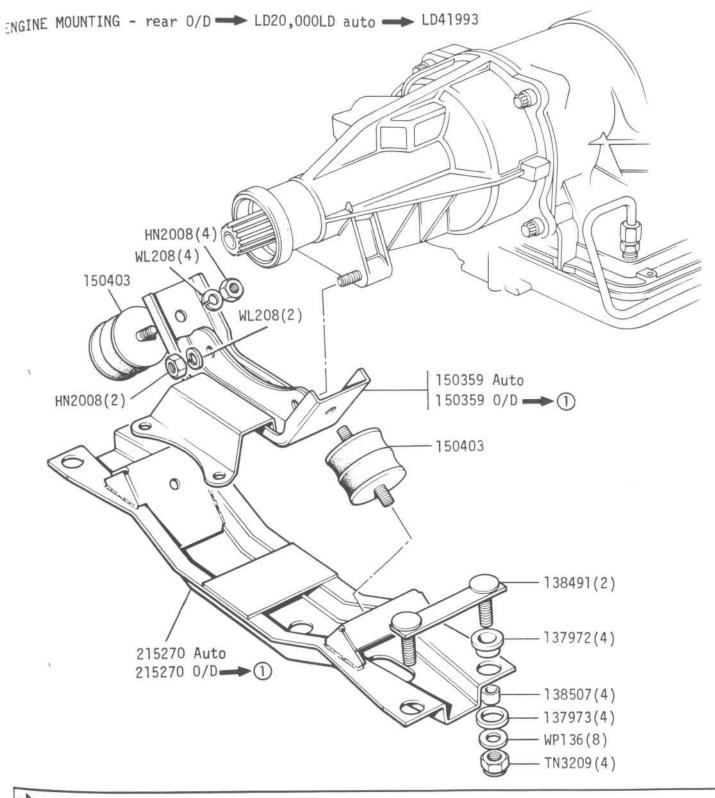


□ 02-61 type 65 auto LD41994 → 02-62 rear 0/D LD20,001 → 02-60 B5394/1

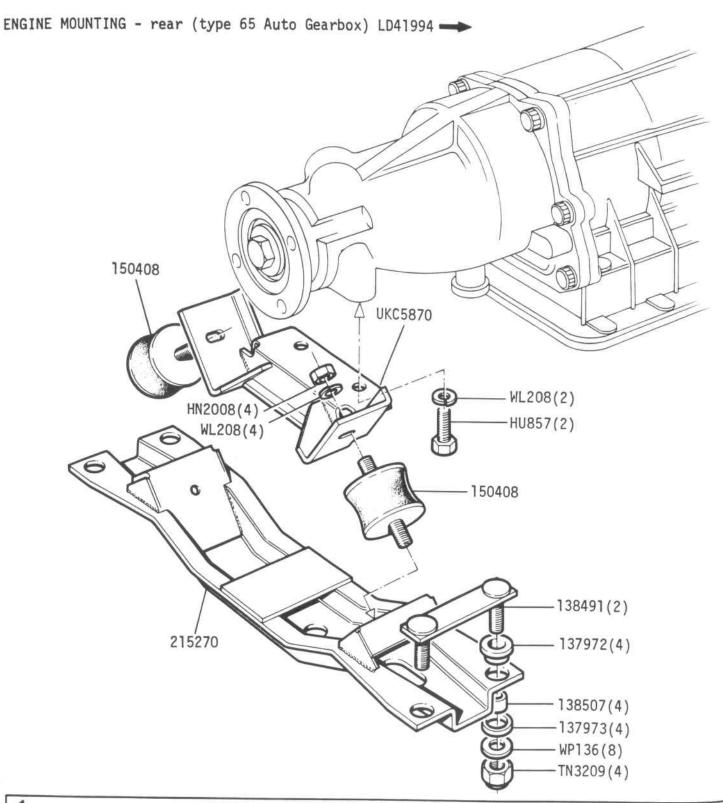


Q 02-60 for previous

STAG

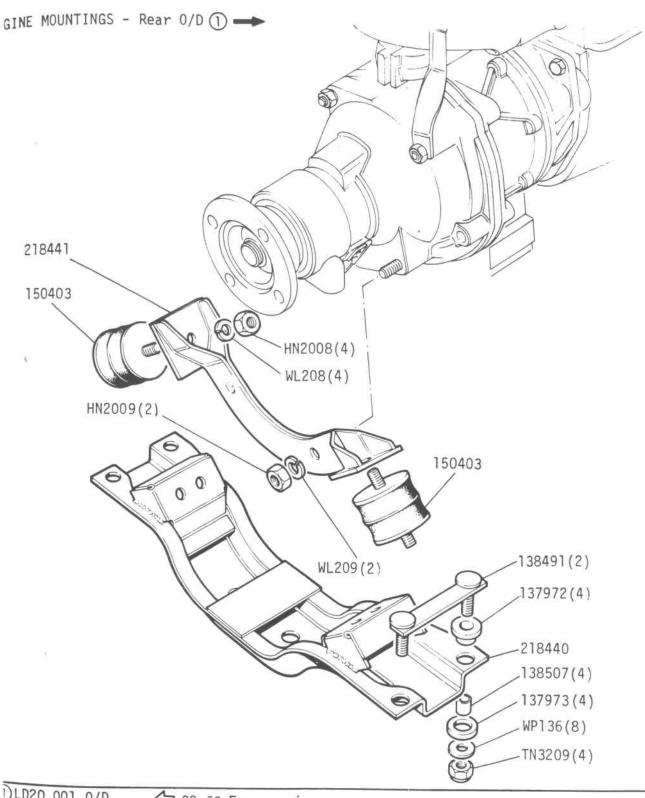

DLD20,001 0/D

O2-60 For previous

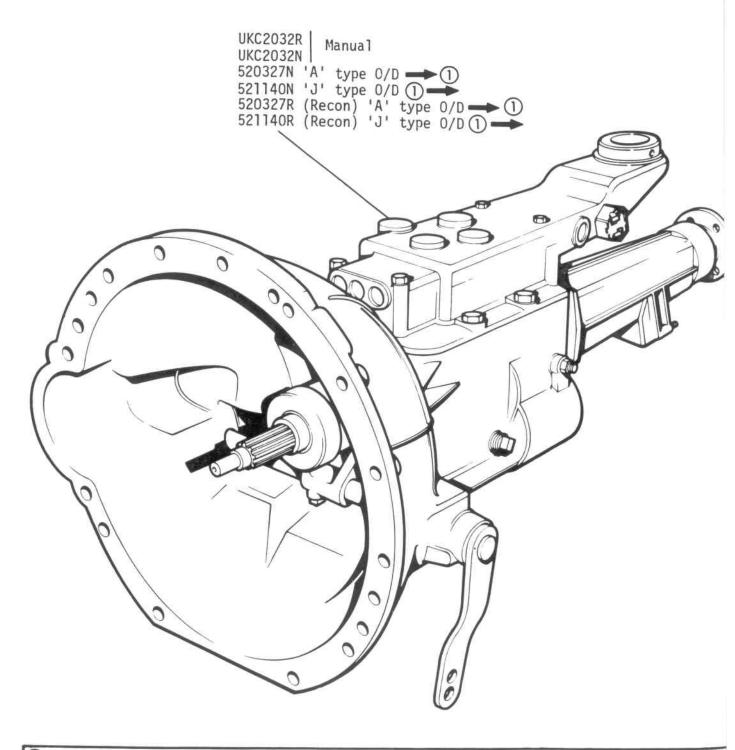


① LD21230


STAG

02-63

GEARBOX - Clutch Release Bearing and Operating Lever

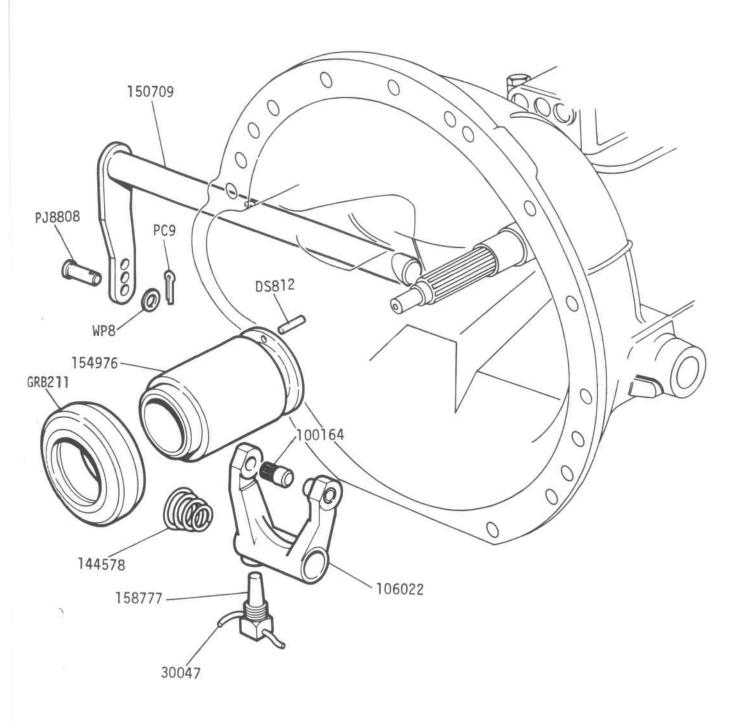



B5166
02-64

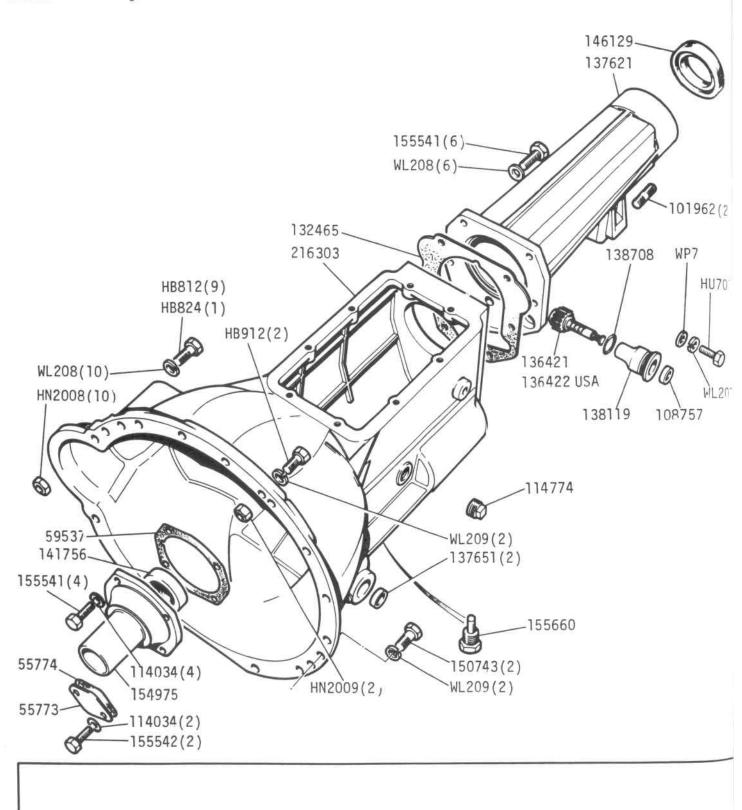


02-65

GEARBOX - Constant Pinion Shaft and Mainshaft Gears

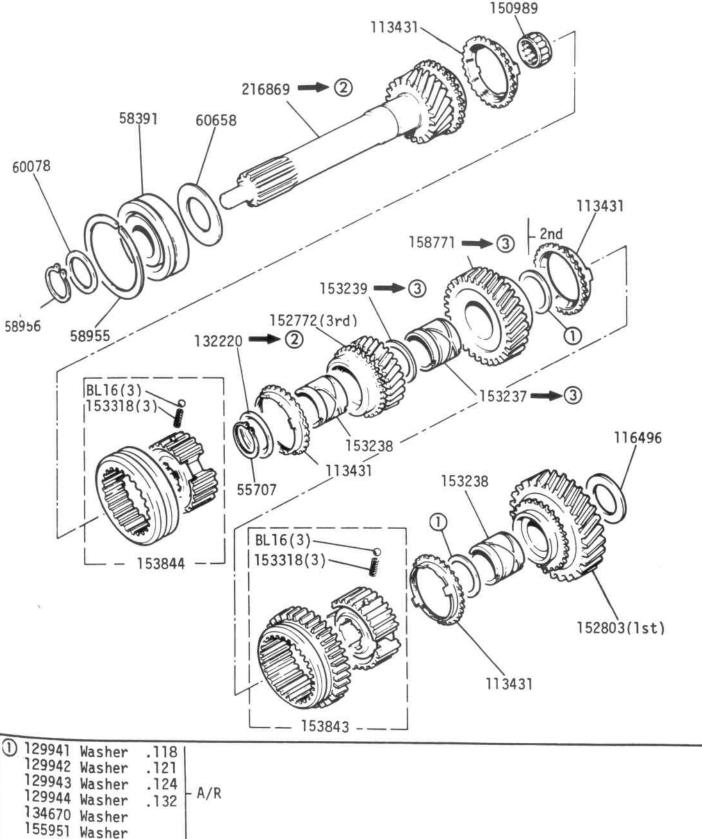


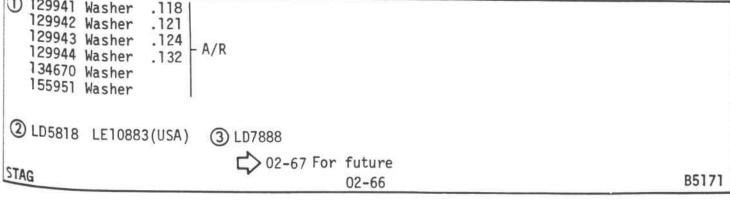

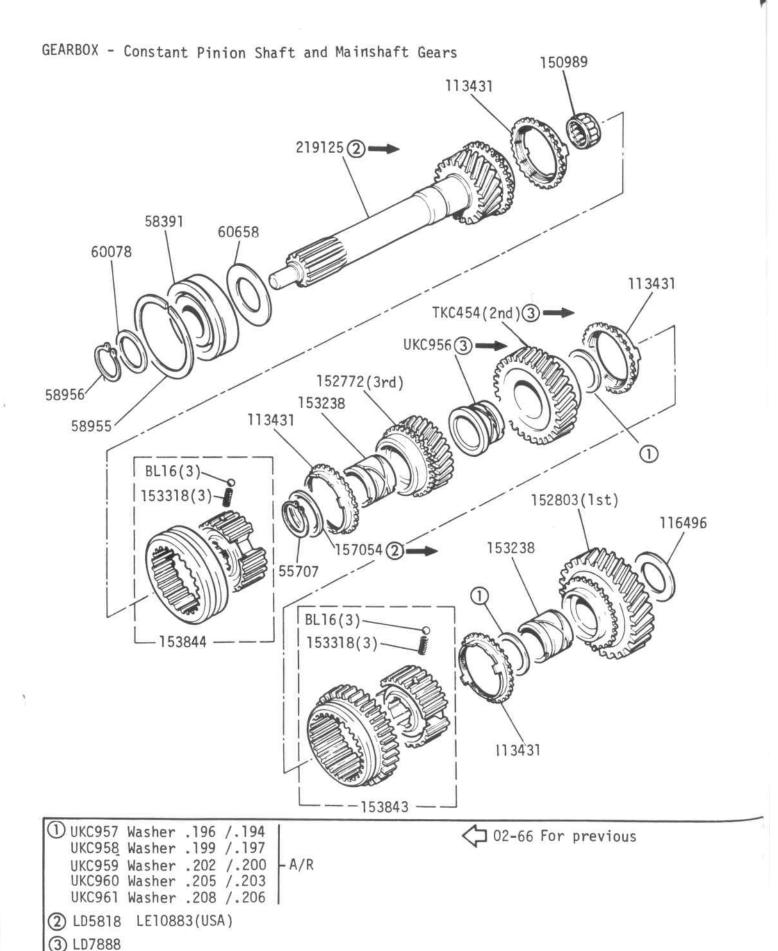


02-67

STAG

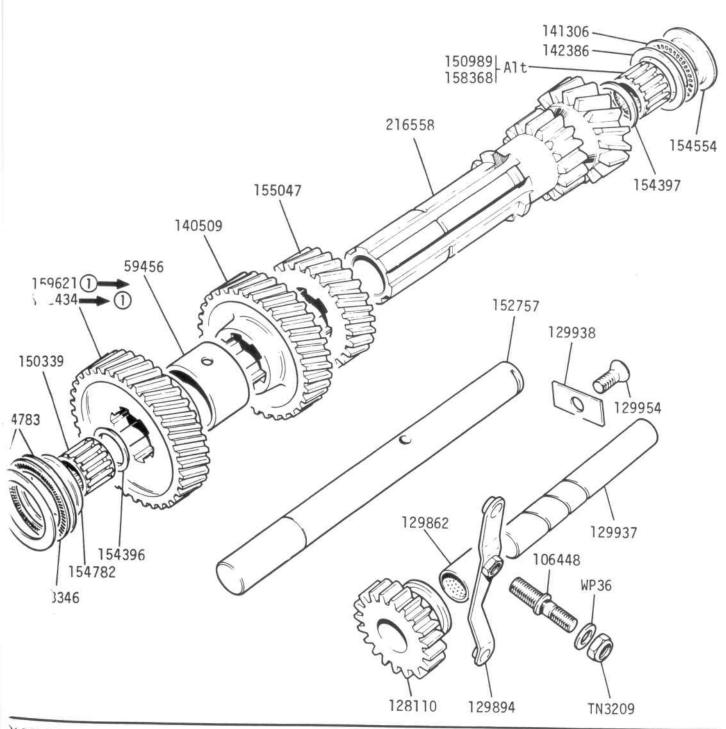


)LD5818 LE10883(USA)

4G 02-68 B5172

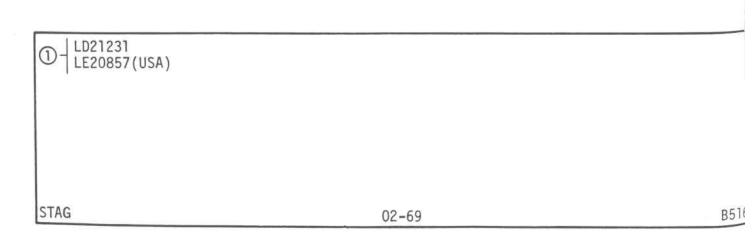


- 58949

514052

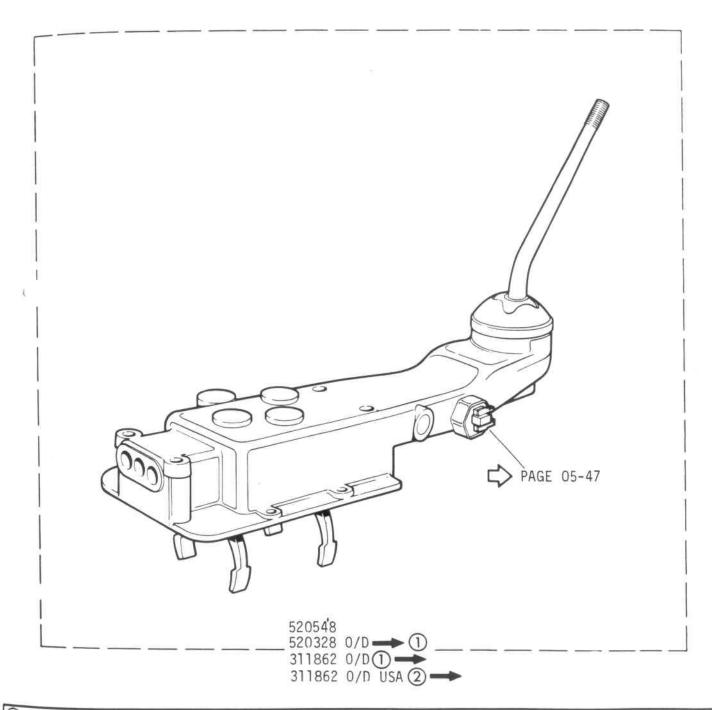

① LD21230 ② LE20857 STAG 02-70 B5173/1

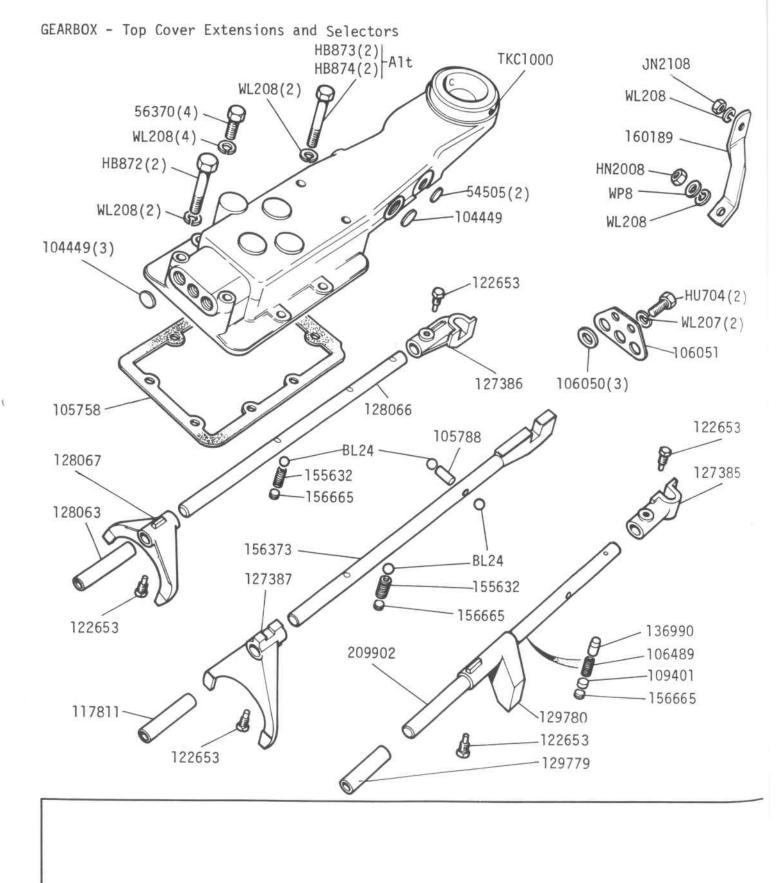


02-71


TAG


02-72


B5175/

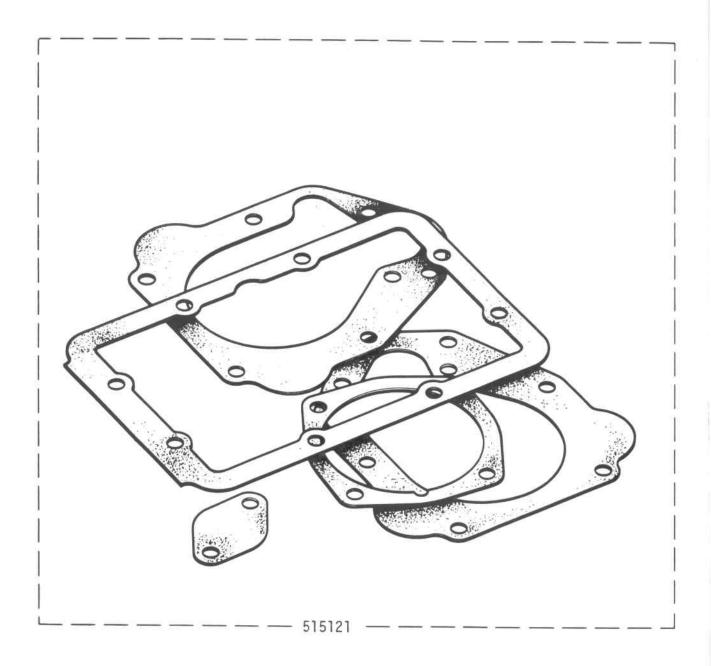



02-73

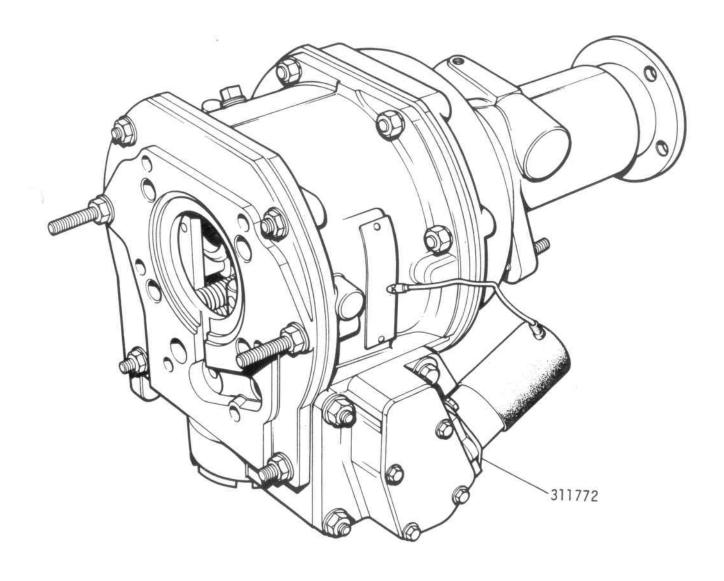


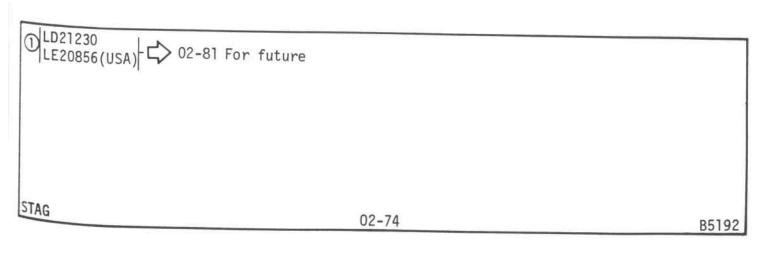


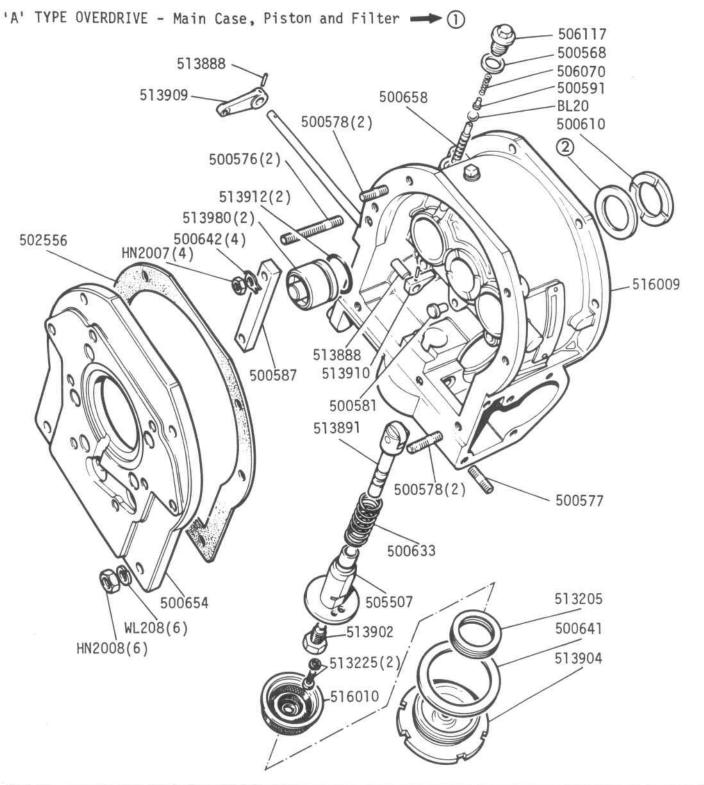


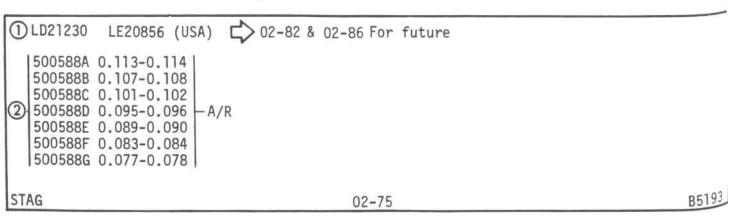

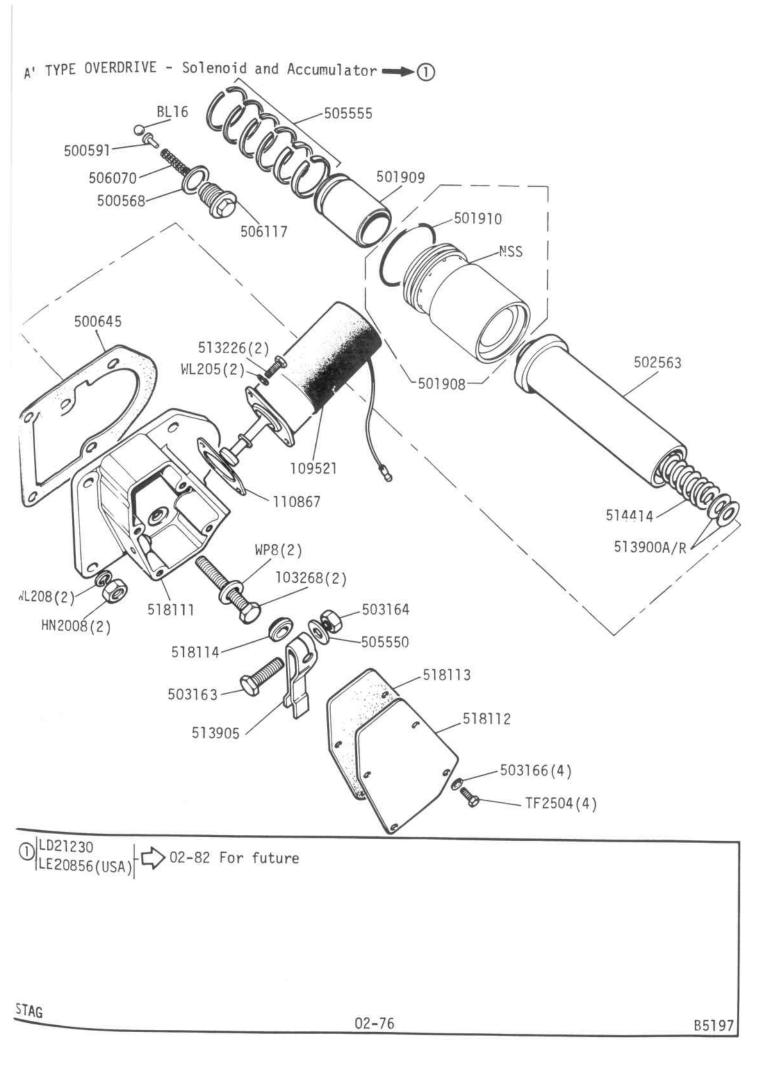

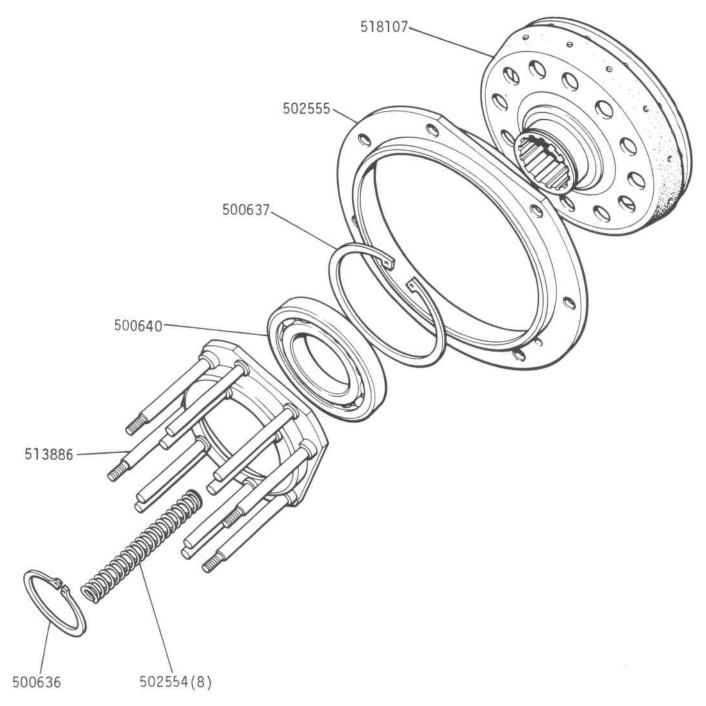


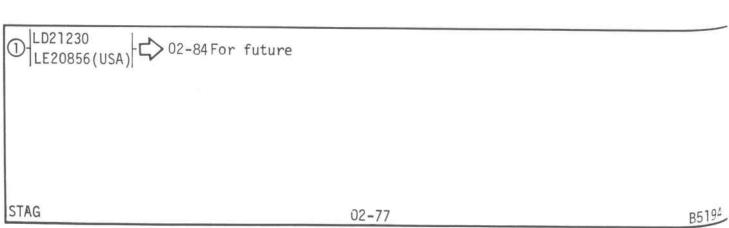

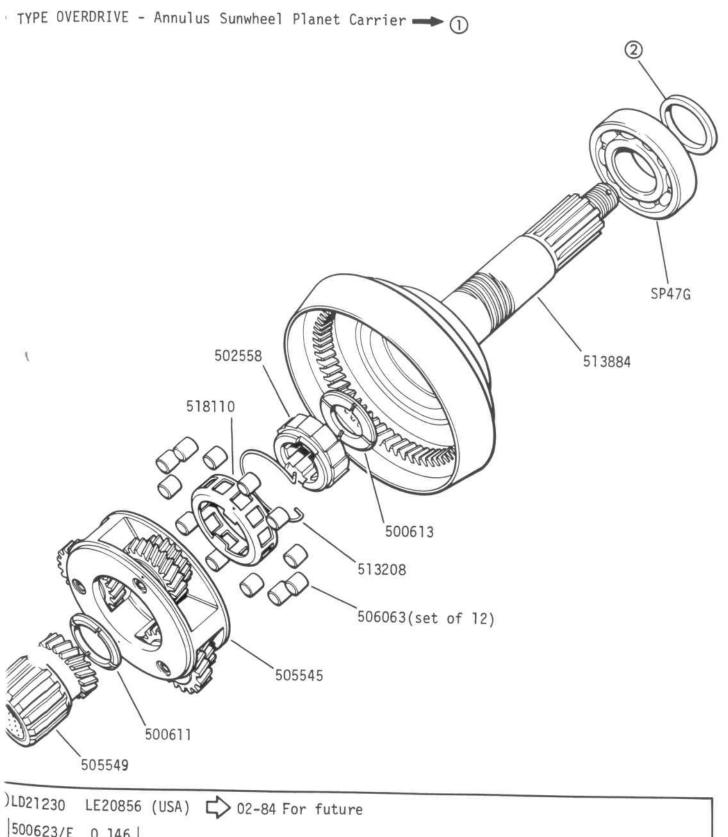


)LD21230	LESONES (USA)	A	
500623/E 500623/F 500623/G 500623/H 500623/J	0.146 0.151 0.156 - A/R	O2-84 For future	
AG		02-78	B5195




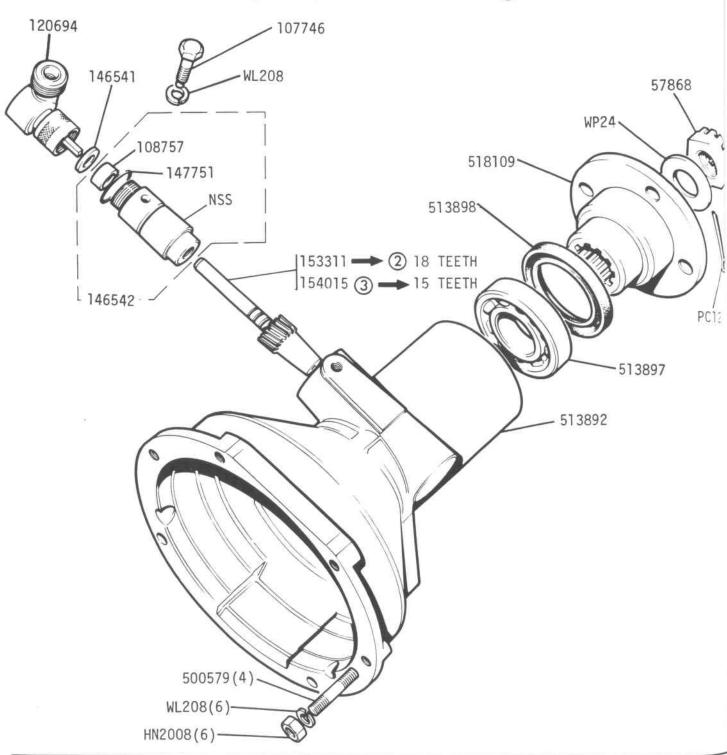


- ① LD21230 LE20856 (USA)
- ② LD220 except LD209, LD217 and LD218
- 3 LD209, LD217, LD218 and LD221

J' TYPE OVERDRIVE - O/D Assy ① →

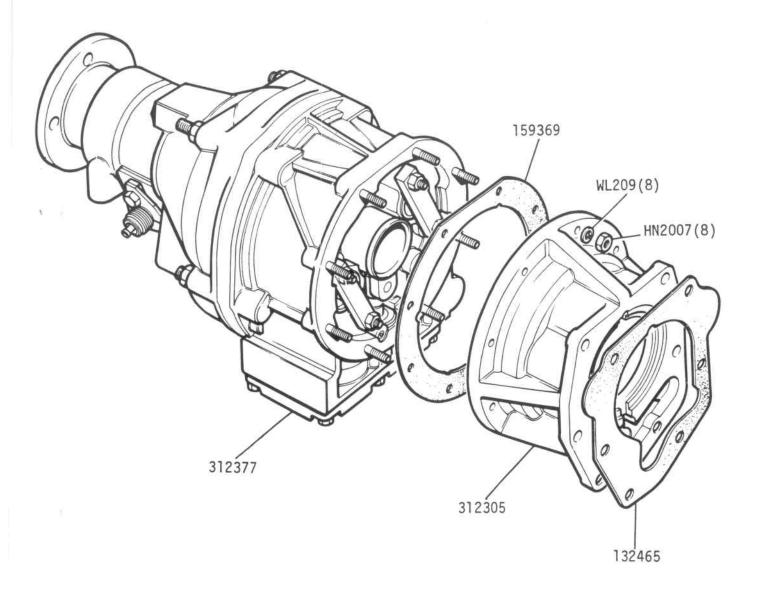

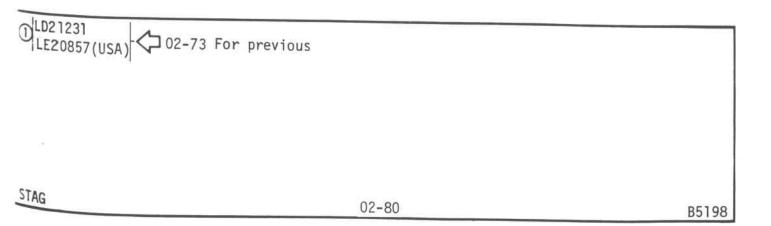

 
'J" TYPE OVERDRIVE - Main Case, Brake Ring and Cam. 1 ② NKC58(Set of 4) NKÇ10 NKÇ86 NSS ②RTC553(Set of 6) (2)NKC61 500587(Set of 2) O NKC99 NKC21 520977(4) 159505 NSS 159503 NKC76 NKC23 NKC11-NKC95 NKC94 NKC93 NKC24-KW316 137308 ② NKC57(Set of 2) Q_NKC67 NKC96 159369 NKC70(8)-NKC97 NKC108 NKC69(8) NKC53 NKC54 NKC64(6) _NKC107 NKC41 NKC110(6)



STAG


02-81

ERDRIVE UNIT - Main Case Service Kit 1

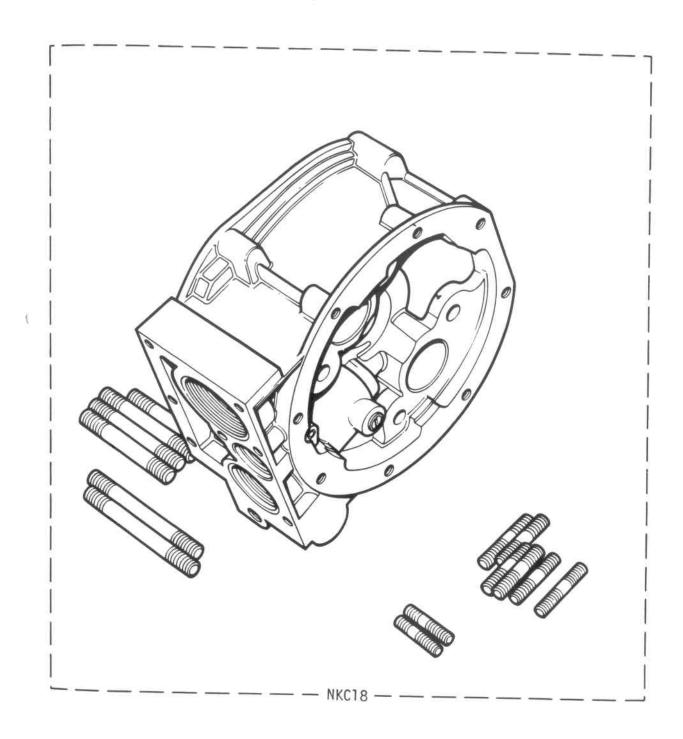

)LD21231 LD20856(USA) 02-74 and 02-75 For previous


TAG

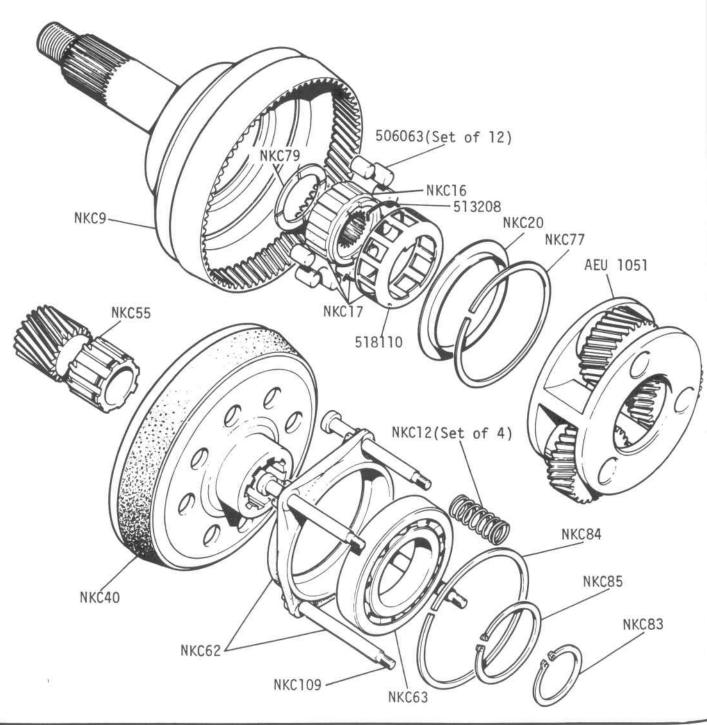



02-83

B5201/


'J' TYPE OVERDRIVE - Rear Case, Speedo, Gears, Flange.

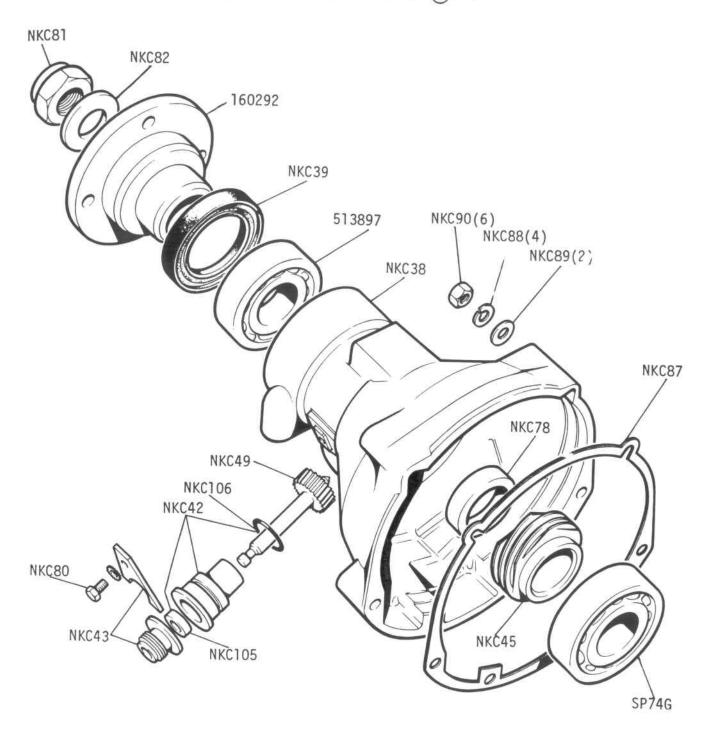

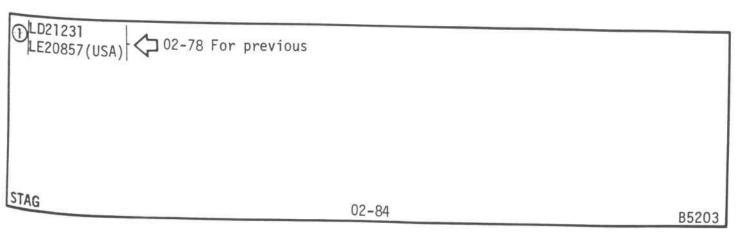


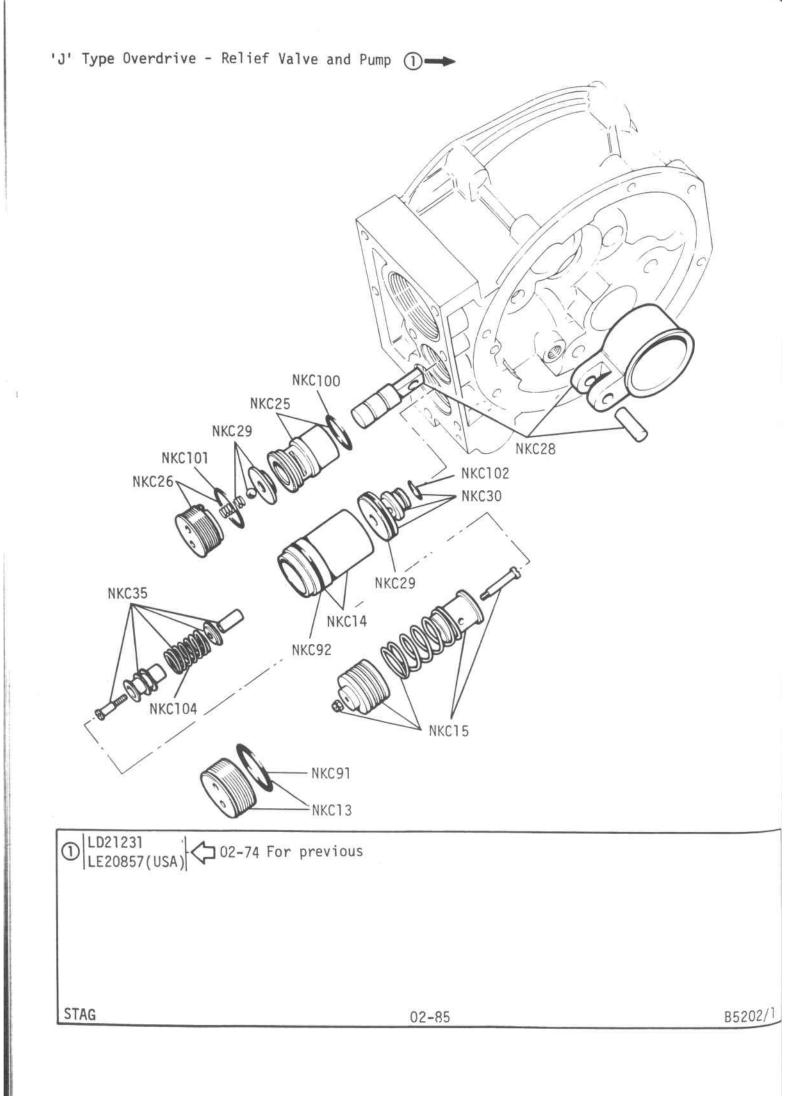


UTOMATIC GEARBOX TYPE 65 - Gearbox Unit, Dipstick, Heatshield 1

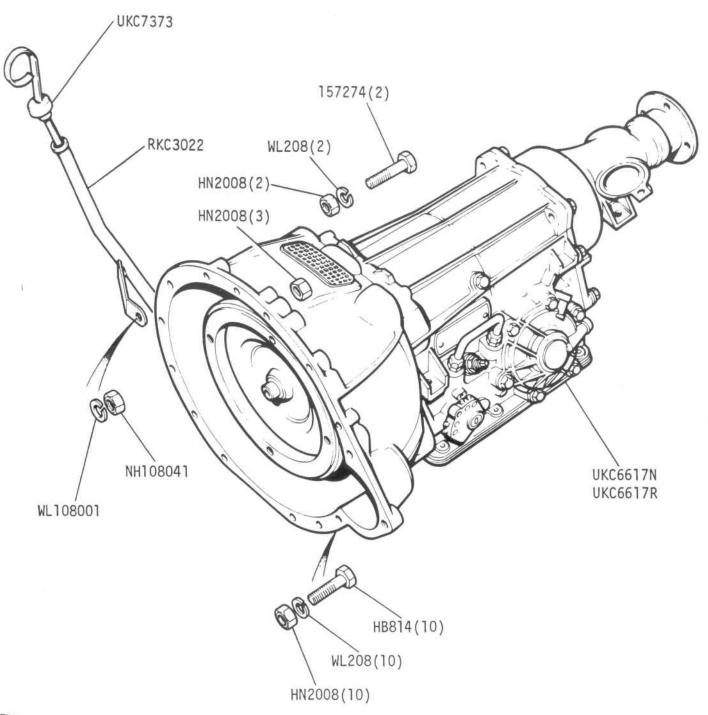


5. 15	
03-02	B5981

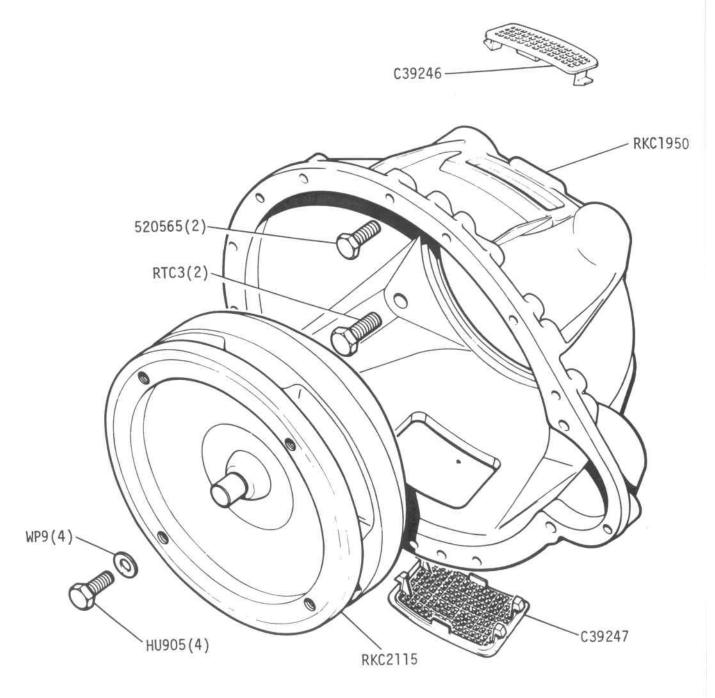

① LD41994			
STAG	A61	03-04	,

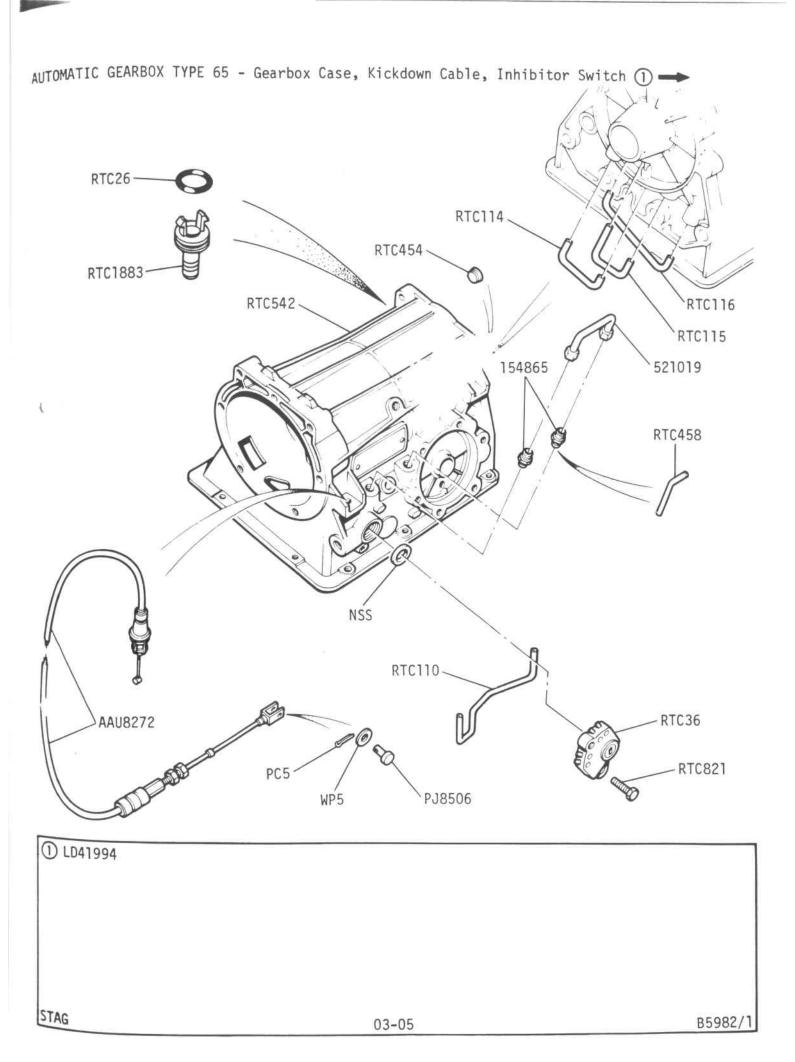


AUTOMATIC GEARBOX TYPE 65 - 0il Pan - Parking Details 1

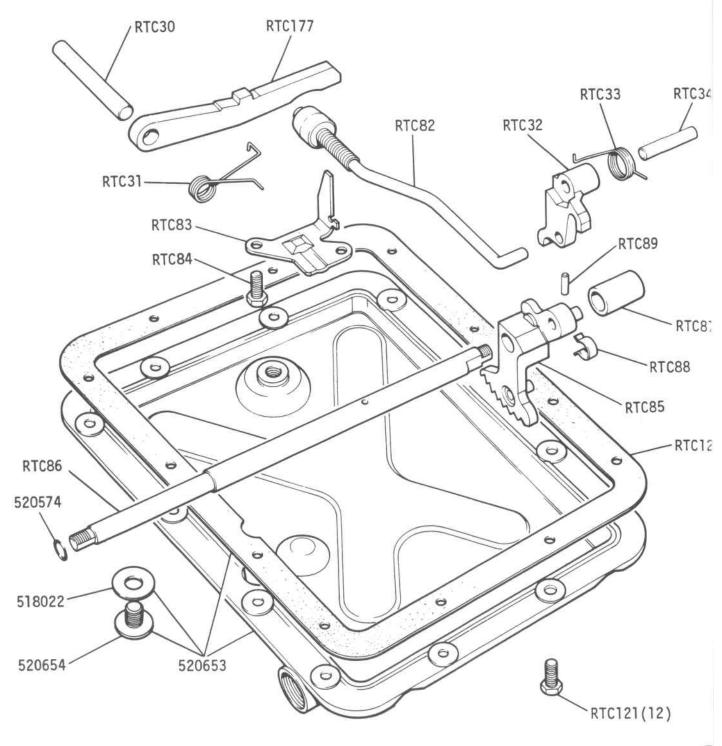


① LD41994		
CTAC	22.27	F
STAG	03-07	

AUTOMATIC GEARBOX TYPE 65 - Front Servo and Brake Band 1) -

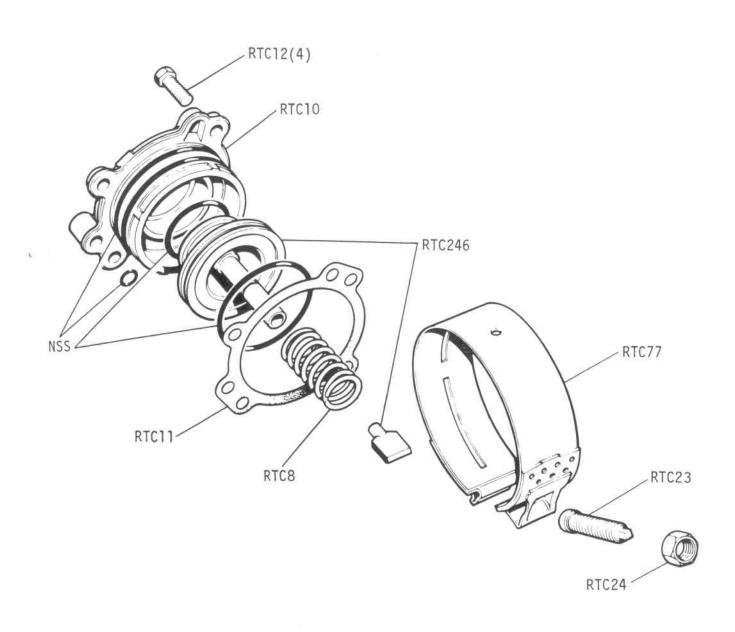


① LD41994		
STAG	03-08	B5984

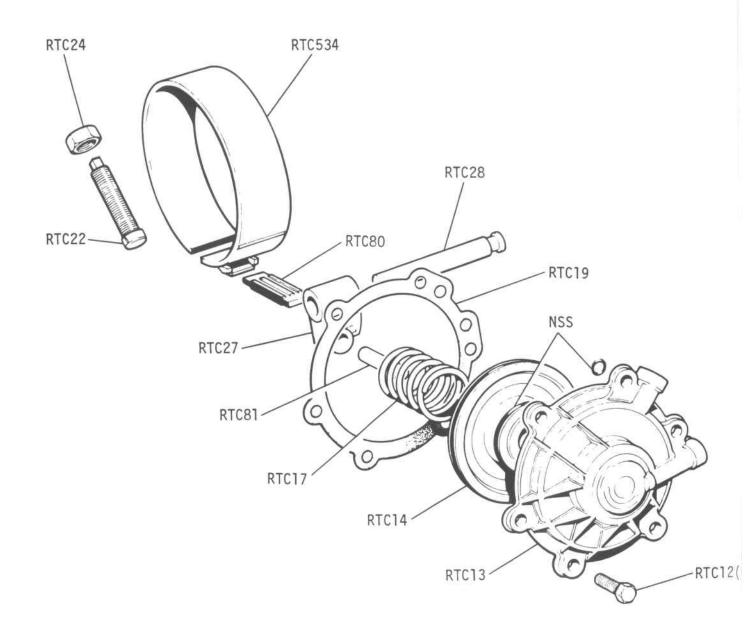


① LD41994

STAG 03-10 B59

AUTOMATIC GEARBOX TYPE 65 - Front Clutch, Input Shaft 1) -

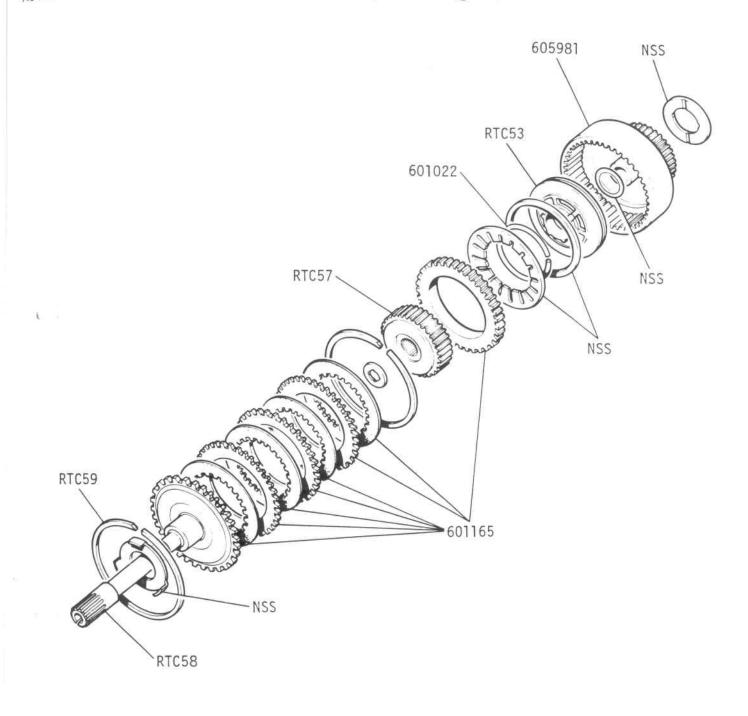


STAG	03-11	B5986

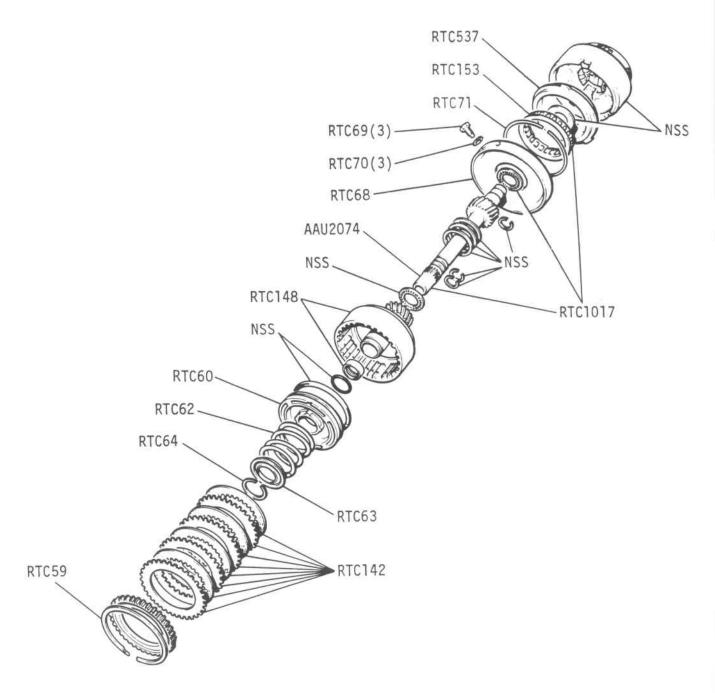


① LD41994		
STAG	03-12	В5

AUTOMATIC GEARBOX TYPE 65 - Pump and Supply Tubes 1

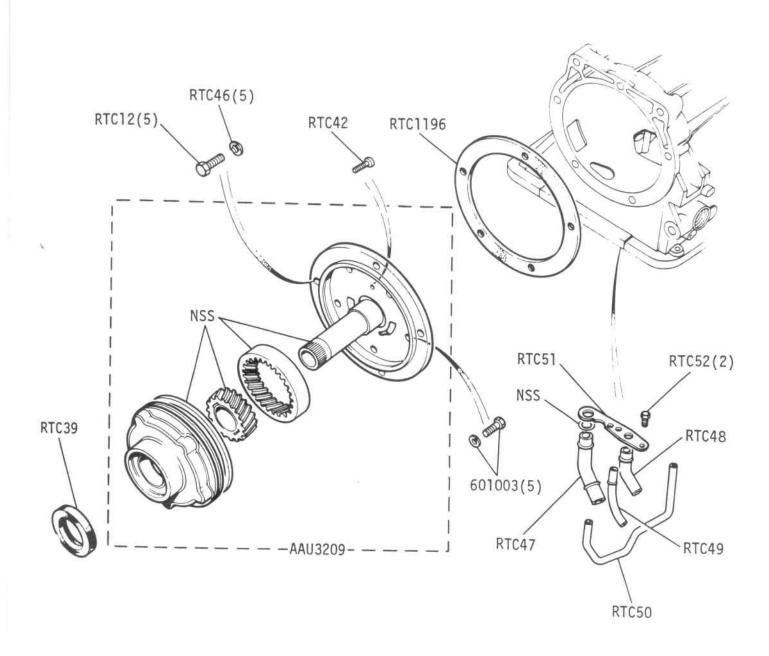

STAG	03-13	B5988
① LD41994		


AUTOMATIC GEARBOX TYPE 65 - Driven Shaft, Governor, Speedo Driving Gear 1

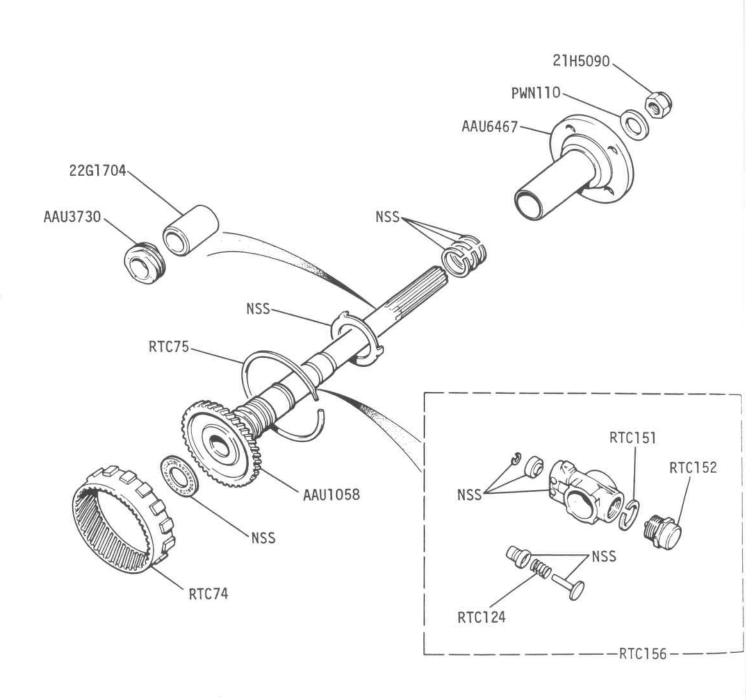


① LD41994

STAG 03-14 B5

AUTOMATIC GEARBOX TYPE 65 - Upper Valve Body, Oil Strainer, Cam 1

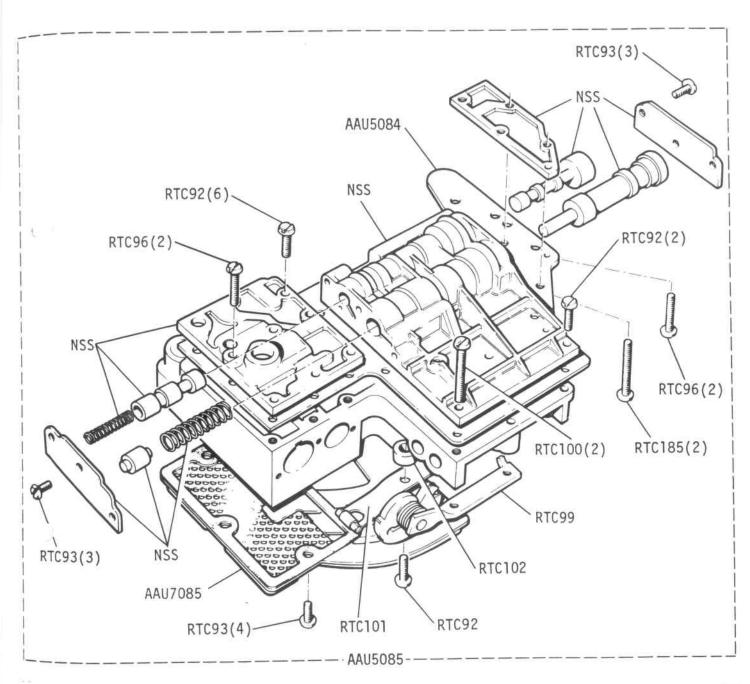


① LD41994		
CT20	00.17	B5990/1
STAG	03-17	85990/

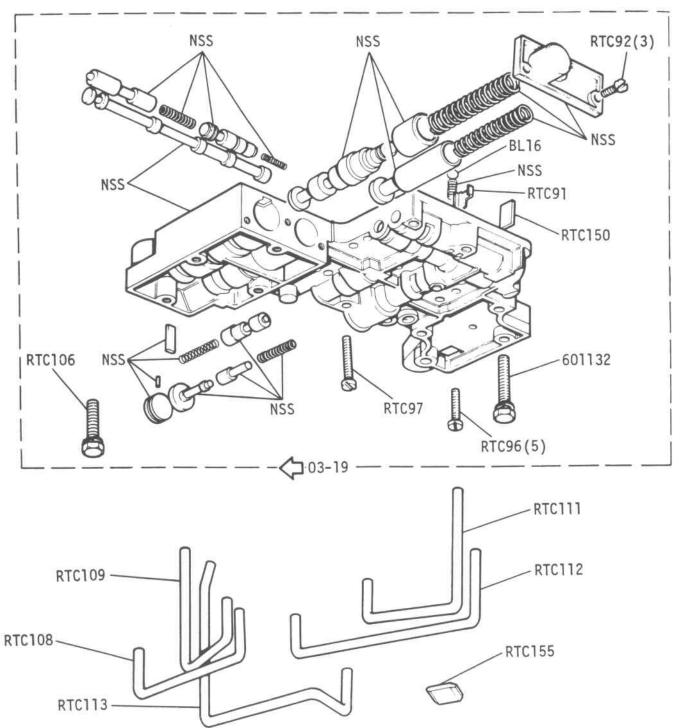


03-20	Es
	03-20

JTO! ATIC GEARBOX TYPE 65 - Rear Housing, Oil Seal, Speedo Driven Gear 1) -

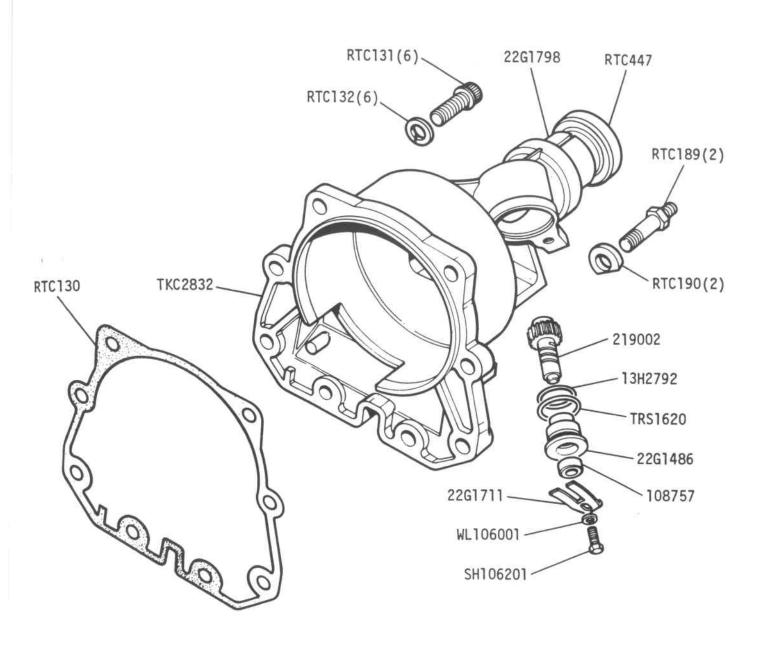


①LD41994		
STAG	03-22	B5992/1

AUTOMATIC TRANSMISSION TYPE 65 - Oil Cooler 1)

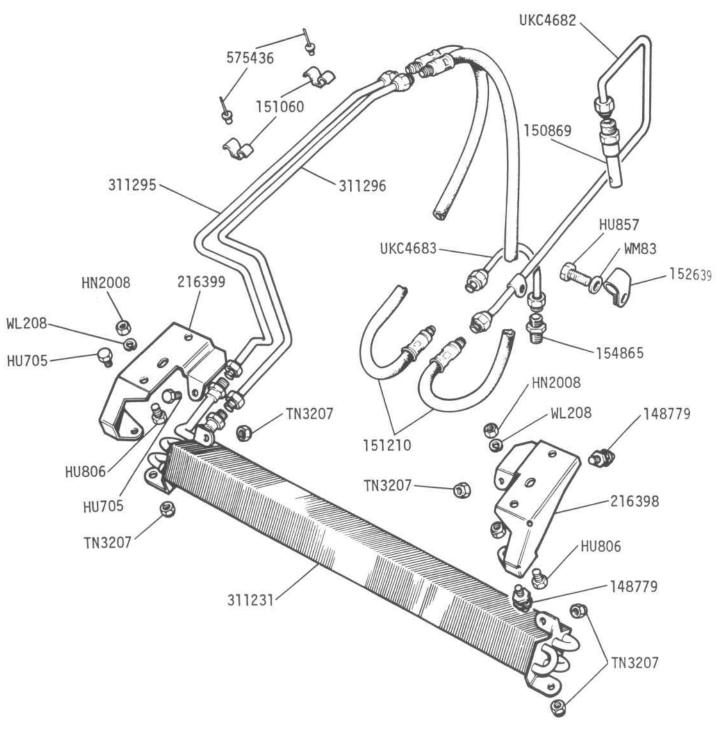


① LD41994		
STAG	03-23	B599


TOMATIC GEARBOX TYPE 65 - Gear Selector Assy 1

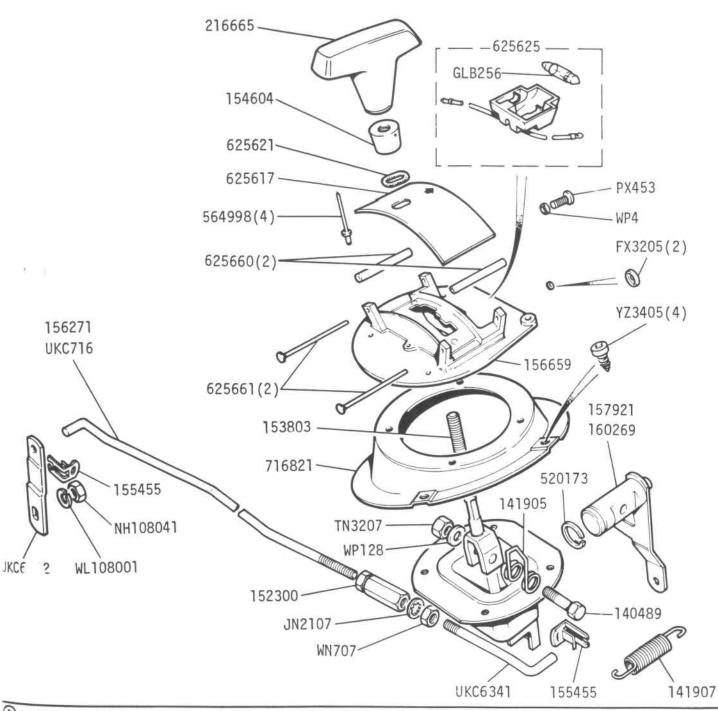

① LD41994

AUTOMATIC GEARBOX TYPE 65 - Gasket and Oil Seal Service Kits 1

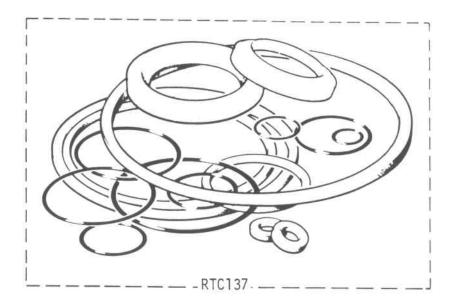

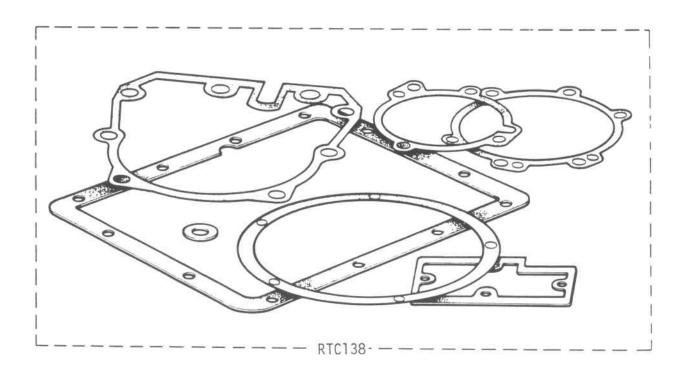


① LD41994

STAG


03-25

JTOMATIC GEARBOX TYPE 65 - Thrust Washer, Piston Ring, Valve Spring Service Kits ① →

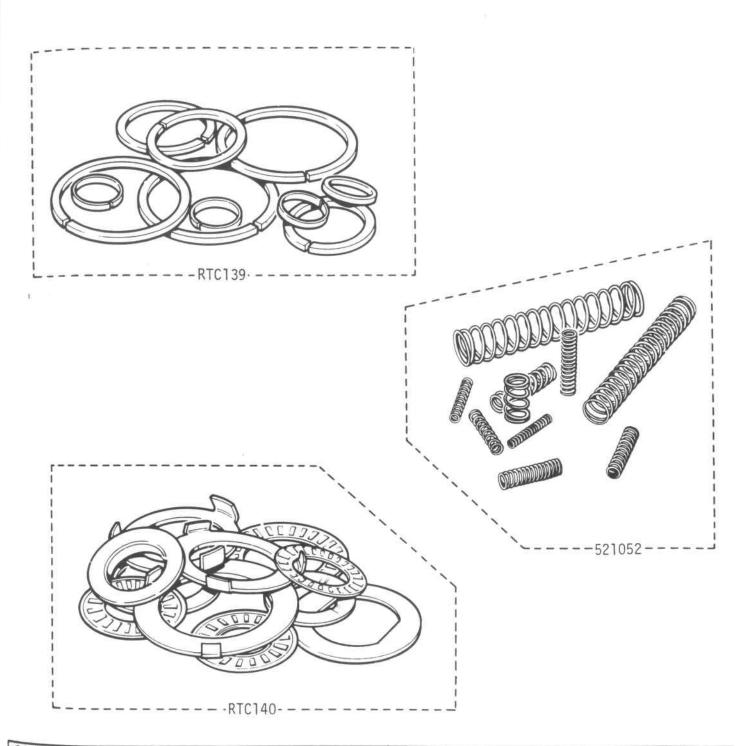

①LD41994

STAG

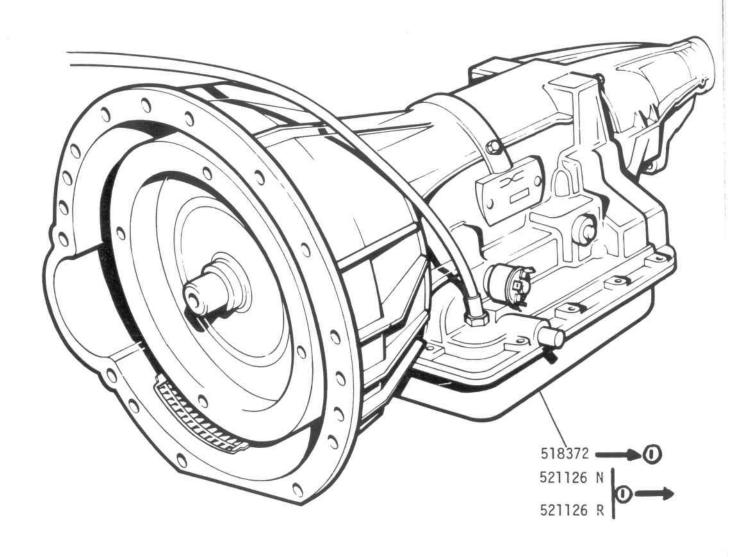


O LF 2731


STAG

04-01


TOMATIC GEARBOX TYPE 35 - Torque Converter and Housing

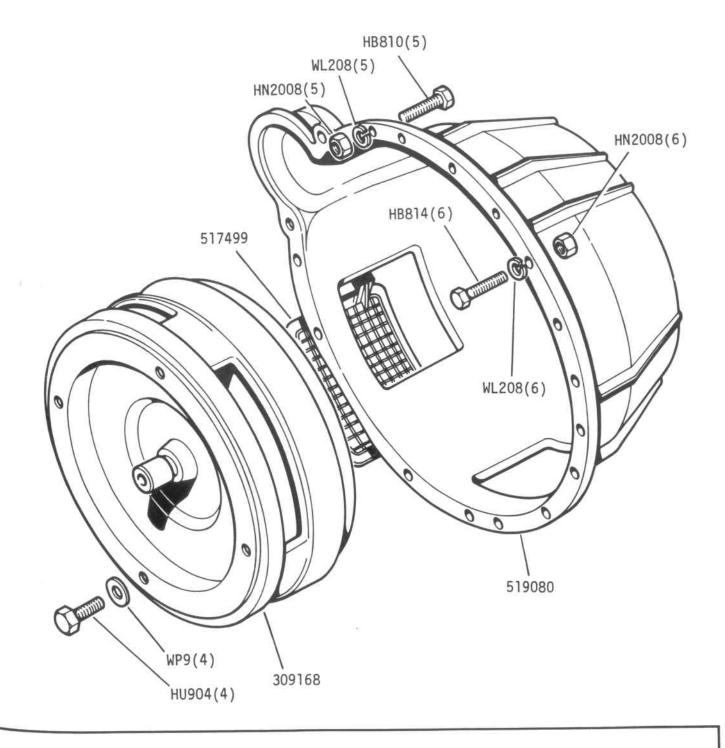

STAG

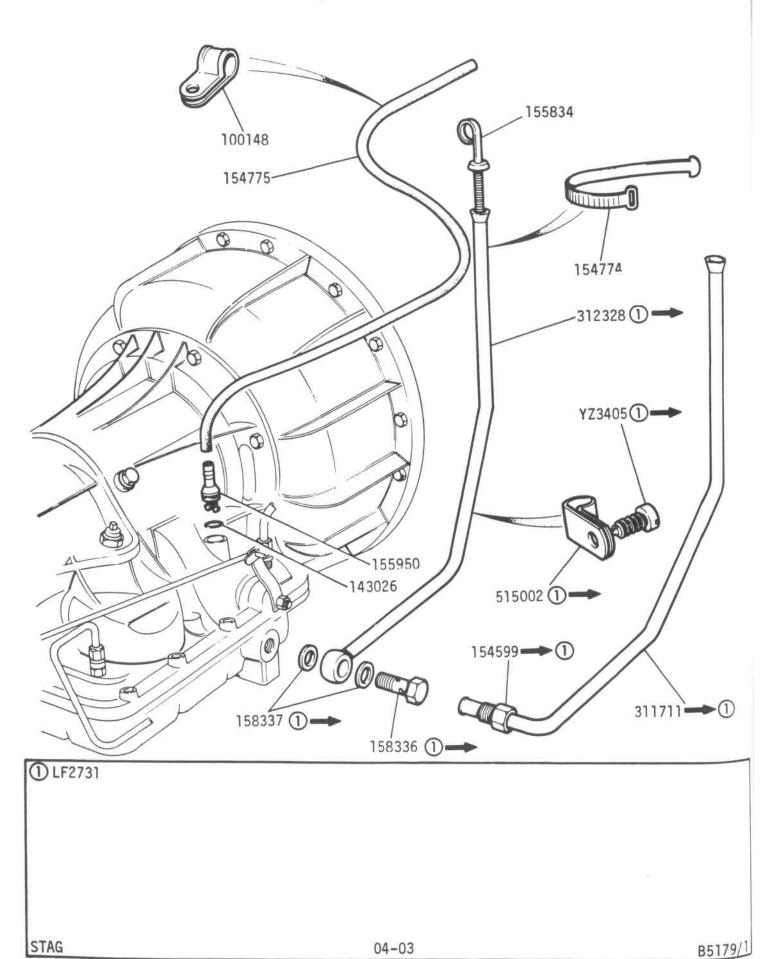



UTOMATIC GEARBOX TYPE 35 - Casings and Kickdown Cable

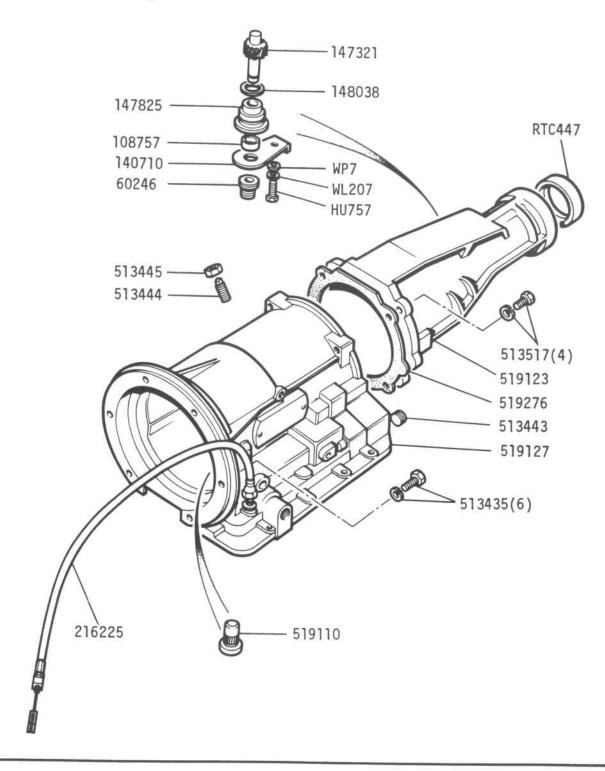

STAG


04-04

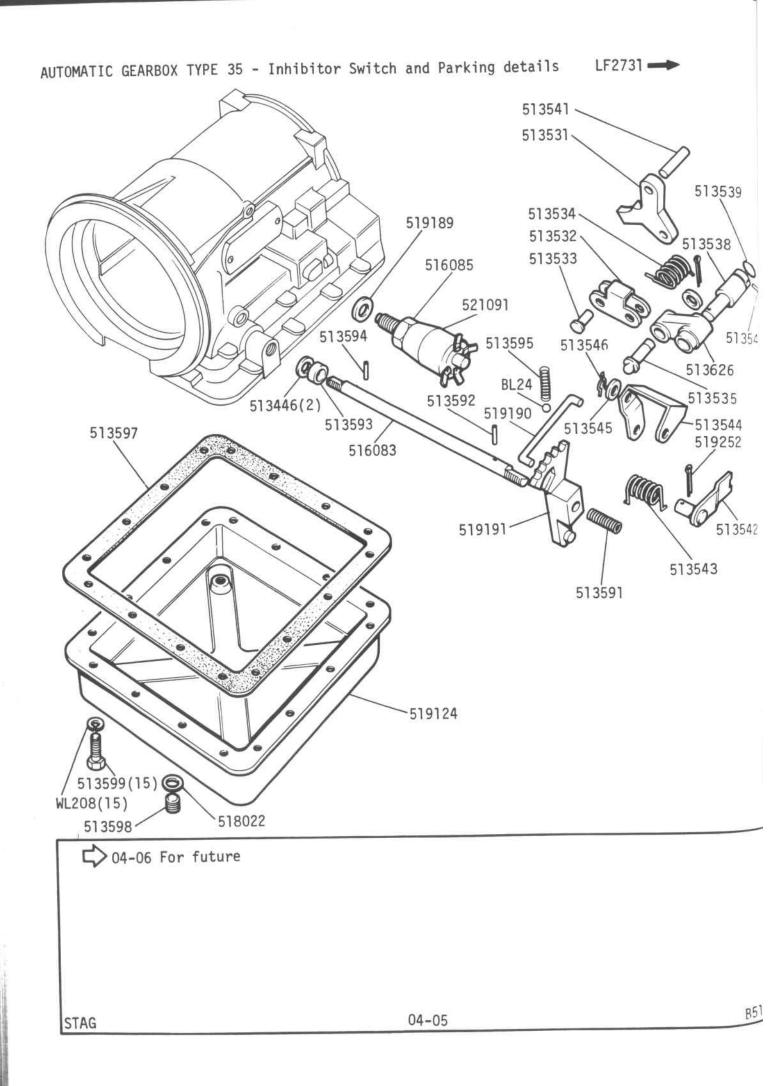

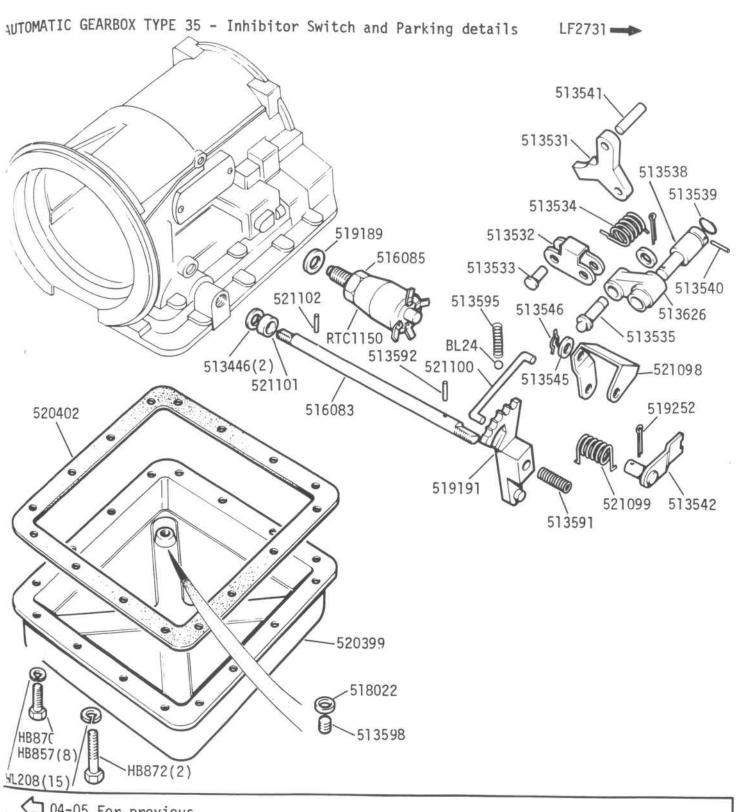

○ 04-05 For previous


STAG

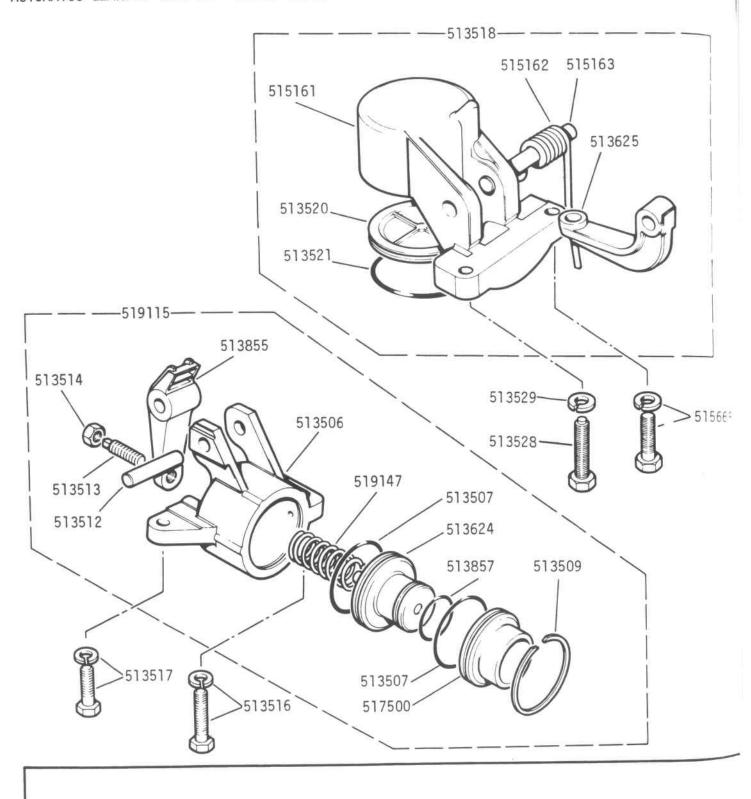

STAG

04-07

JMATIC GEARBOX TYPE 35 - Front Pump, Clutch and Brake Bands

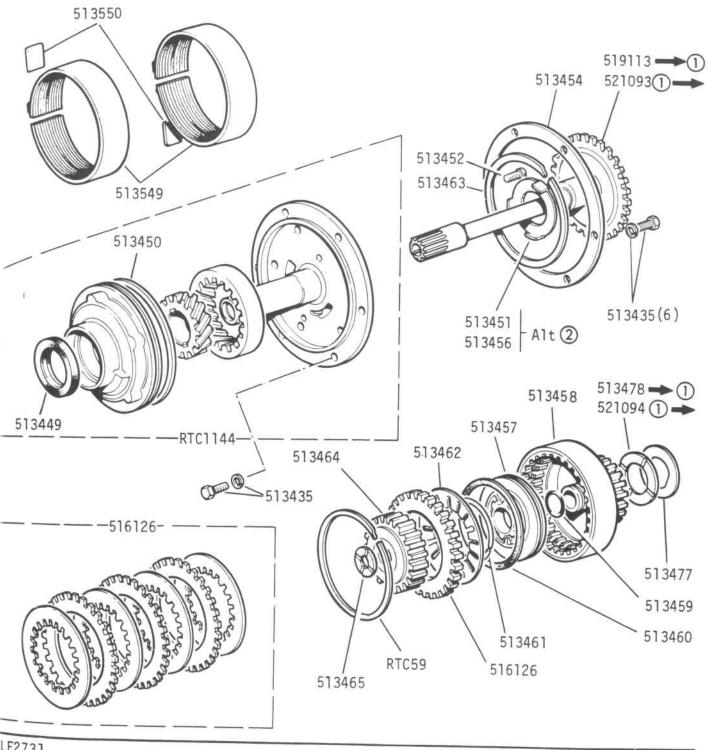


LF2731

Washer .068"

Washer .085"


04-08

B5183/2

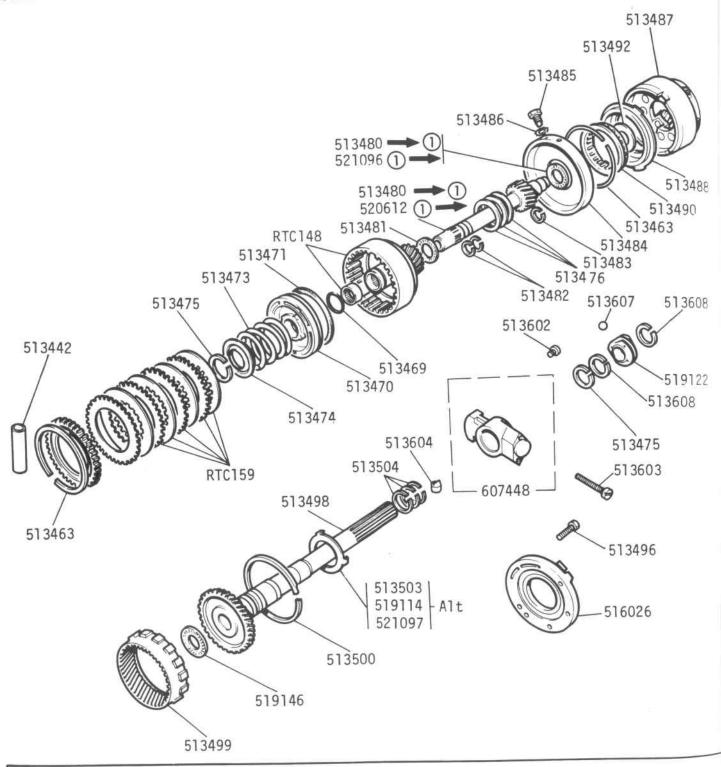


① LF2731

STAG 04-09 B5185/6

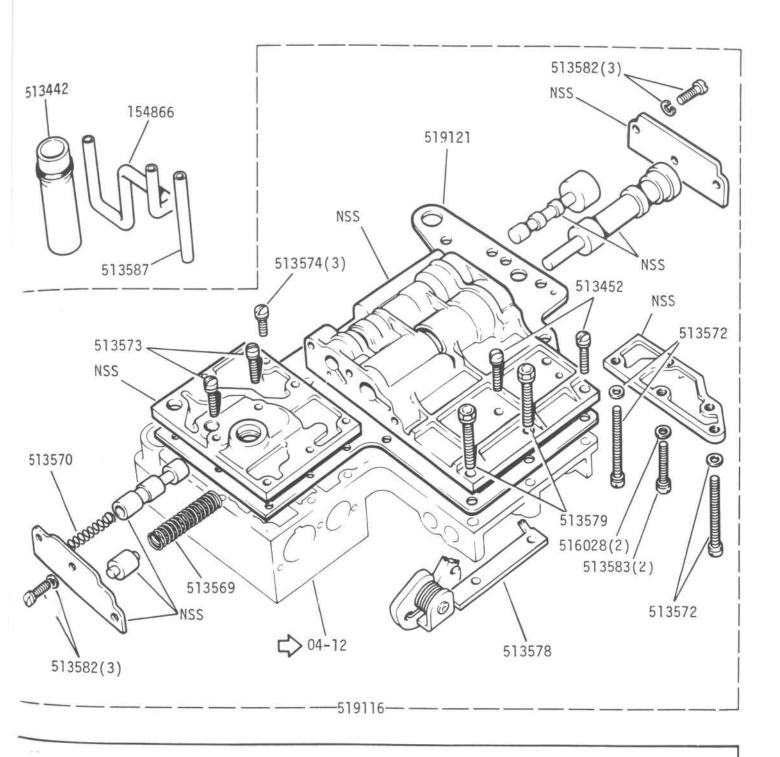

STAG 04-10 B5186


AUTOMATIC GEARBOX TYPE 35 - Lower Valve

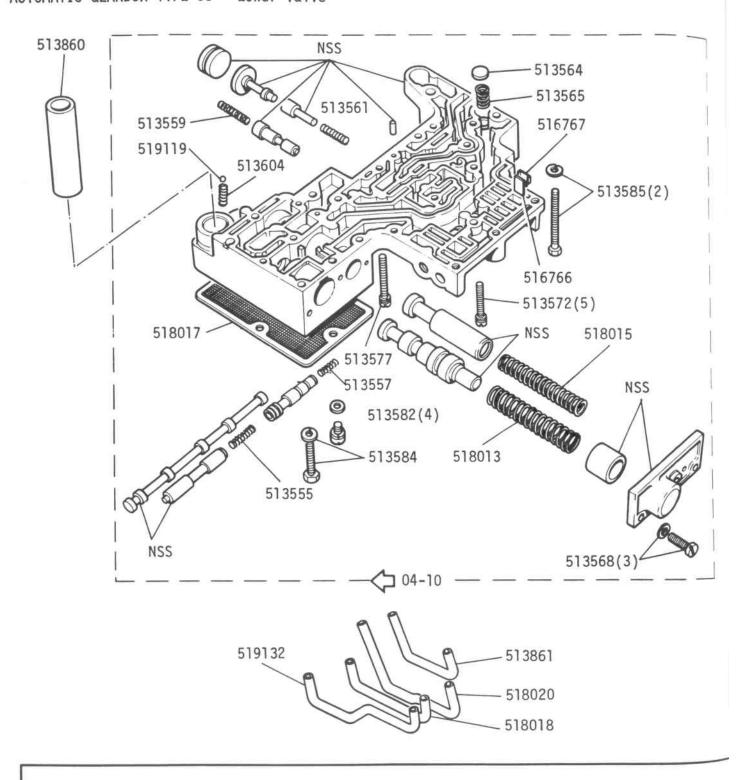


STAG

04-12

OMATIC GEARBOX TYPE 35 - Oil Cooler

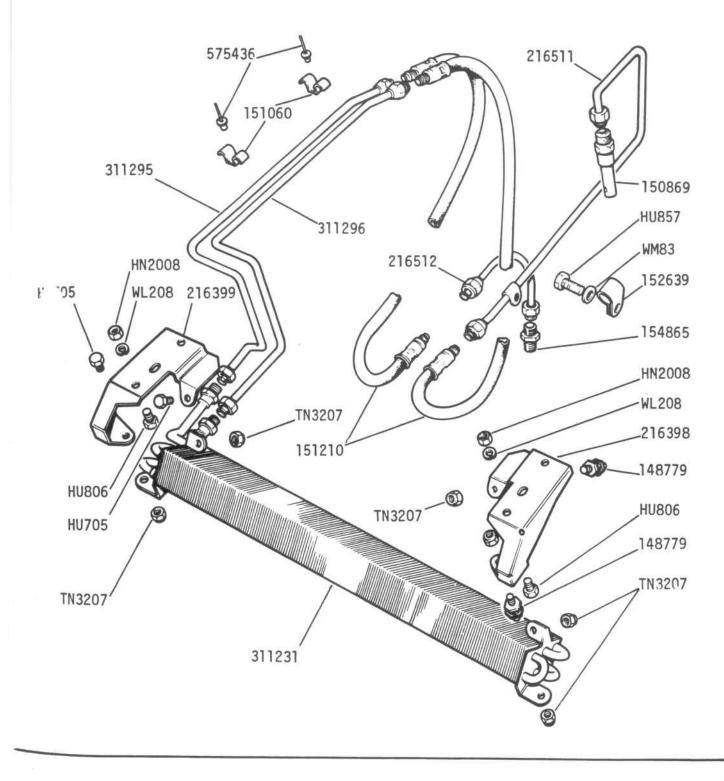

TAG

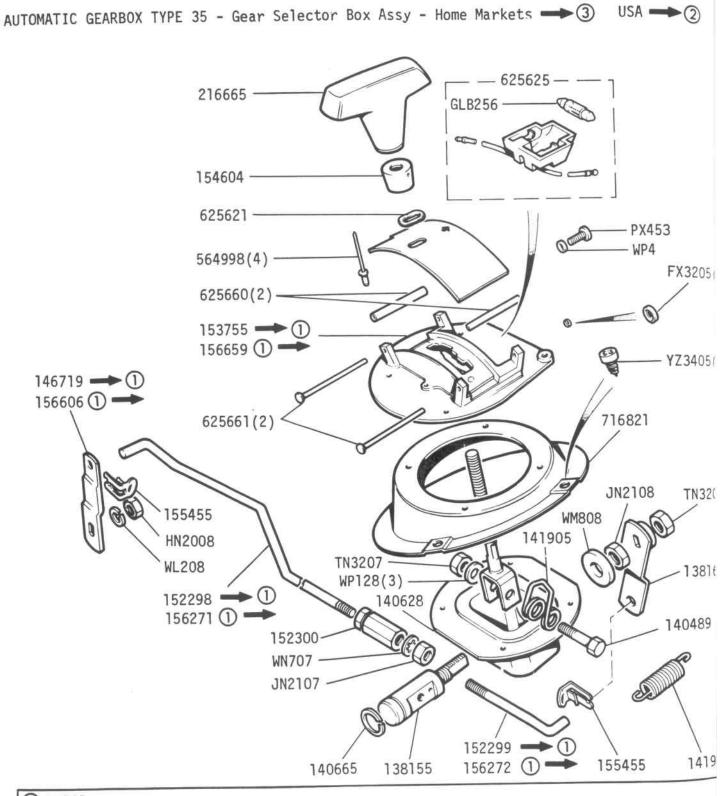

① LD191


② LD11277 🖒 04-16 for future


③ LD20540 🖒 04-15 for future

STAG

04-14

AUTOMATIC GEARBOX TYPE 35 - Gear Selector Assy USA 1 - 2 404-14 for previous

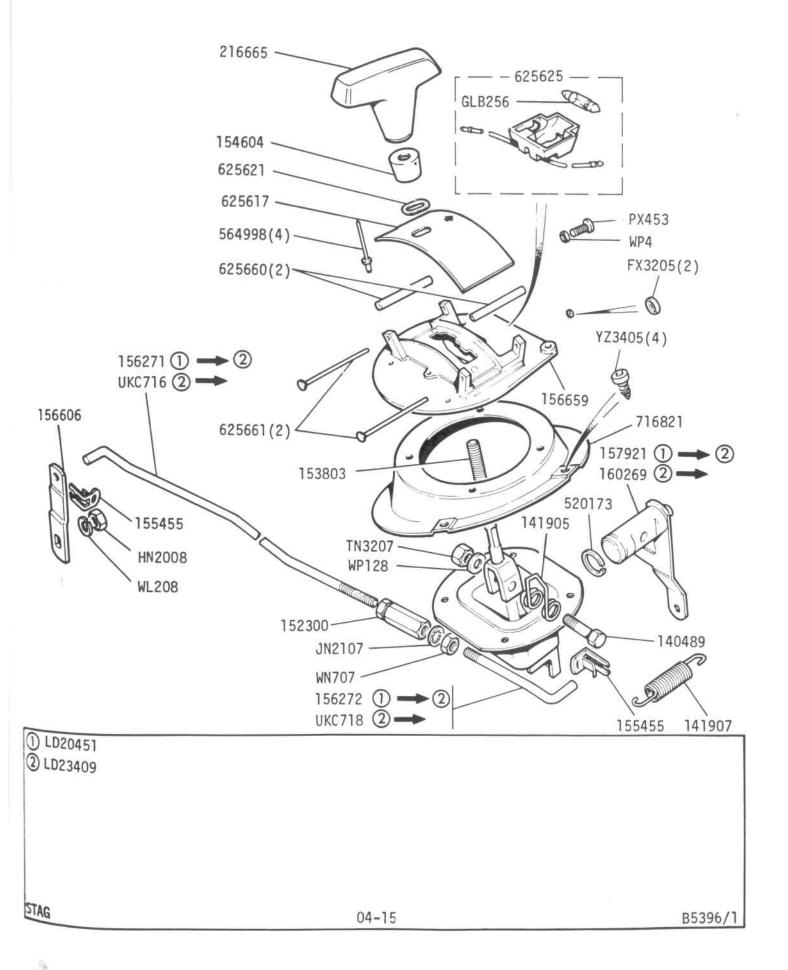


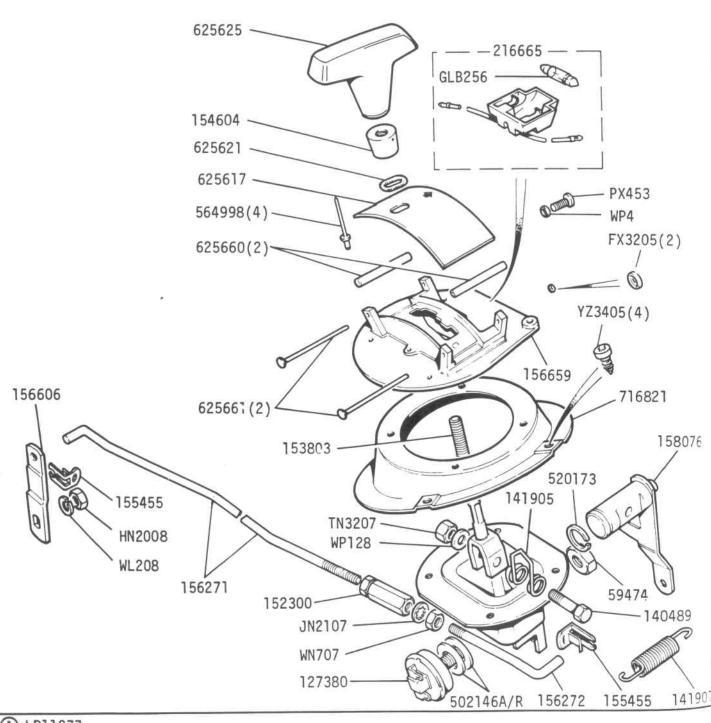

① LD11277


STAG


UTOMATIC GEARBOX TYPE 35 - Gasket Set

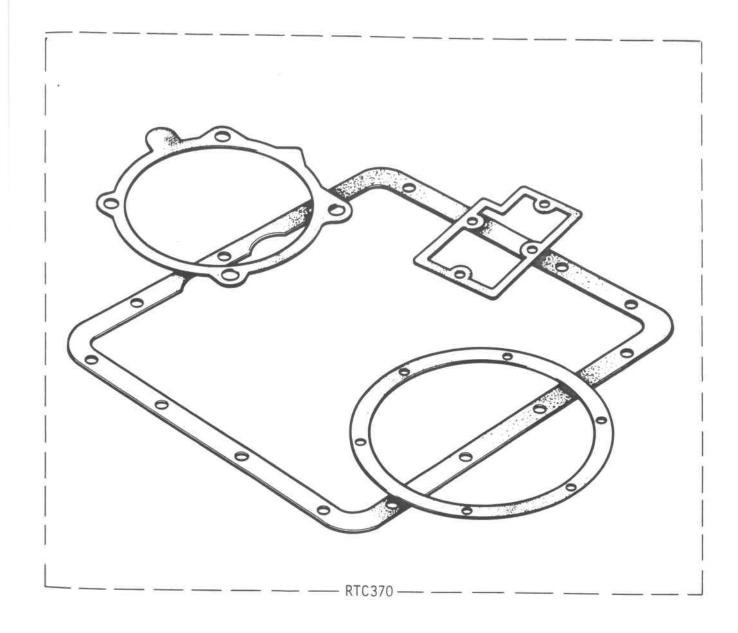

STAG 04-17 B5190


AUTOMATIC GEARBOX TYPE 35 - Service Kits

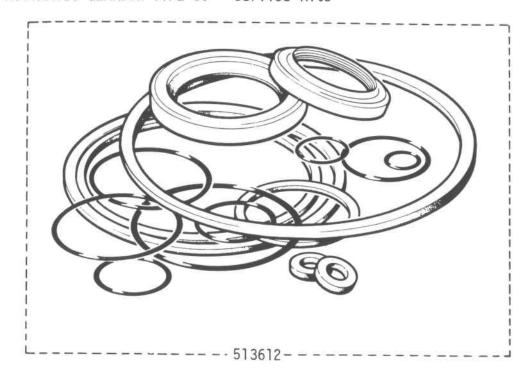

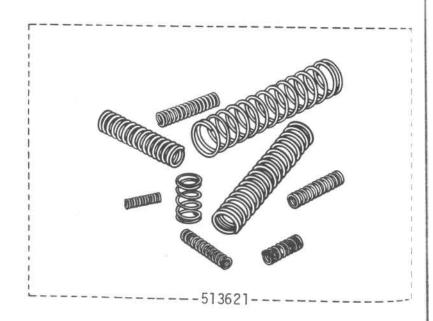


STAG

TOMATIC GEARBOX TYPE 35 - Service Kits

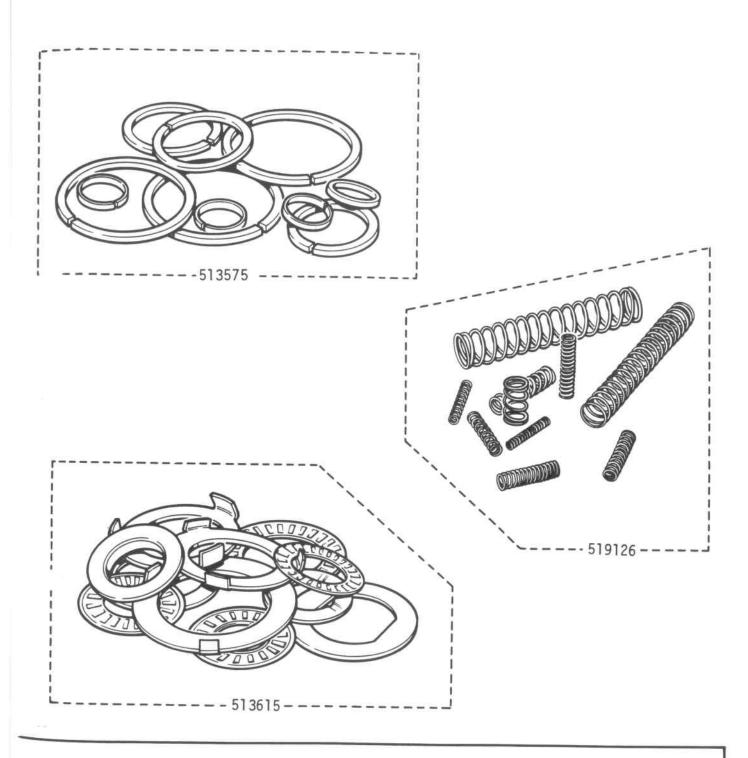


NGINE - Propellor Shaft - Auto

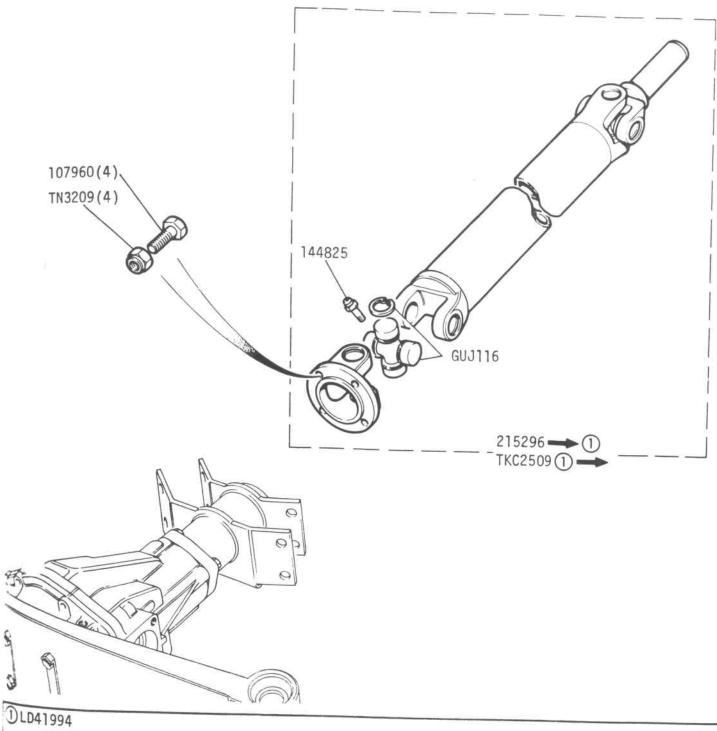

TIG

04-27


85205/1

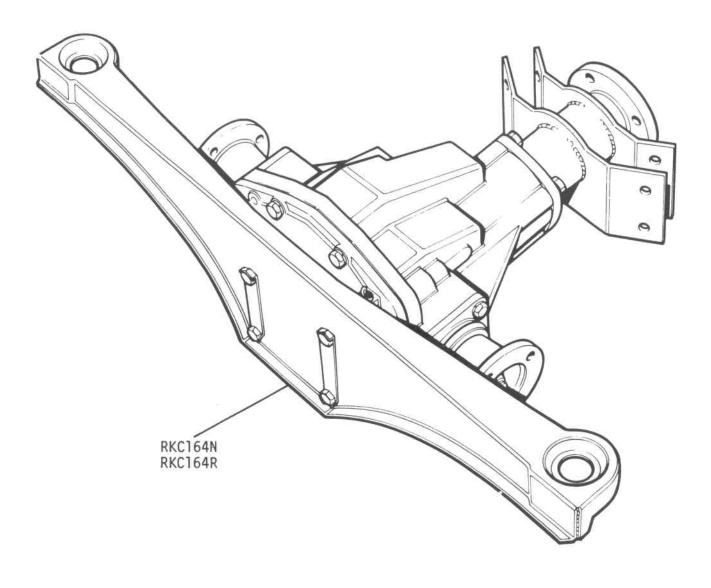


STAG

04-28

EAR AXLE - Rear Cover and Mounting Plate

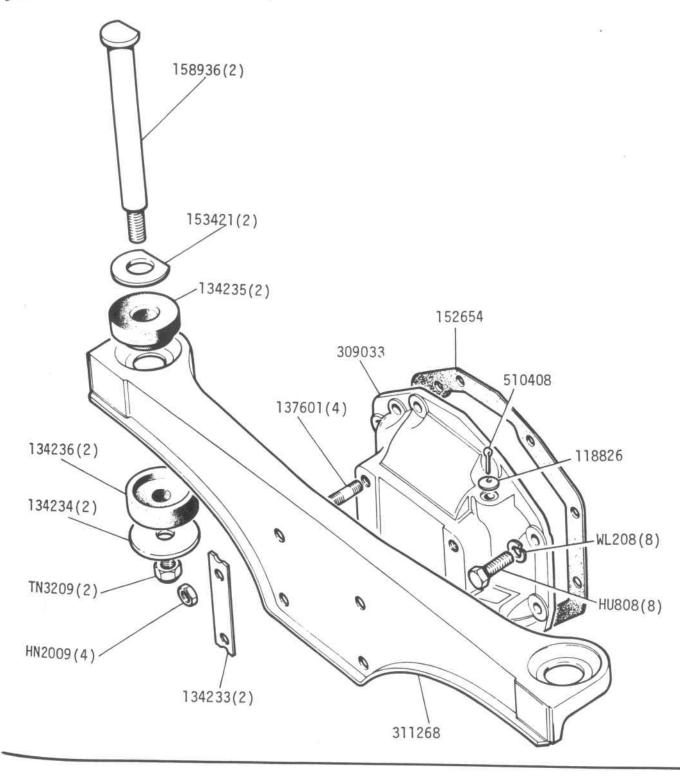


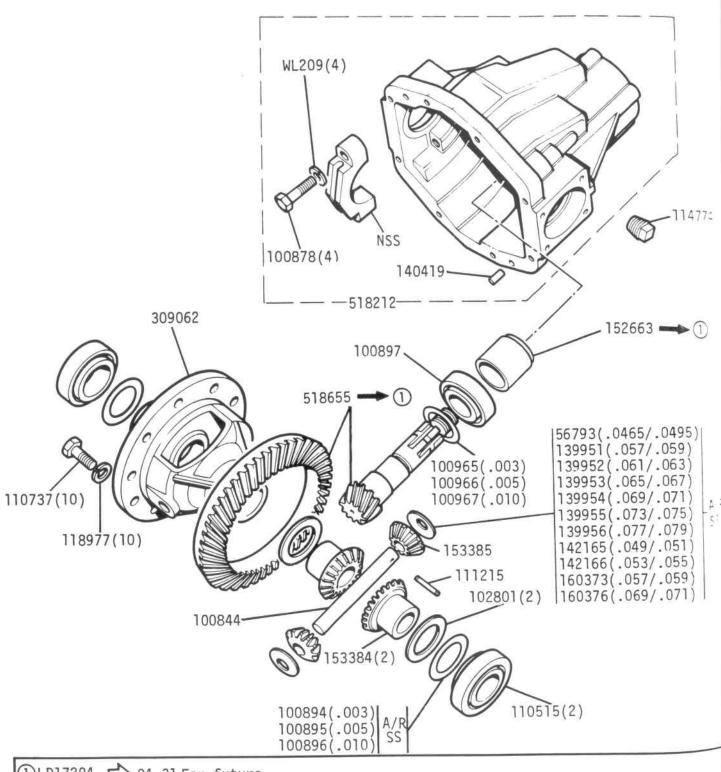


①LD17294 🖒 04-31 For future

STAG

04 - 30

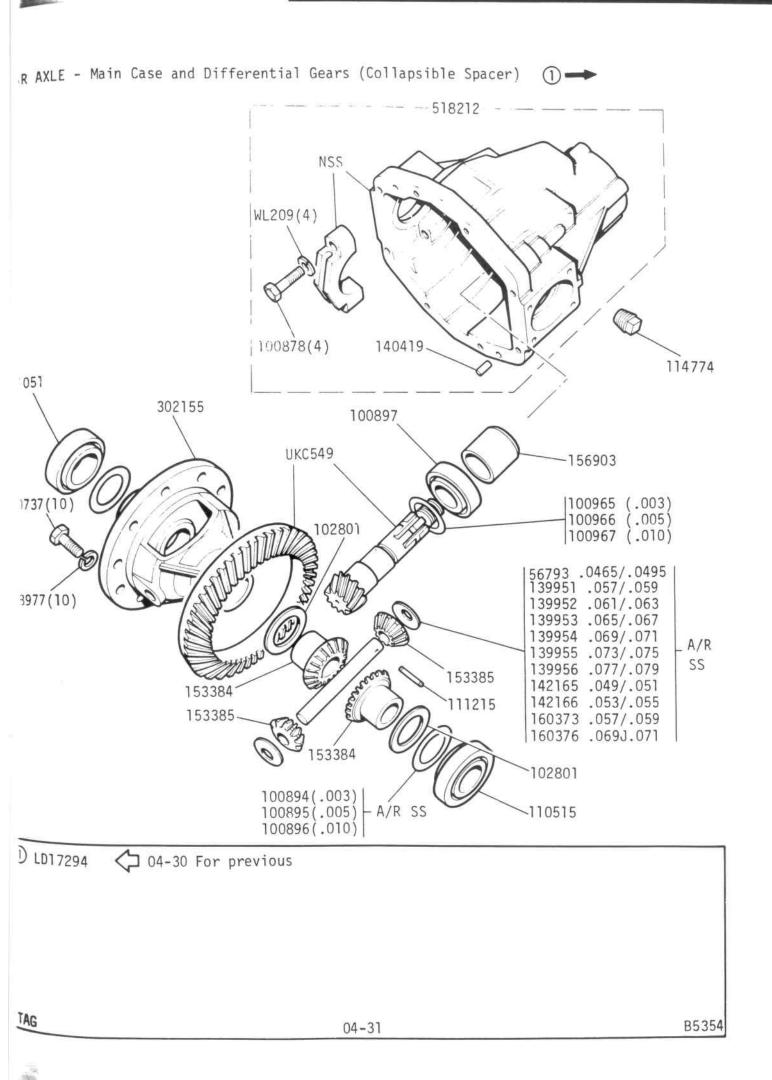

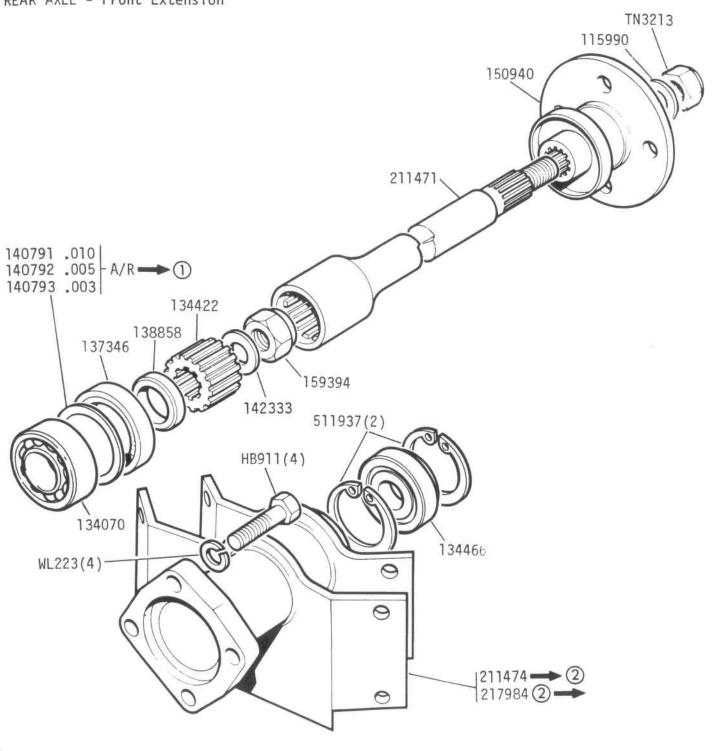


① LD17294


② LD3325 LE5001

STA

AR AXLE - Inner Axle Shafts

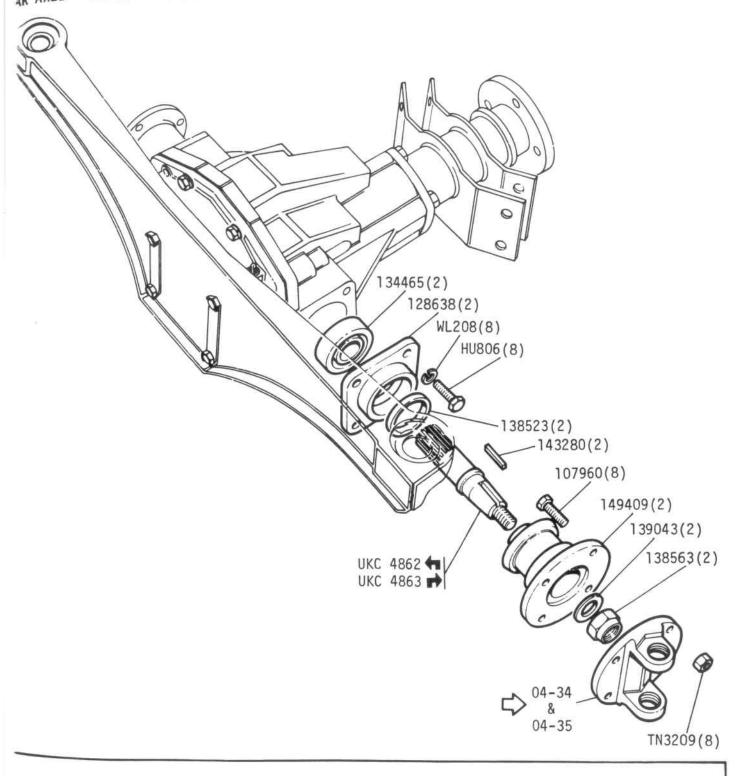


TAG

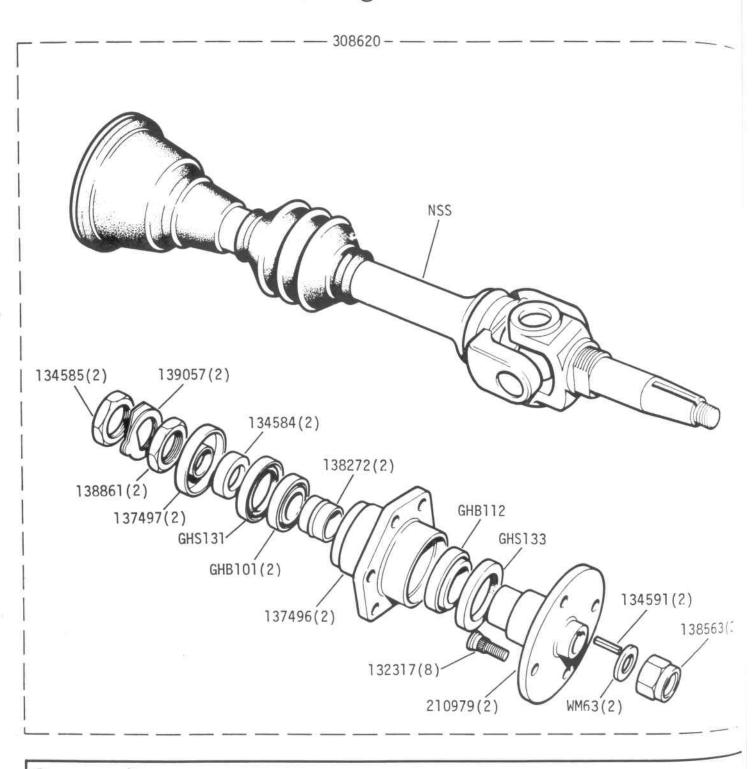

① LD32900 🖒 04-35 For future and 04-36 For Wire Wheel Condition


STAG

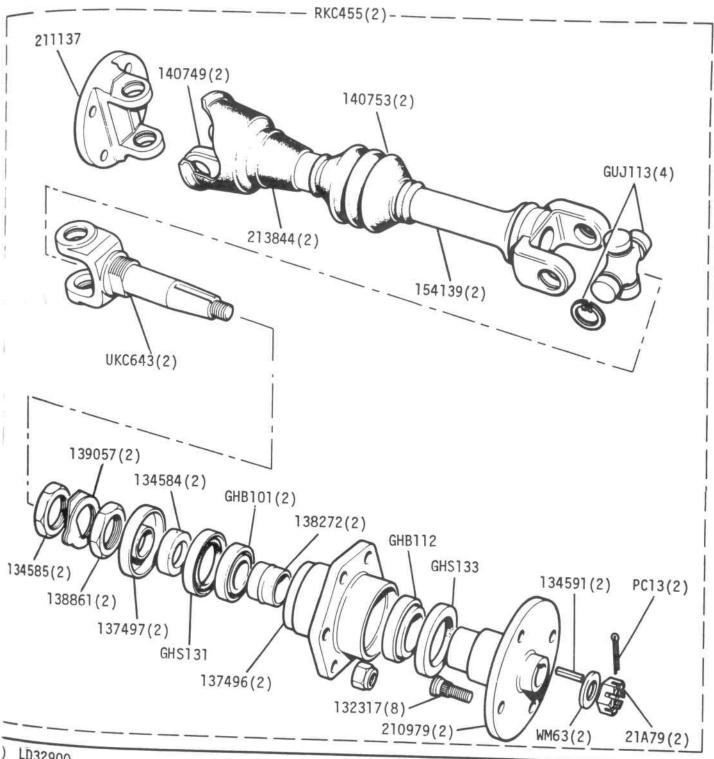

LD32900

⁰⁴⁻³⁴ For previous

> 04-36 For Wire Wheel Condition

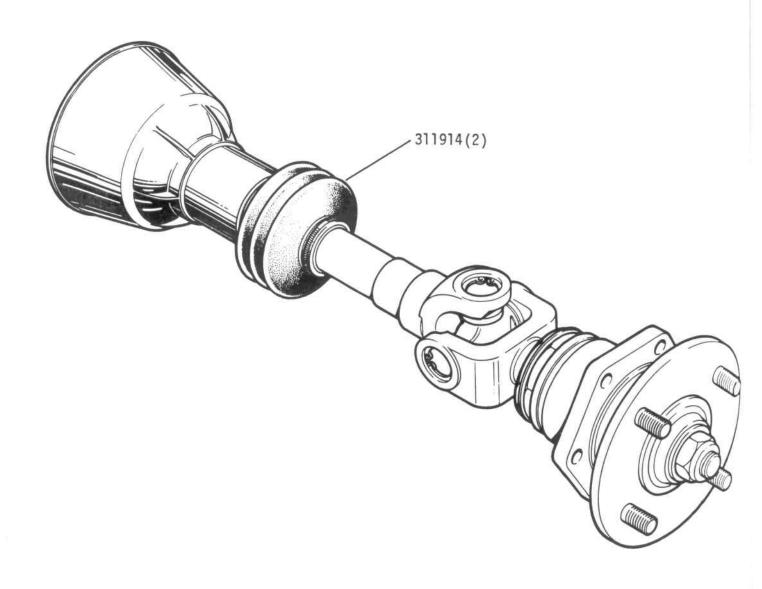


① For use with Wire Wheels only


○ 04-34 and 04-35 For normal condition

STAG


NT CROSSMEMBER

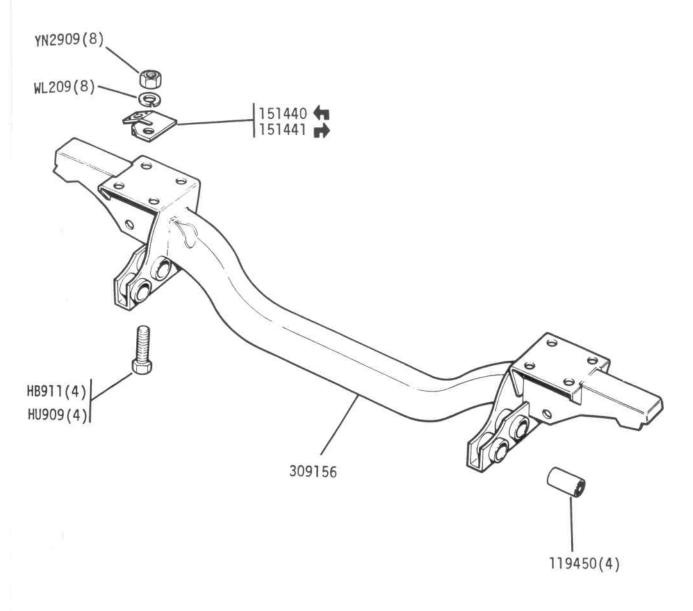


4G

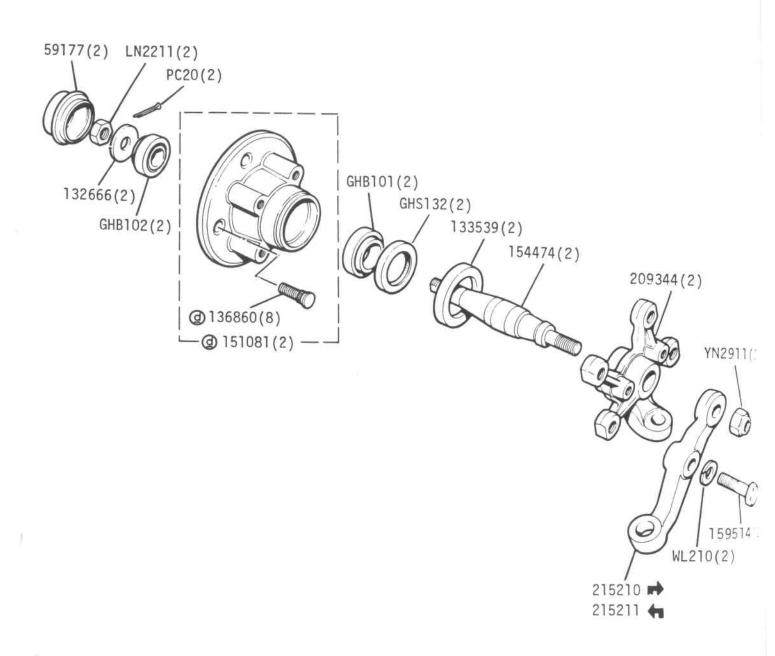


RONT SUSPENSION - Lower Strut and Lower Wishbone 156453(2) I TKC2863 137275(2) TKC2864 -Alt 216542 216543 HB1020(2) WL210(2) -YN2911(2) LN2111(2) PC20(2) 134557(2) 138143(4) WP11(2) YN2910(2) 134556(2) -NSS TN3211(2) -133634(2) 133588(2) 138885(2) 513941 HB1122(2) TAG 04-39 B5340/1

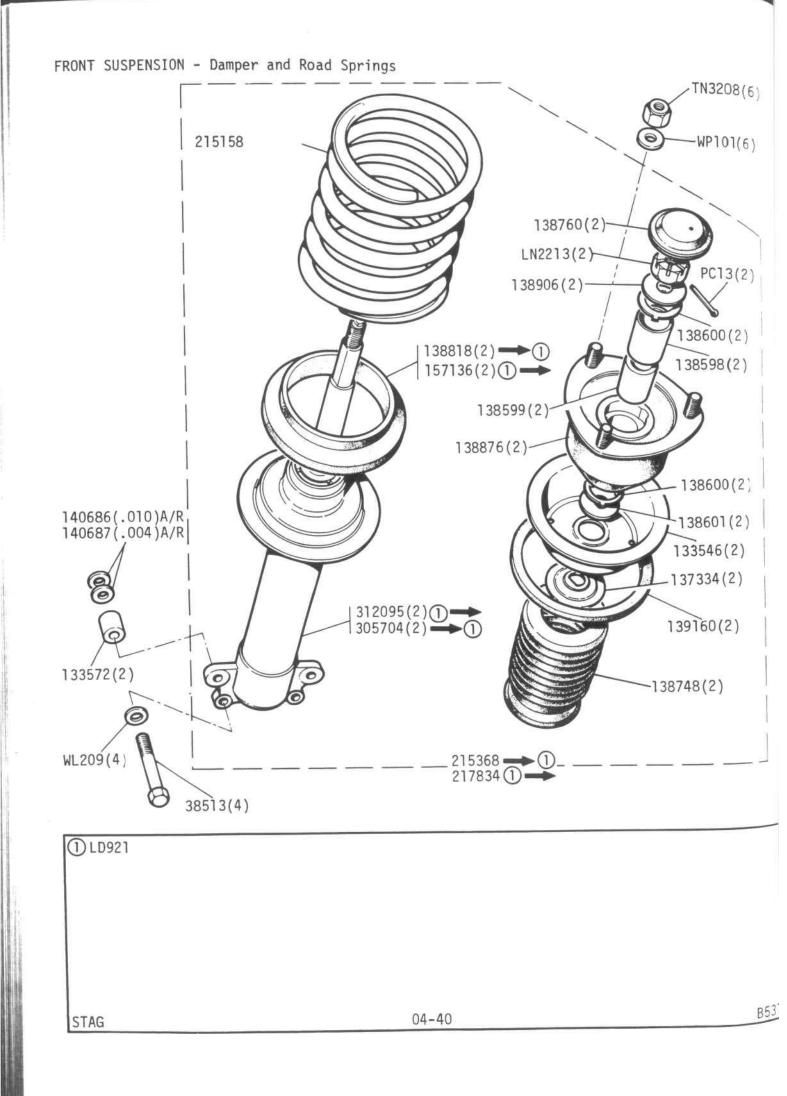


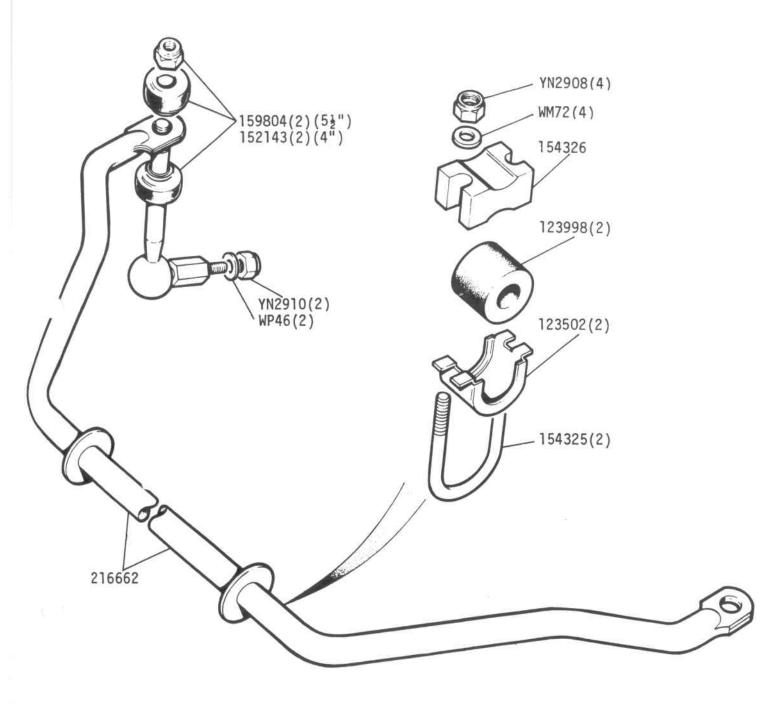

STAG 04-41 B5323/1

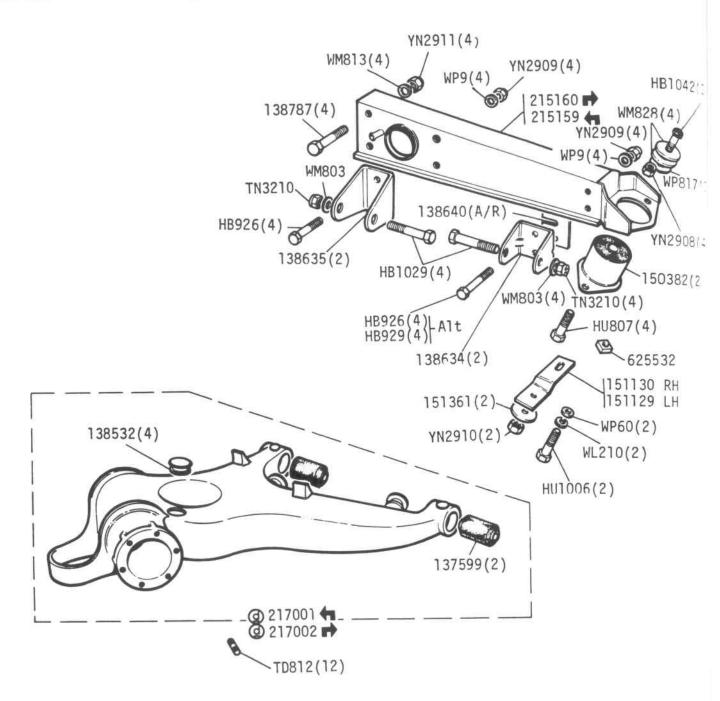


STAG 04-42 B53:

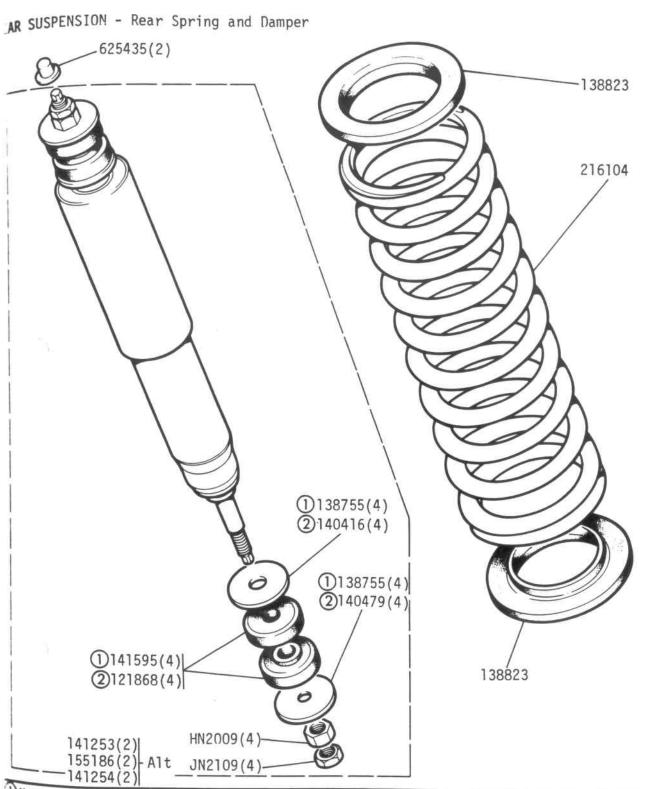

Ouse with Woodhead Monroe
Ouse with Armstrong or Girling

STAGE

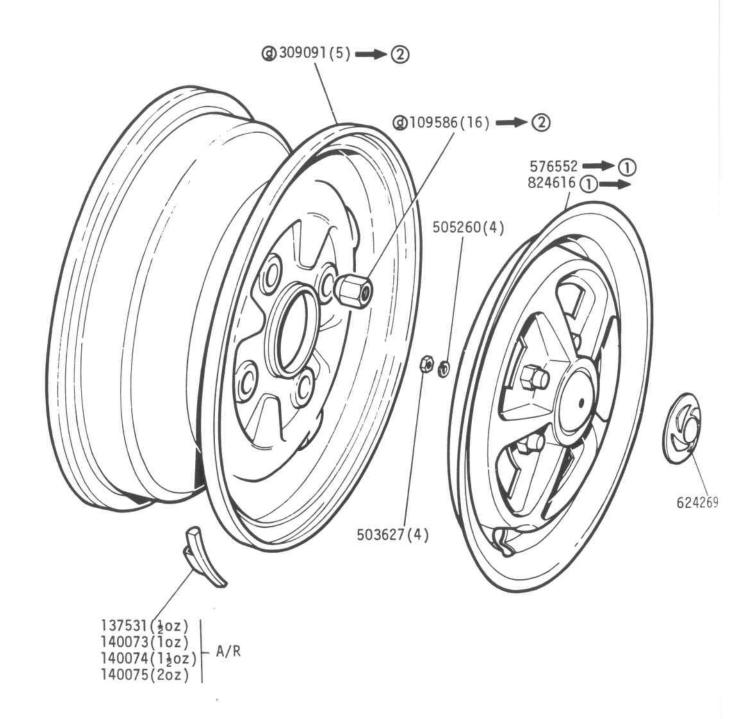


04-45 & 04-46 for S00

① 20,000 LD

2 40,000 LD

STAG

04-44

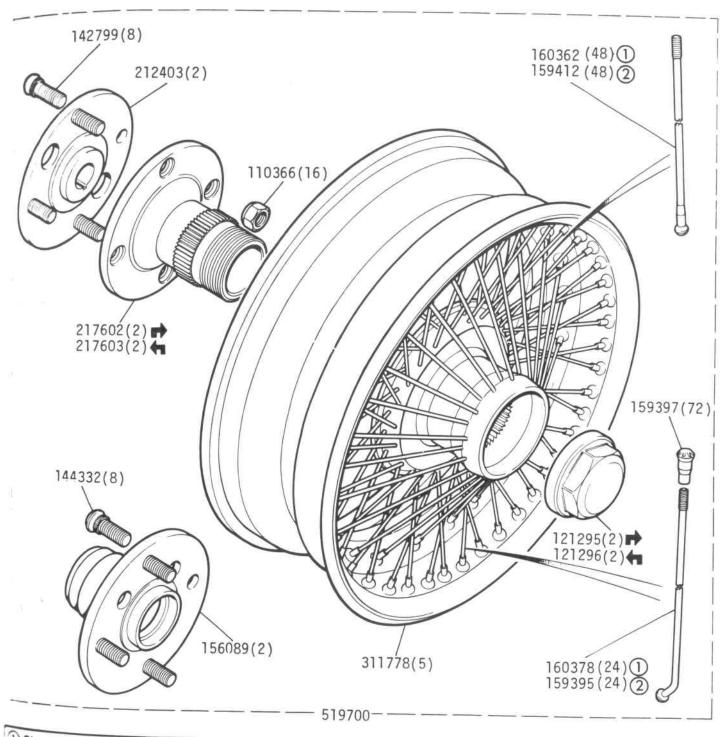


1) Chromium


3 Normal

♦ 04-46 For future


TAG


04-45

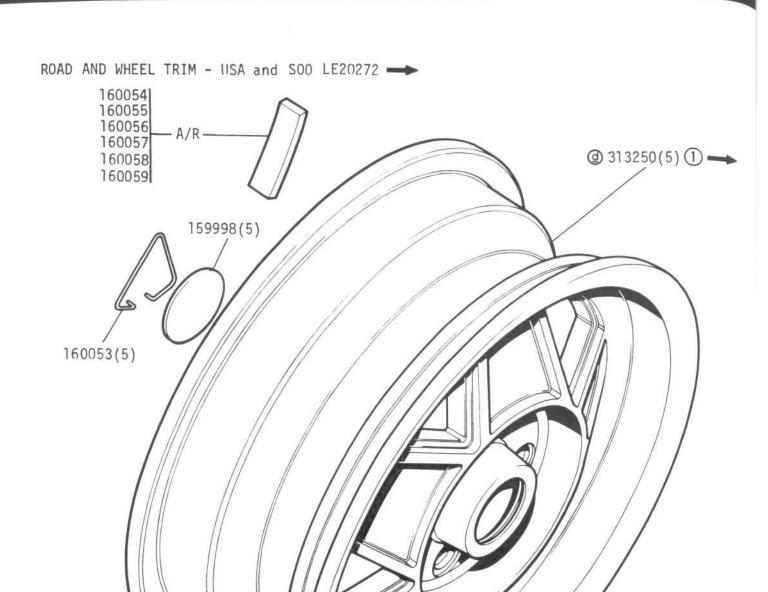

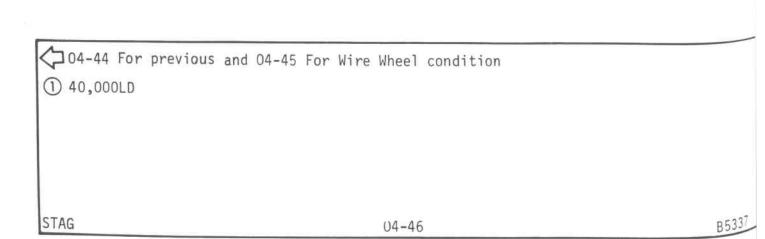


@ 160000(16) - 1 @ UKC5403(16) 1

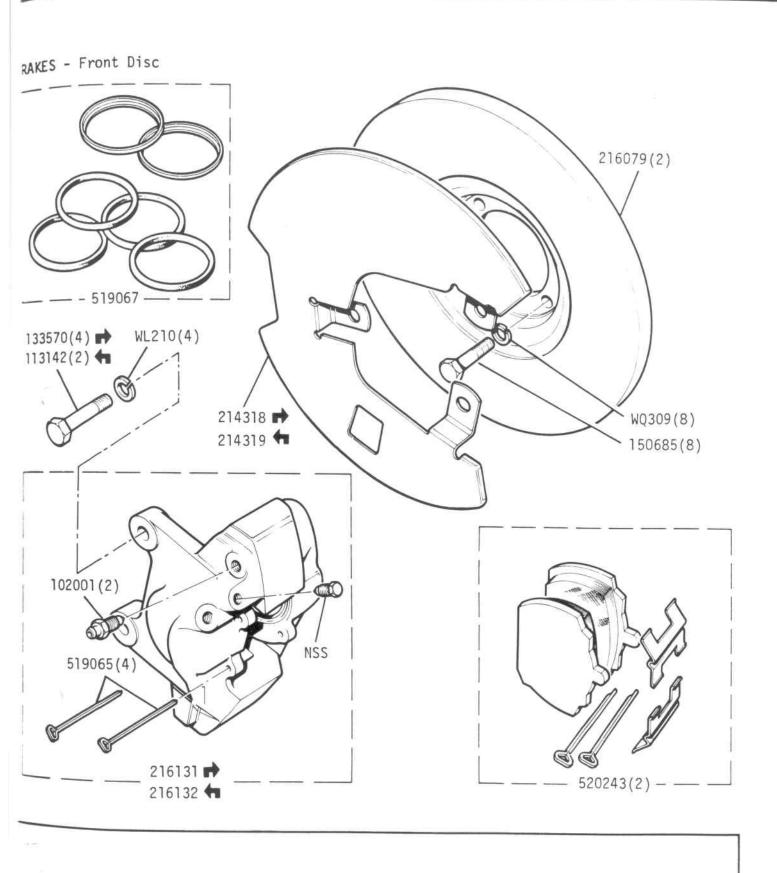

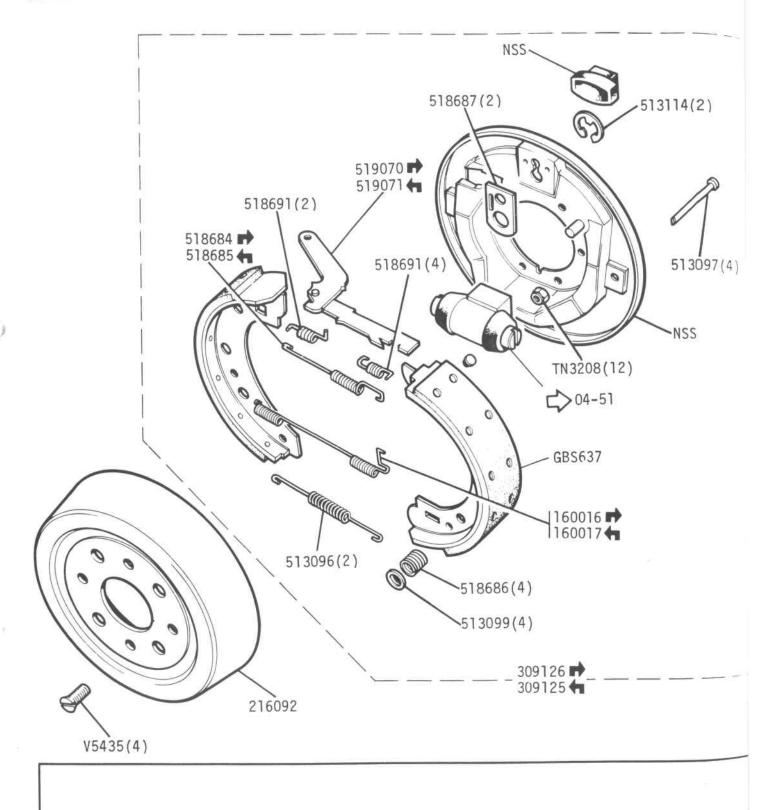


04-50

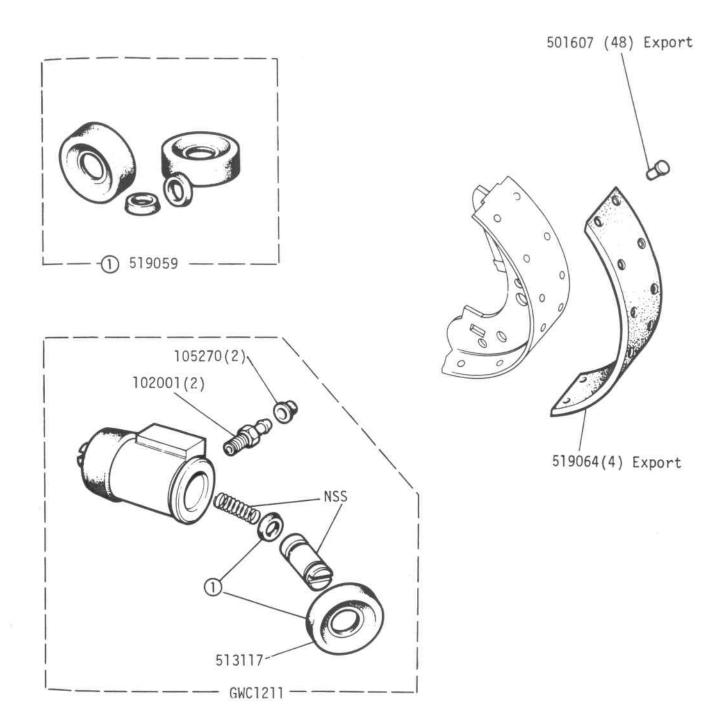

STAG 04-51 B5332

CLUTCH AND BRAKE PENAL COM

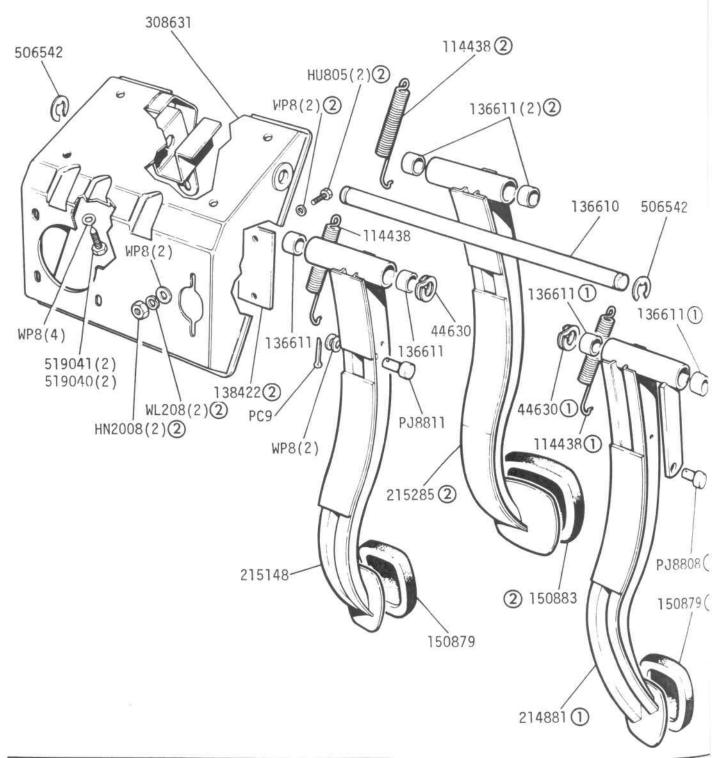


① Manual

② Automatic

STAG

04-52


CLUTCH AND BRAKE PEDAL @

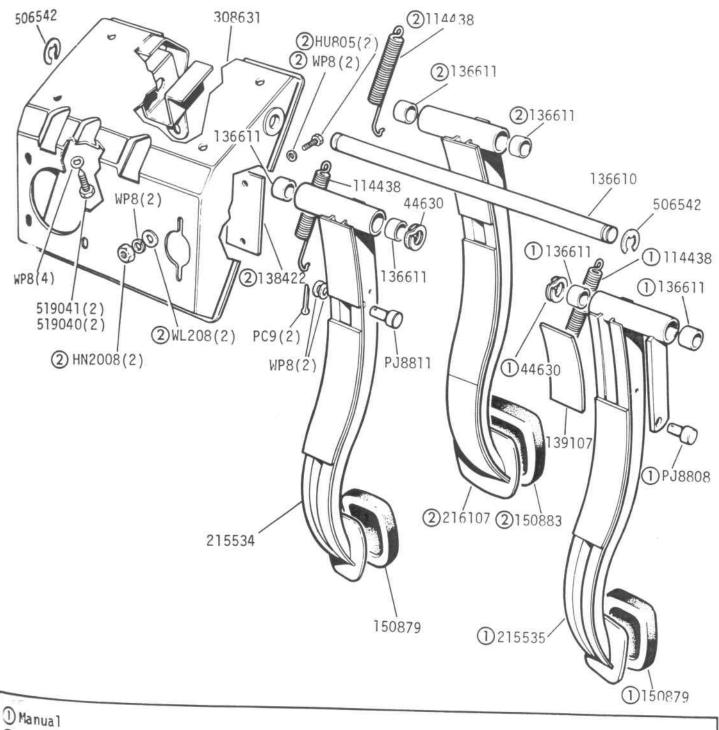



② Automatic

STAG


04 - 54

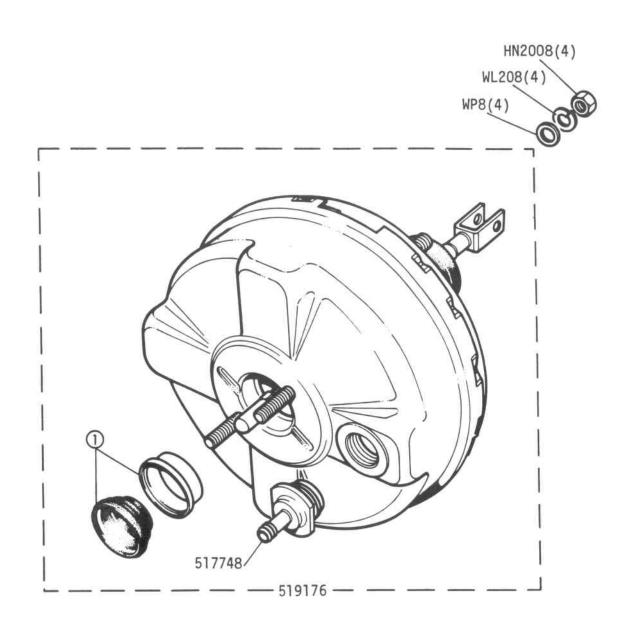

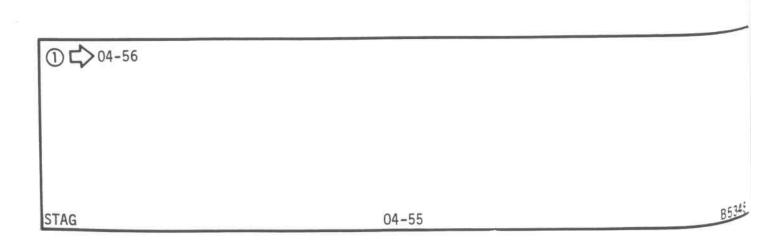

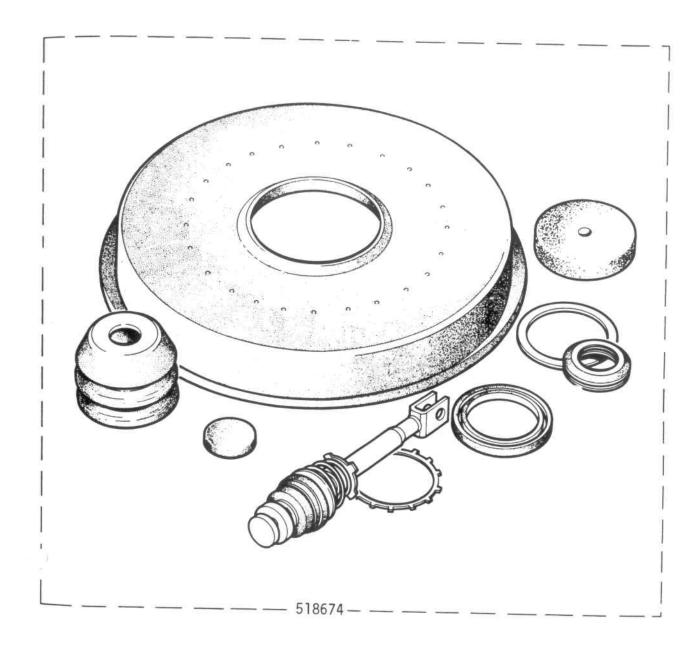

VACUUM PIPES - Non Air Conditioning □□⊖0

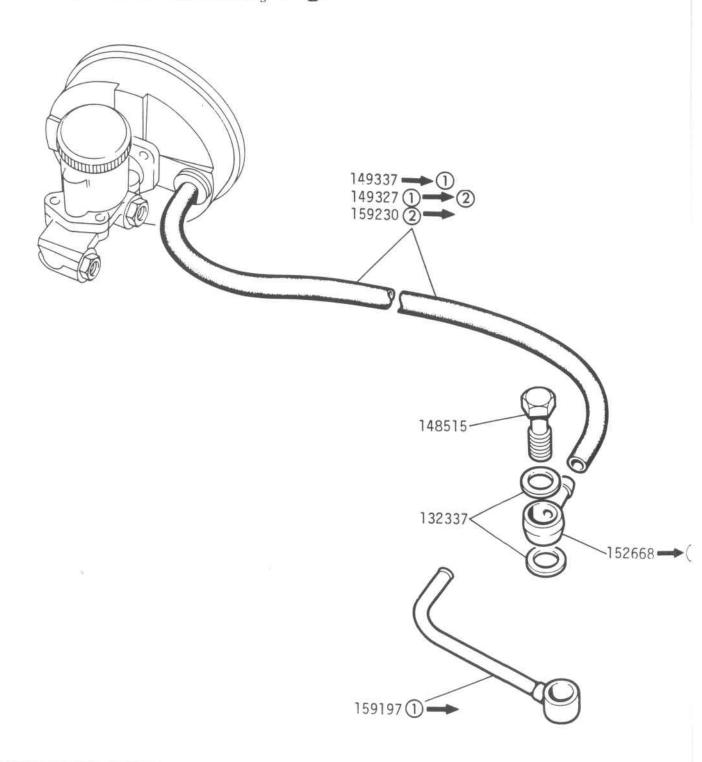


① LD20,001

② LD30,222

STAG


04-57

ACUUM PIPE' - Non Air Conditioning

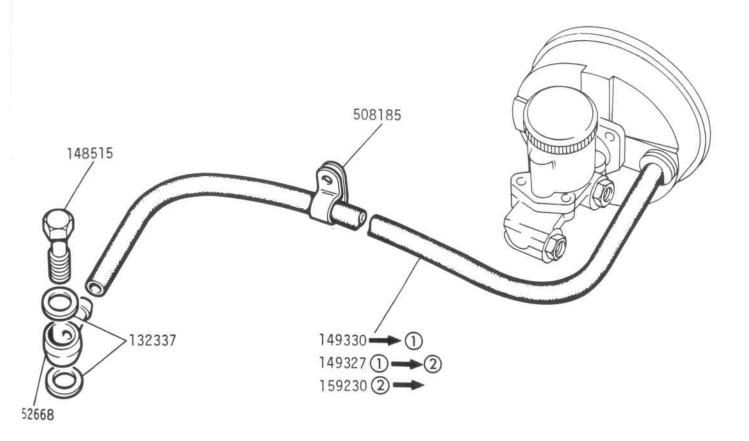

DLD20,000 DLD30,221

TAG

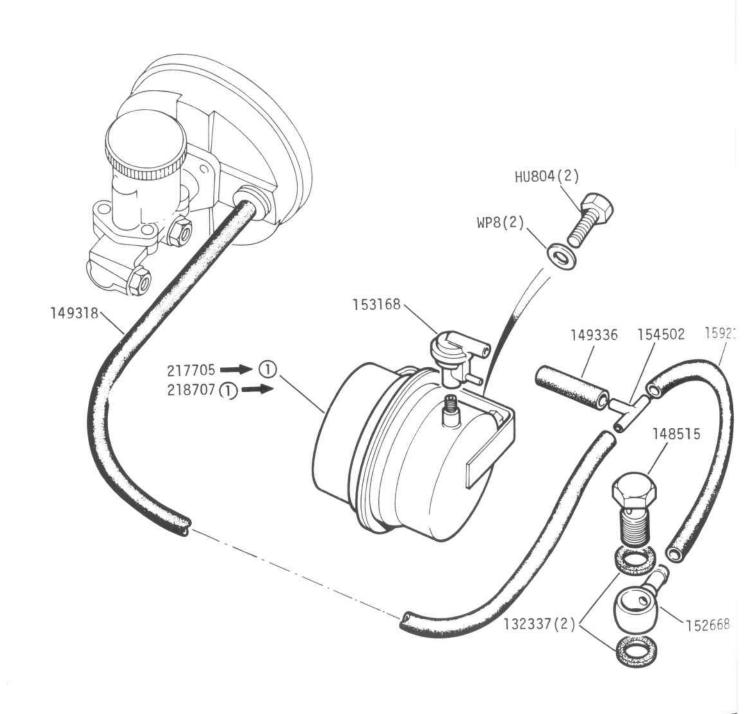



① LD20,000


STAG

04-59

VACUUM PIPES - Air Conditioning ⊕

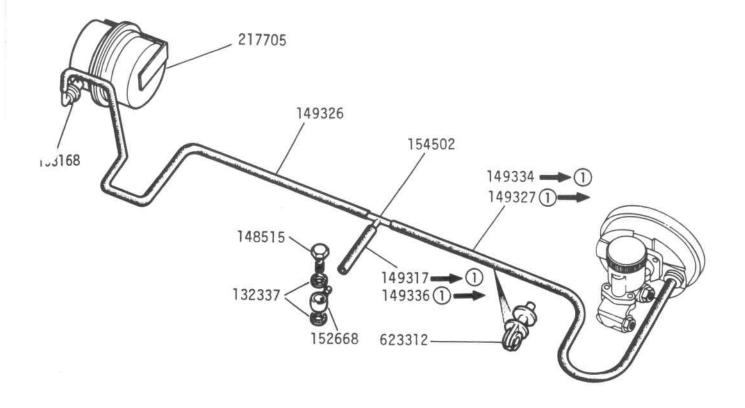

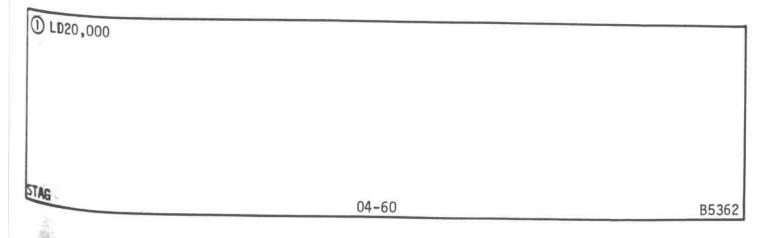


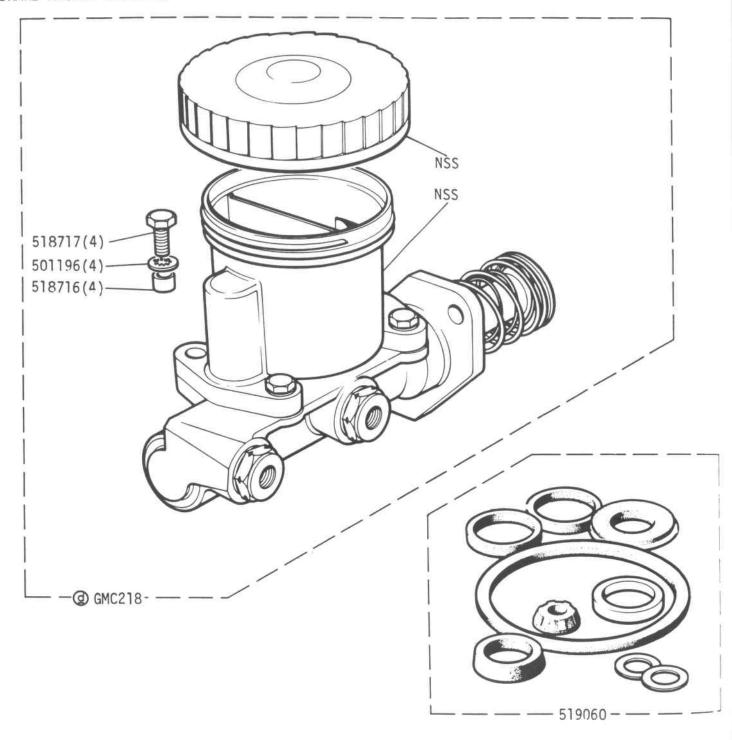


04-61

B5346/1

HYDRAULIC PIPES - Front Brakes

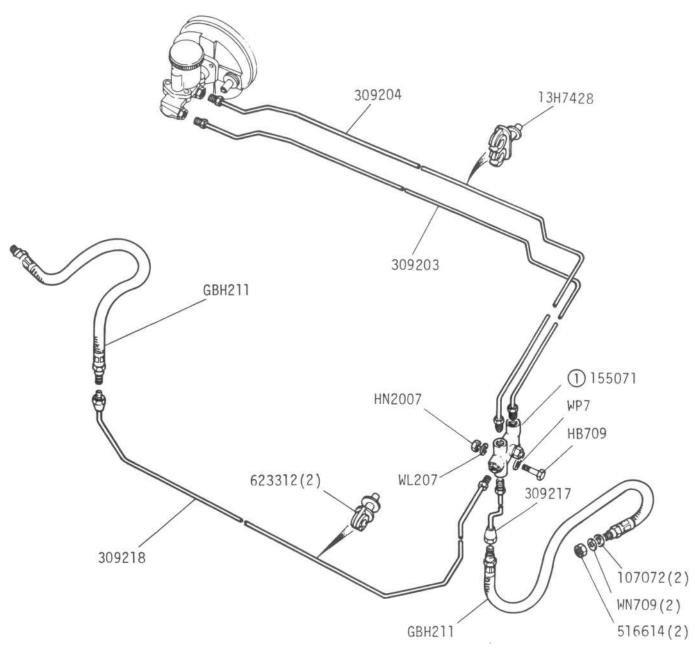

D INCLUDES 149971	BRAKE WARNING DIFF SWITCH.	
TAG	04-62	в5364

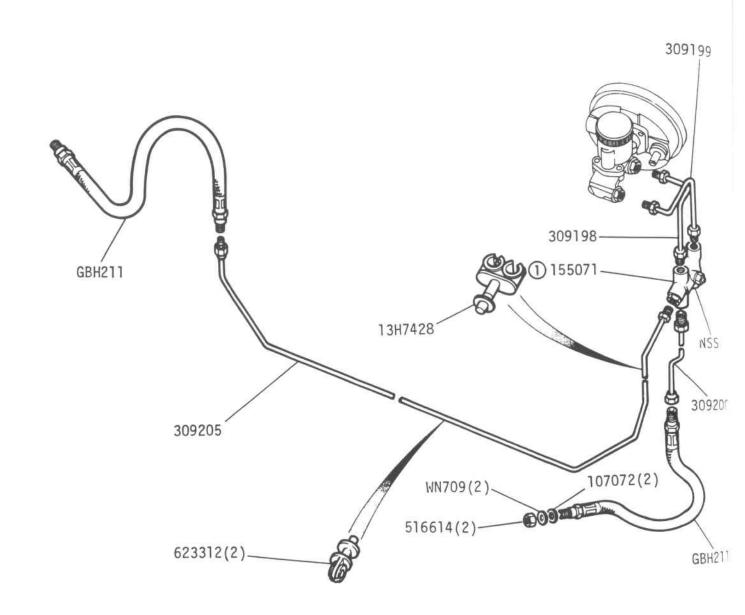


① INCLUDES 149971 BRAKE WARNING DIFF SWITCH.

STAG


O4-63

B53

HYDRAULIC PIPES - Rear Brakes

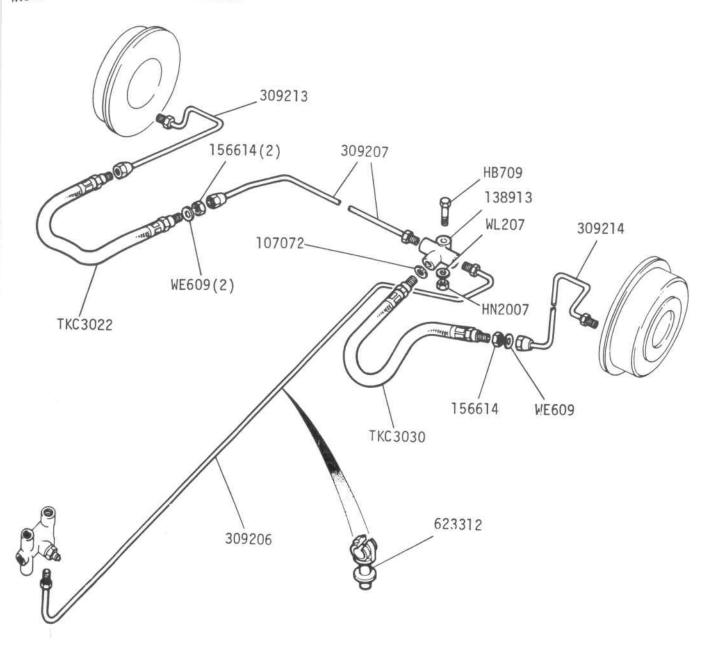


AGE

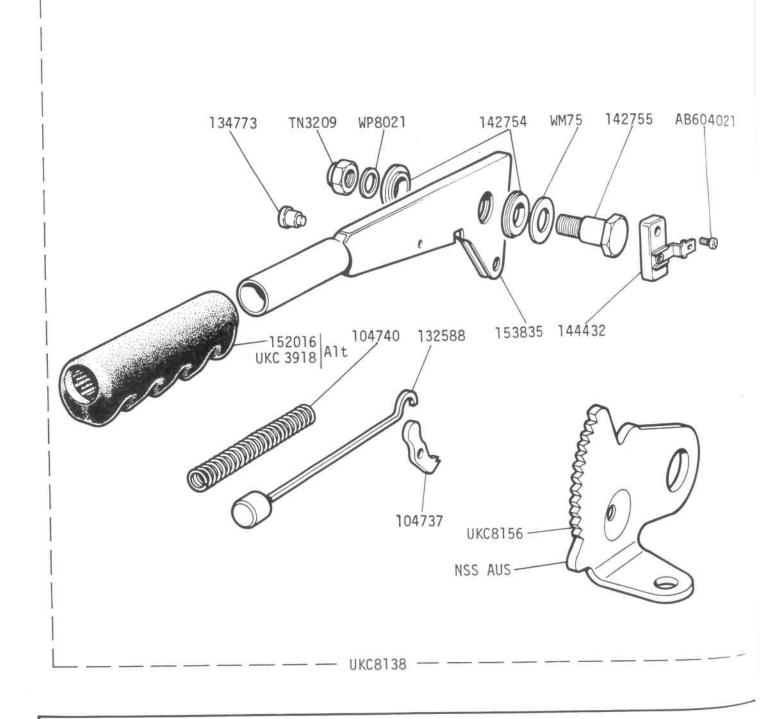


04-71

B533*


HANDBRAKE

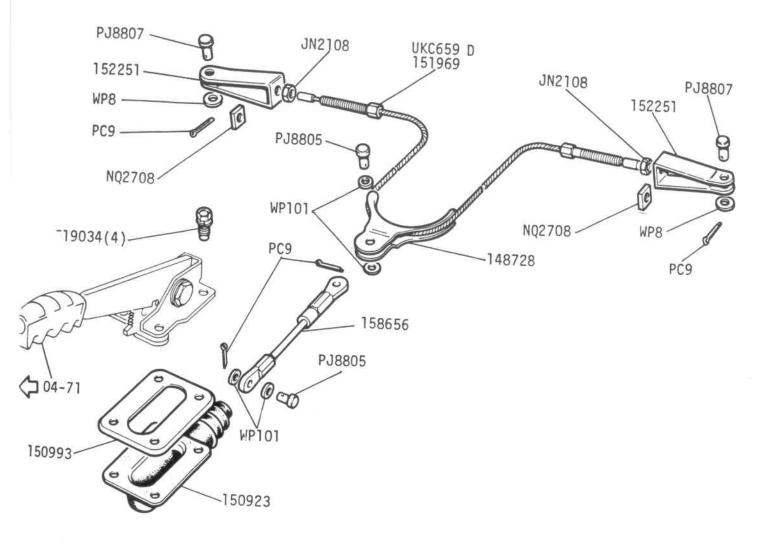


63.

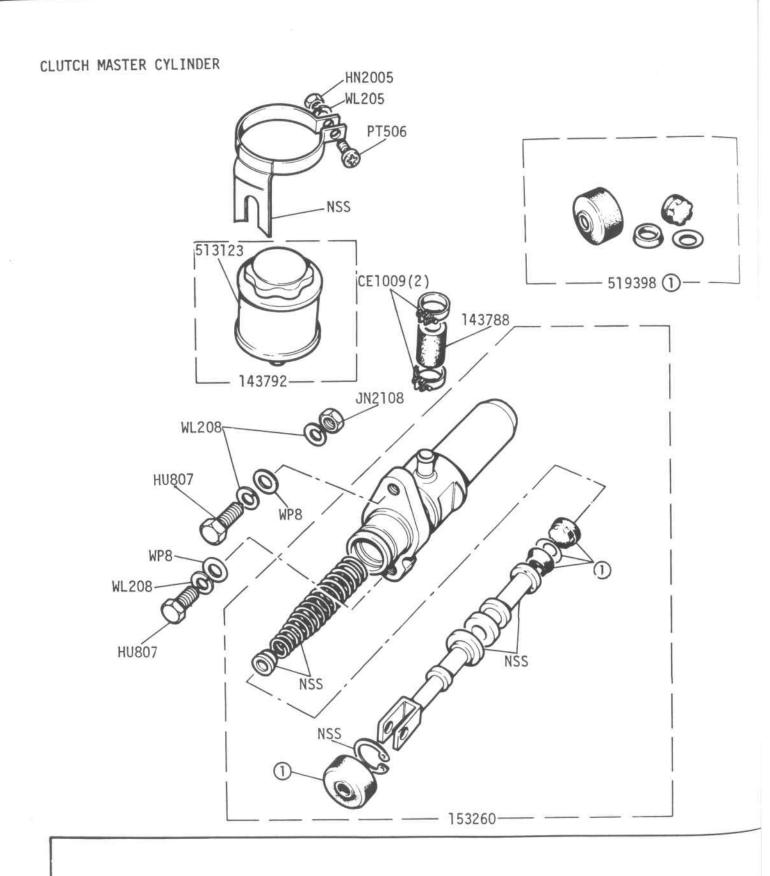

04-73

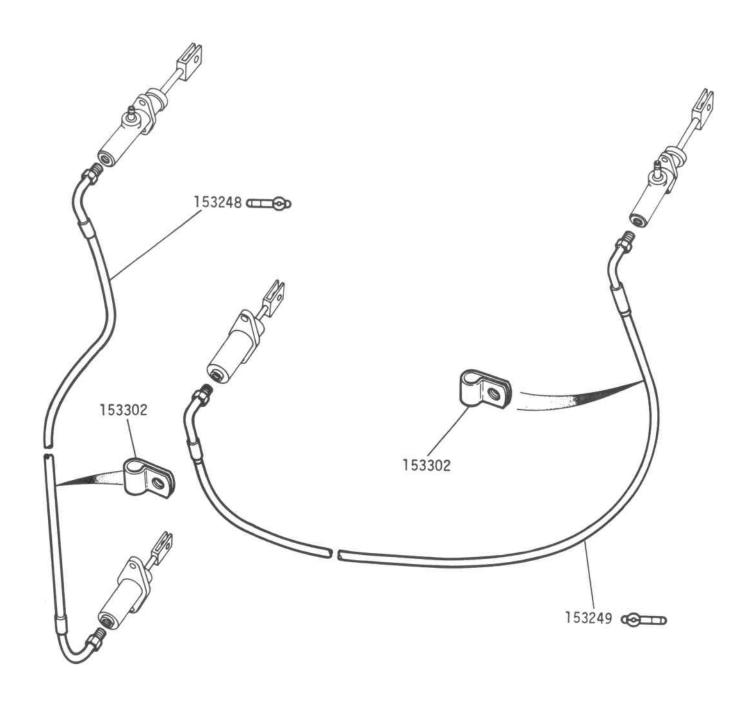


TAG

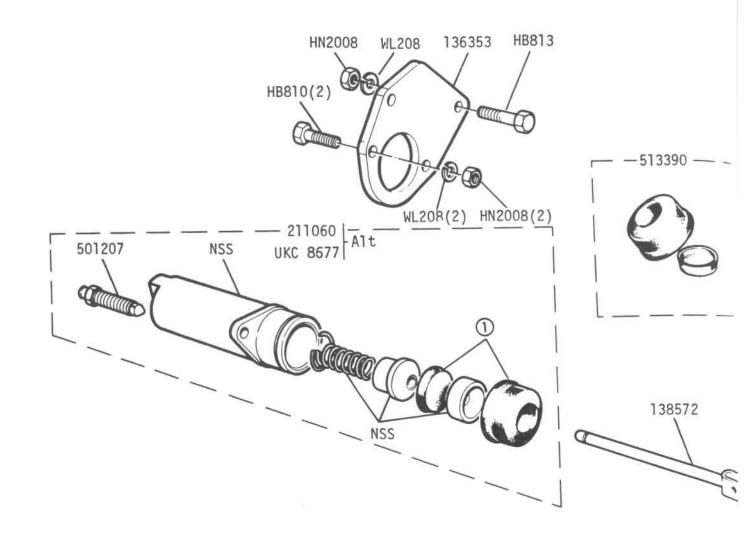

STAG 04-75 B5345


ACCELERATOR PEDAL AND CABLE

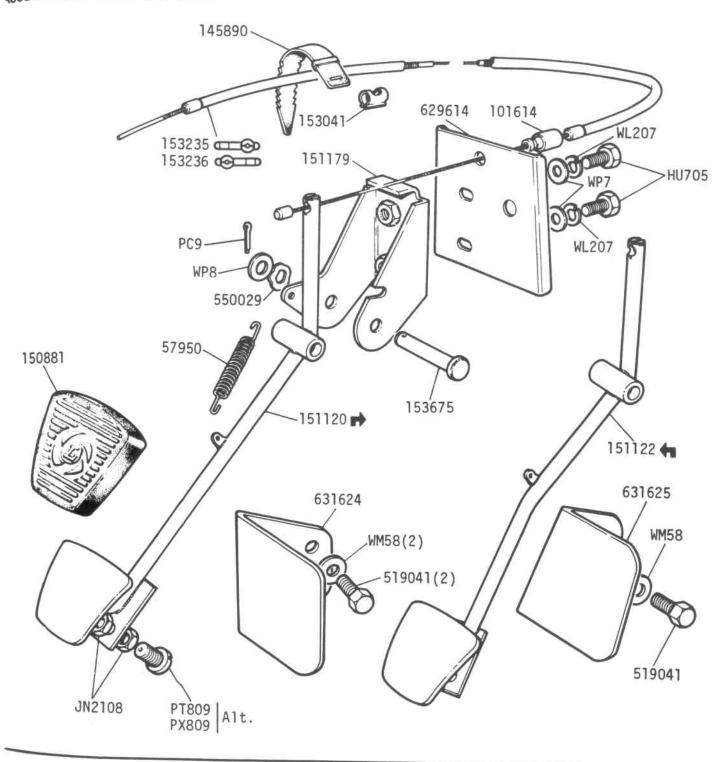

STAGE


04-76

B5358/1

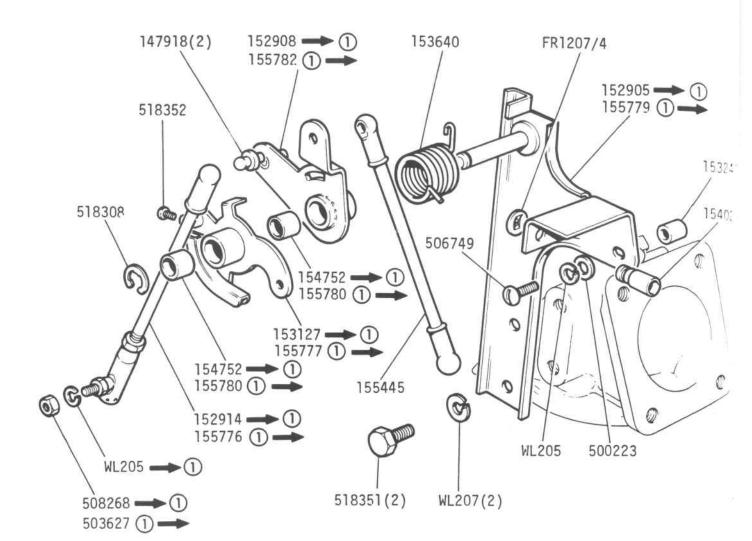




② C 04-78 For Automatic Transmission

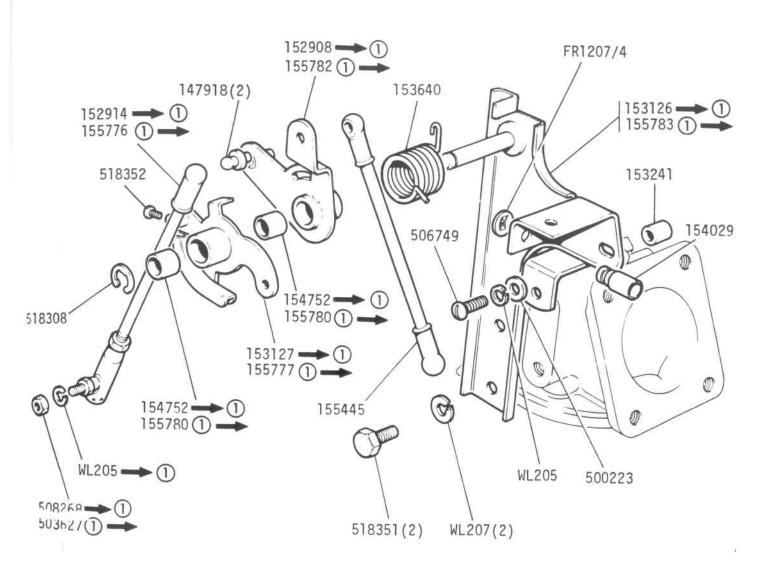


① LF1621E LE917E ② 🗘 04-77 For Manual

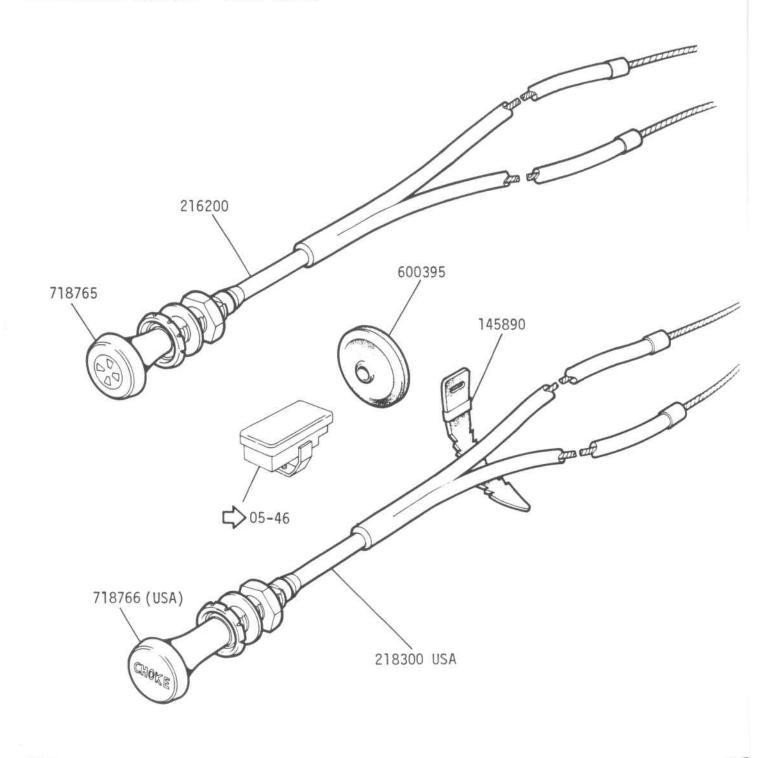

04-79

B5410/



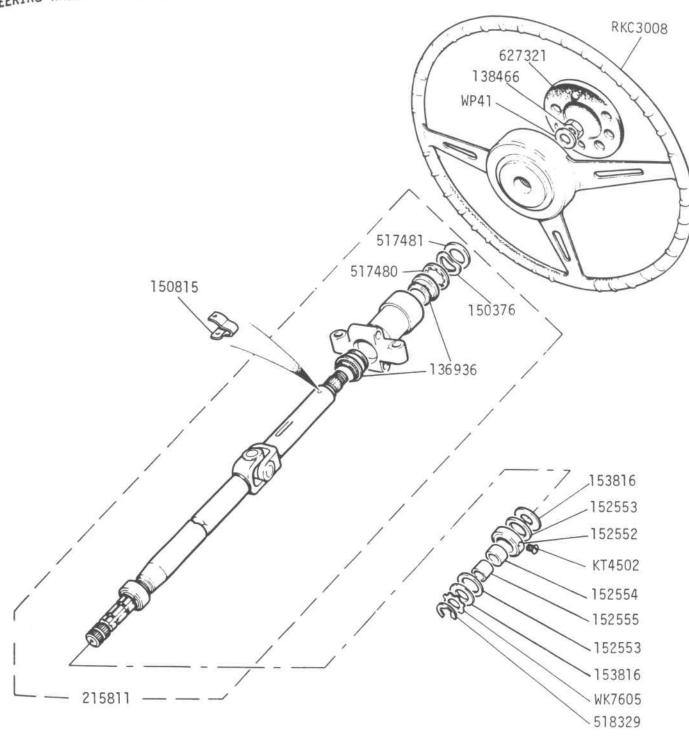

Column Lock G6-29

STAG


04-80


B5350/1

04-81

STAG

STEERING - Rack and Pinion Assy and Lower Shaft

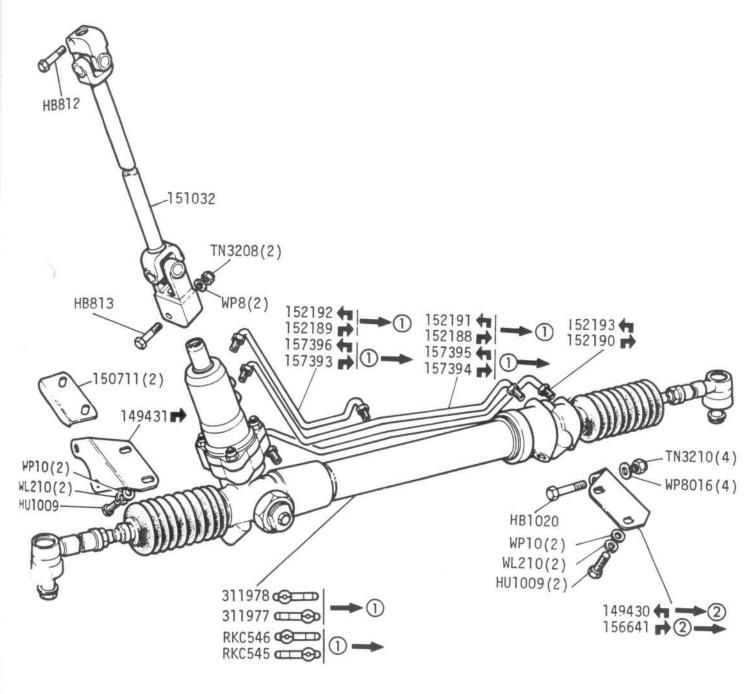

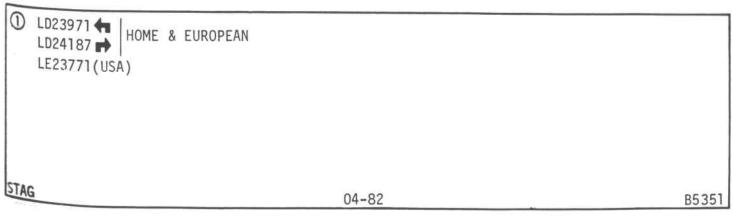


STEERING - Rack and Pinion PAS **9**217788 **9**217788 YN2908(3) WP107(3) _151466(3) 215469 🚥 21547,0 NSS **2**15547 **2**15547 15144-1 518986 -

STAG

04-83

B535.


STEERING - Inner and Outer Ball Joints PAS

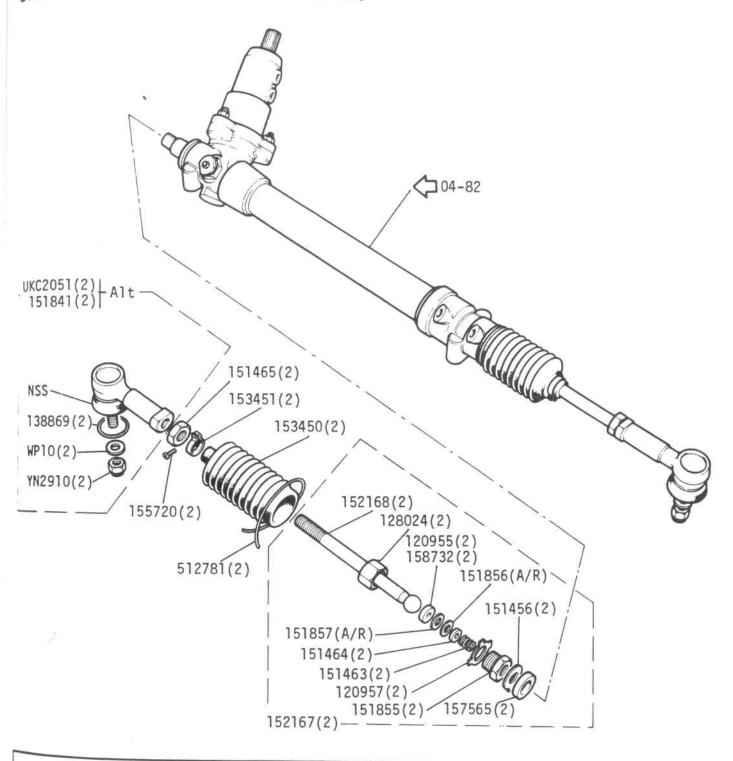

STAG 04-84 B5353

04-85


B600.

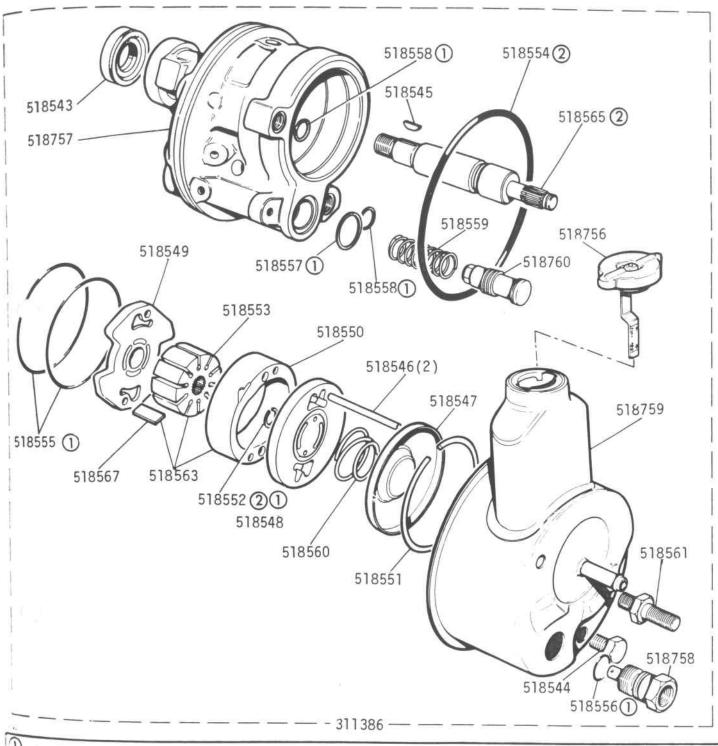


① C→ 05-02

TAG 05-01


B5342

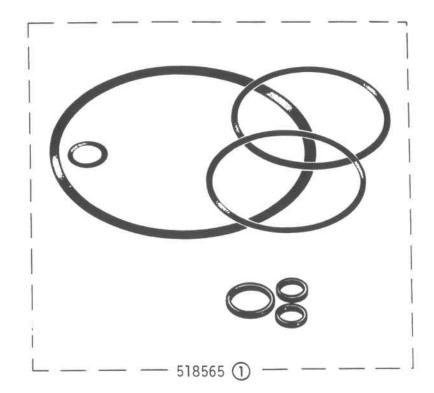

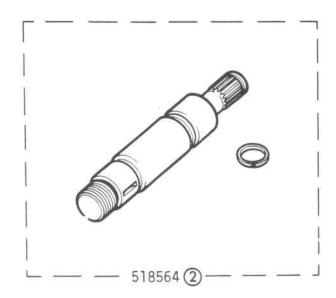


05-02

STEERING - Hydraulic Pump and Pipes

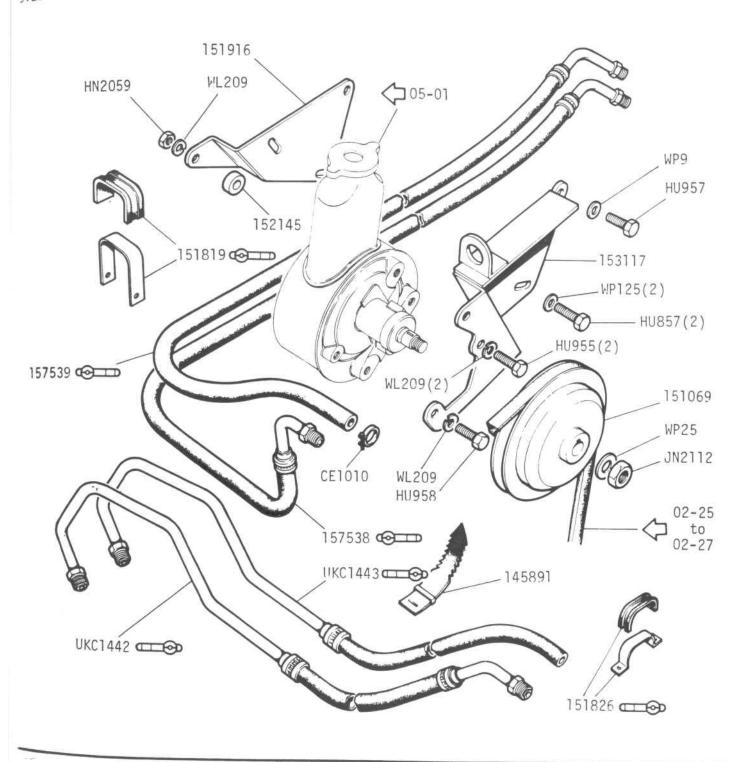


STAG :

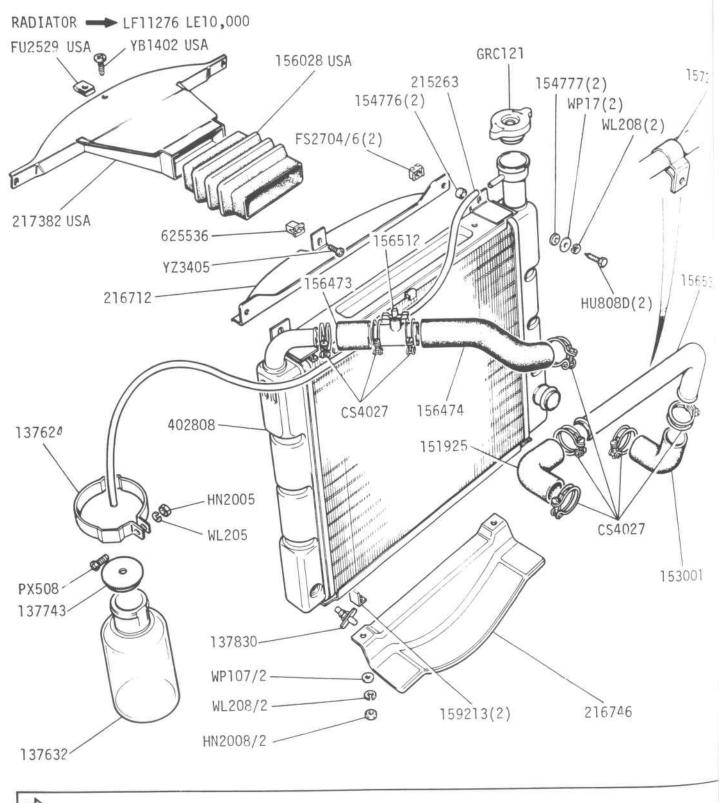


□ 05-05 for future

STAG 05-04 B554c


RADIATOR - LF11277 - 05-04 For Previous

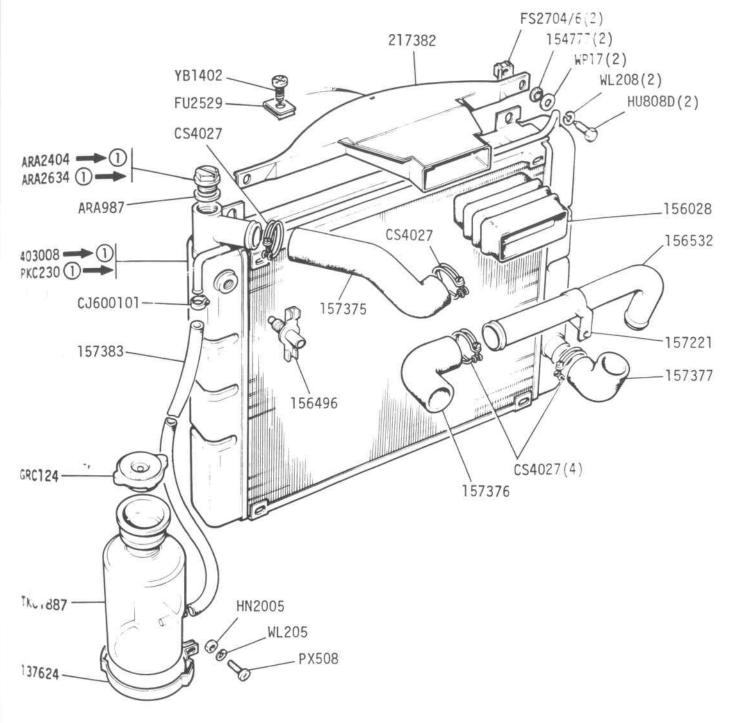


① T36,373		
\$710		
STAG	05-05	B5547/1

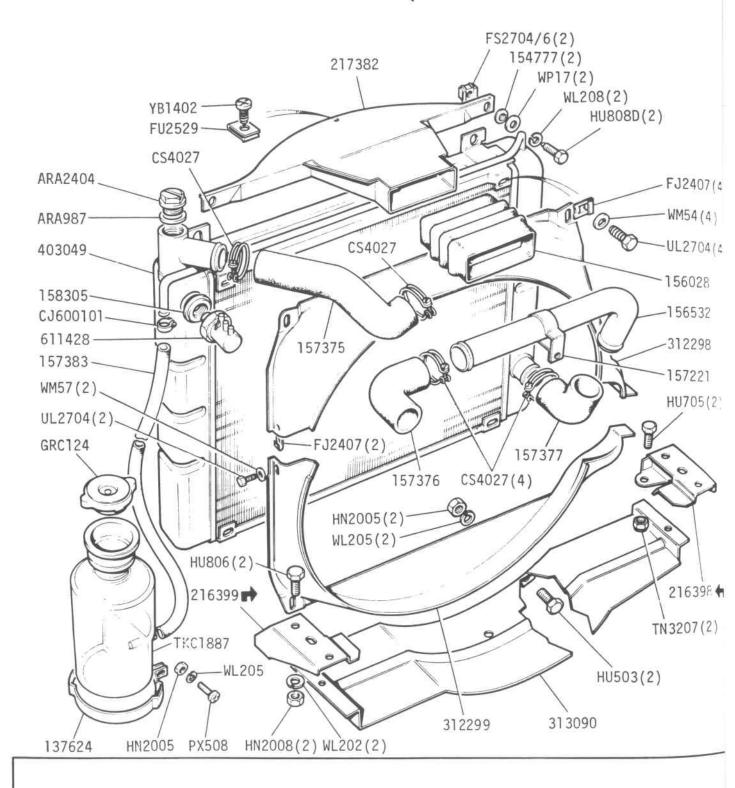

05-06

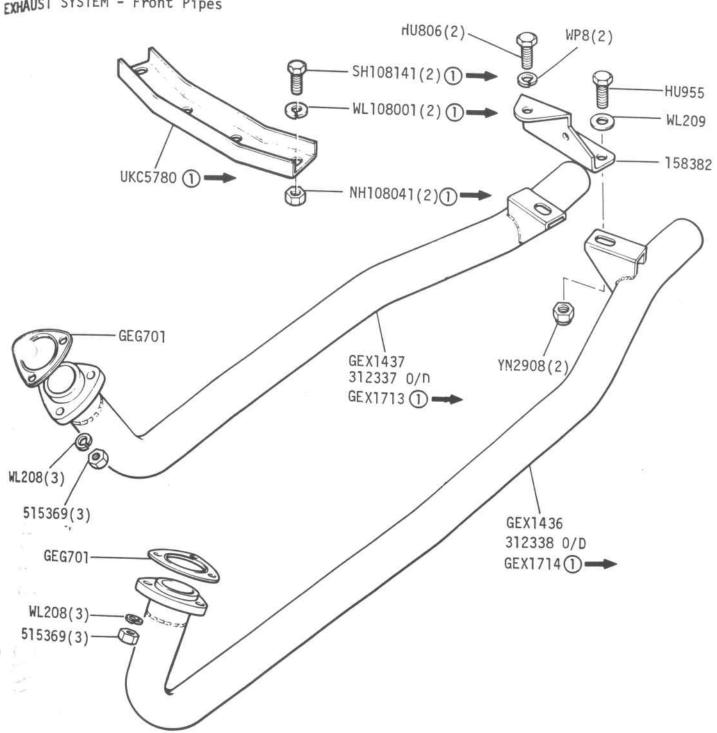


DLD41994 (type 65 Auto	G/Box only)	
e e		
Λ6 ε	05-07	B5455/

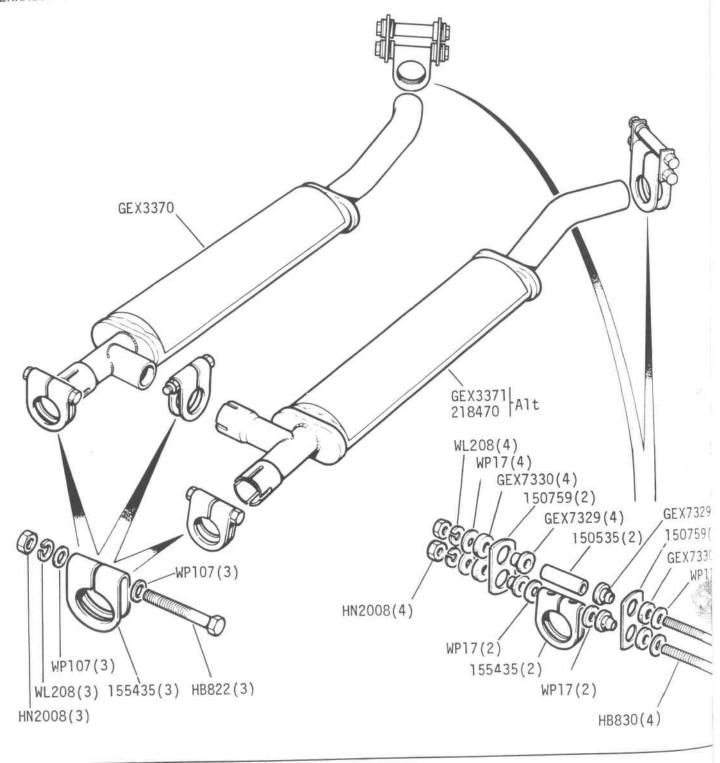



STAG 05-08


2

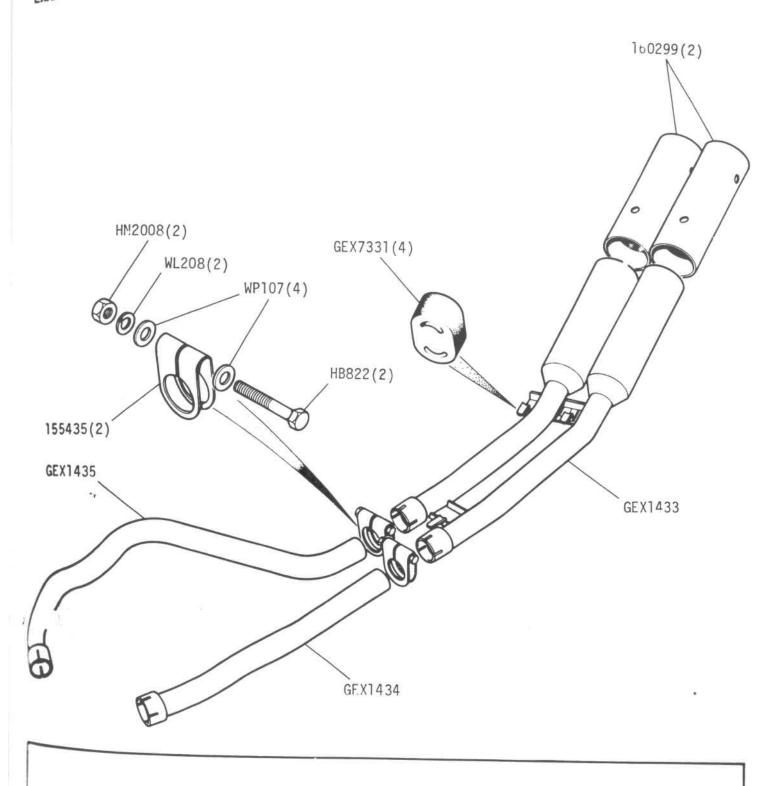


05-09

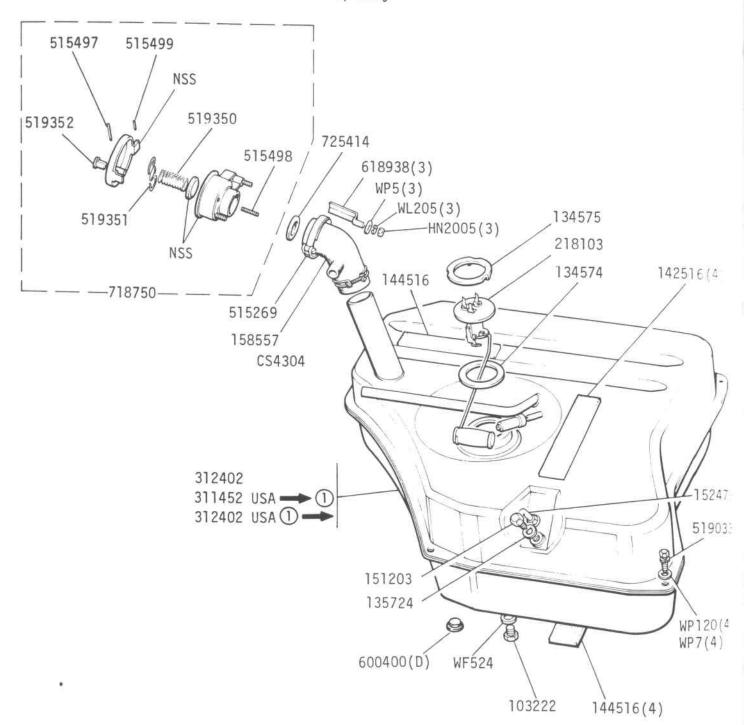

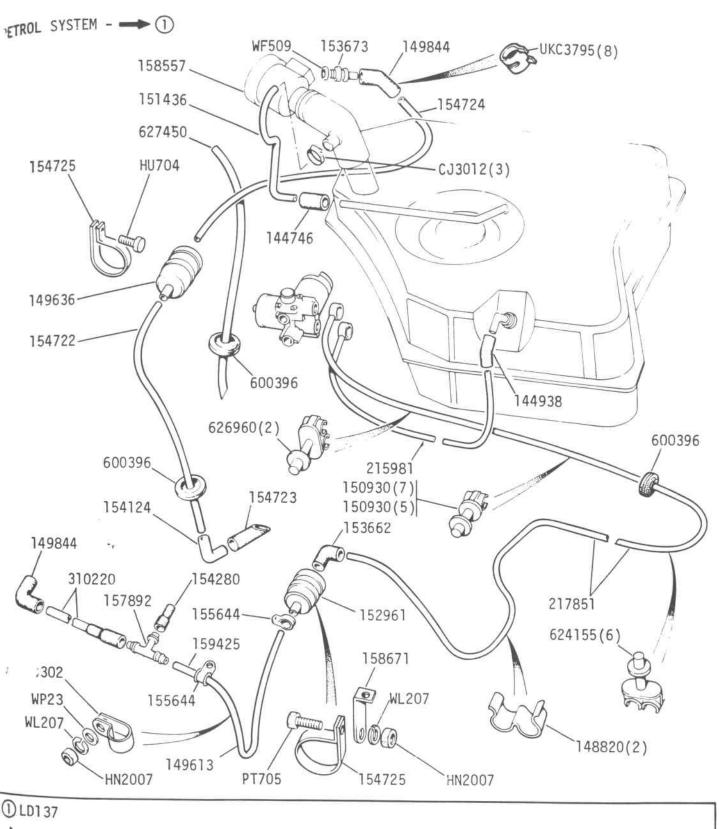


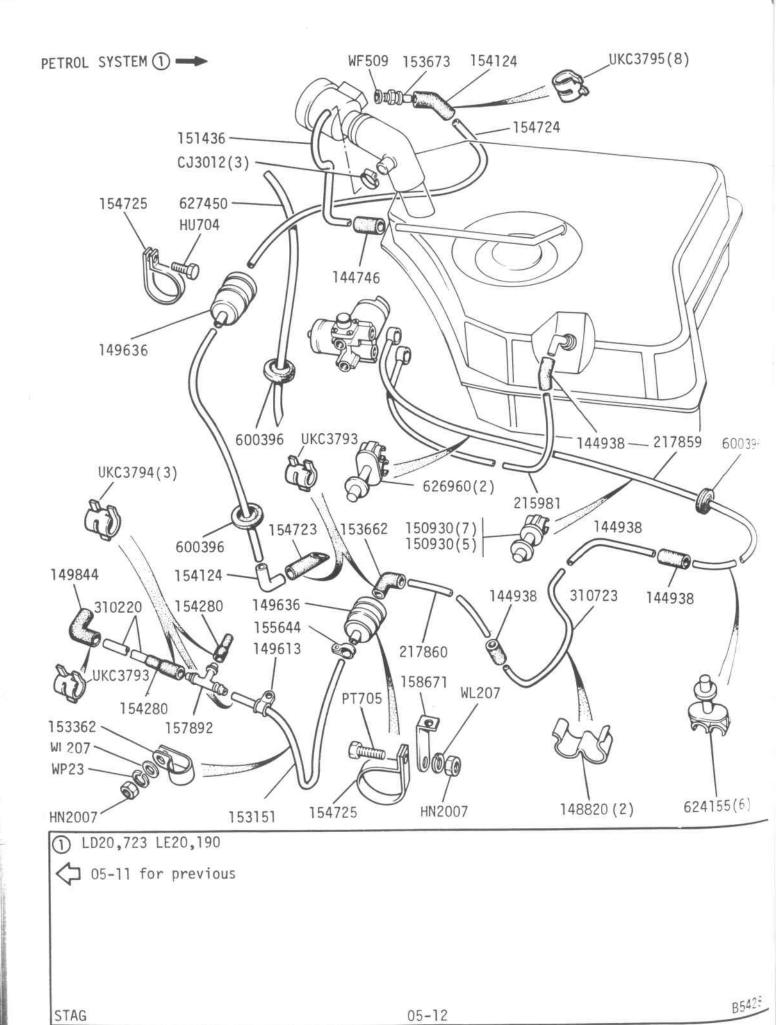


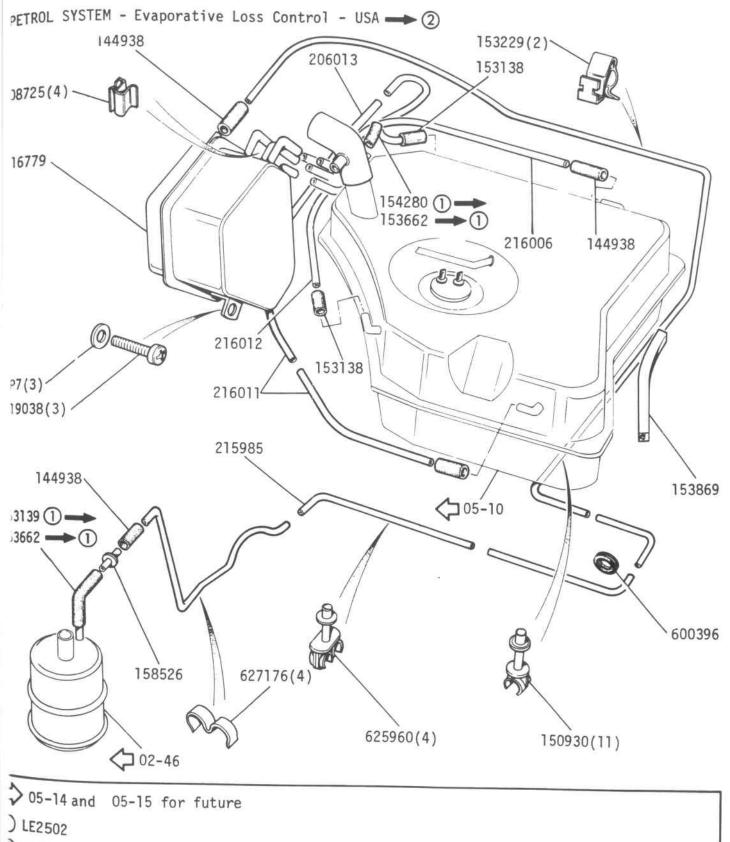



D LE11276


05-13 B5430

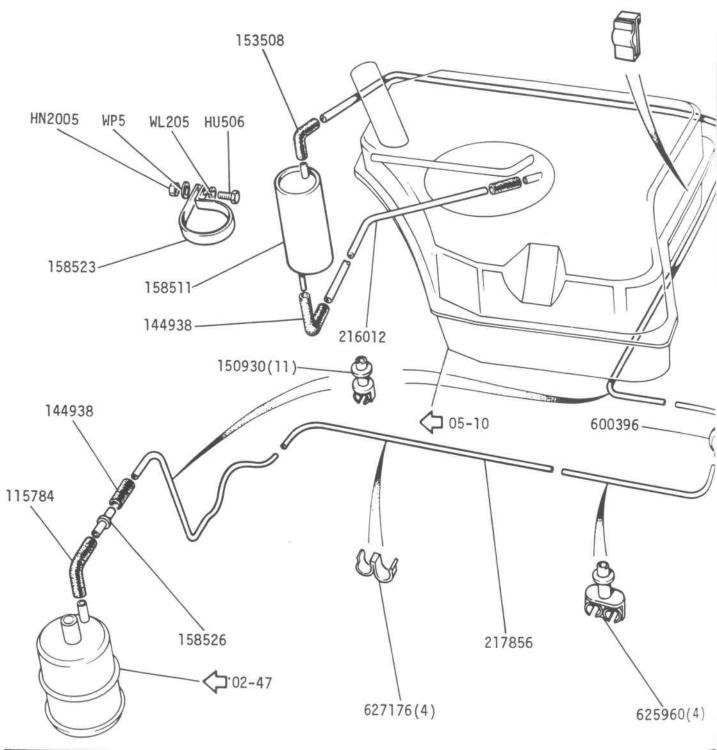


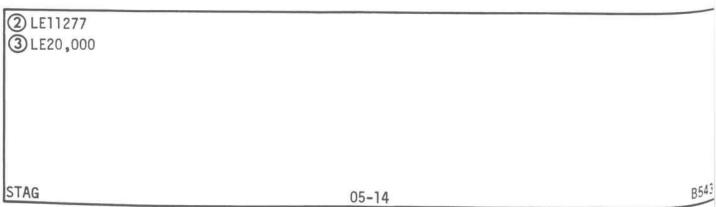

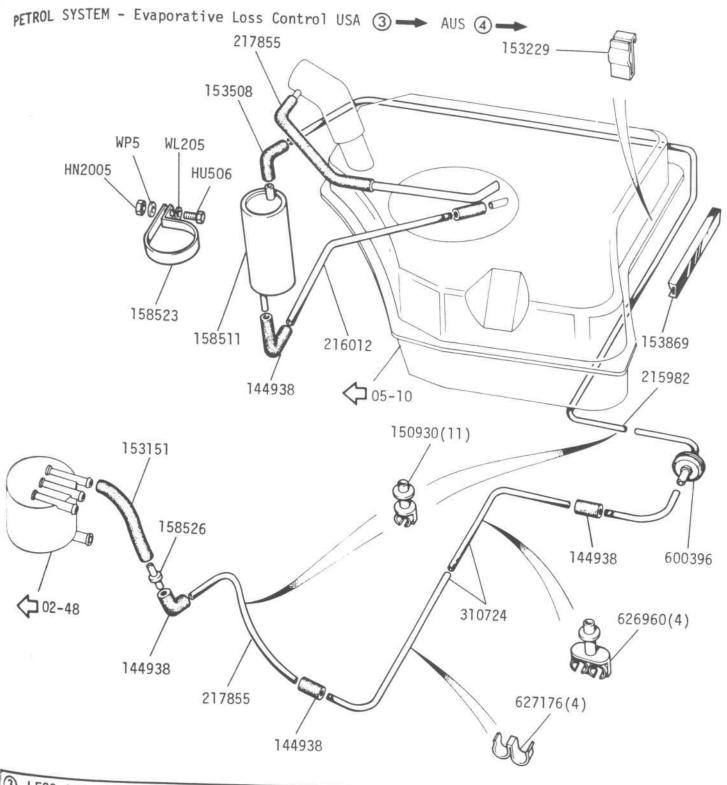


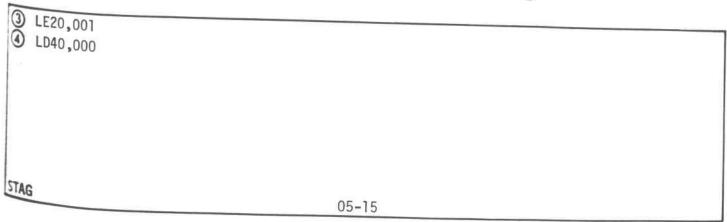

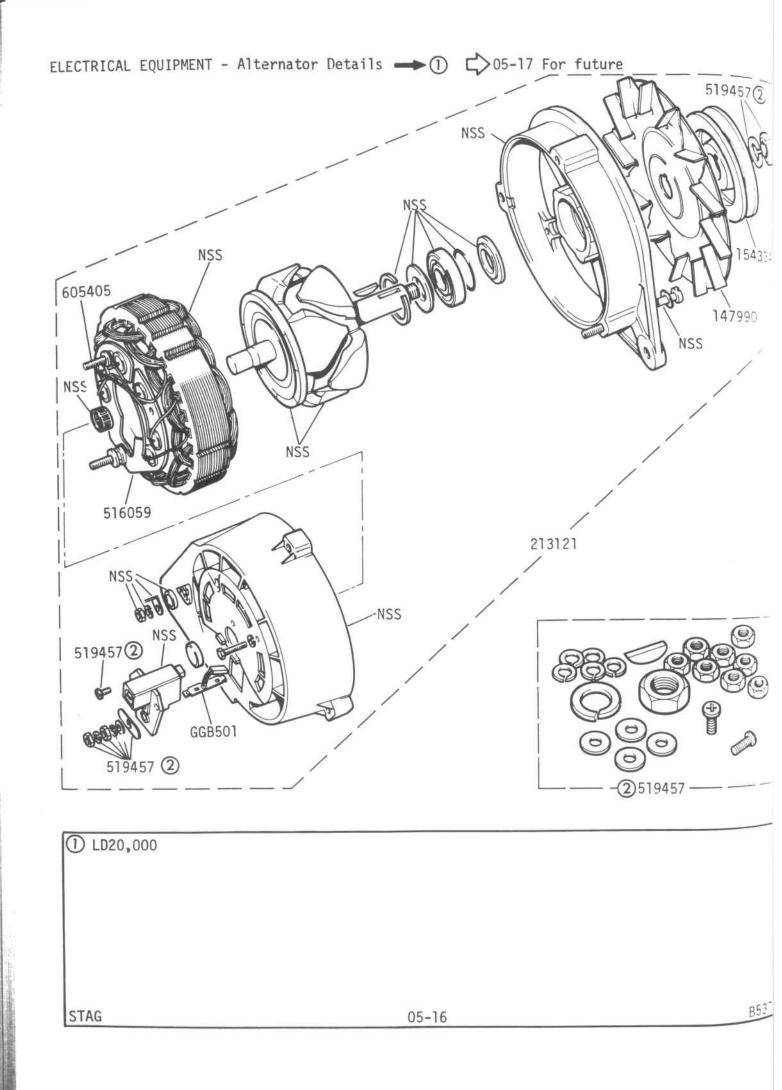


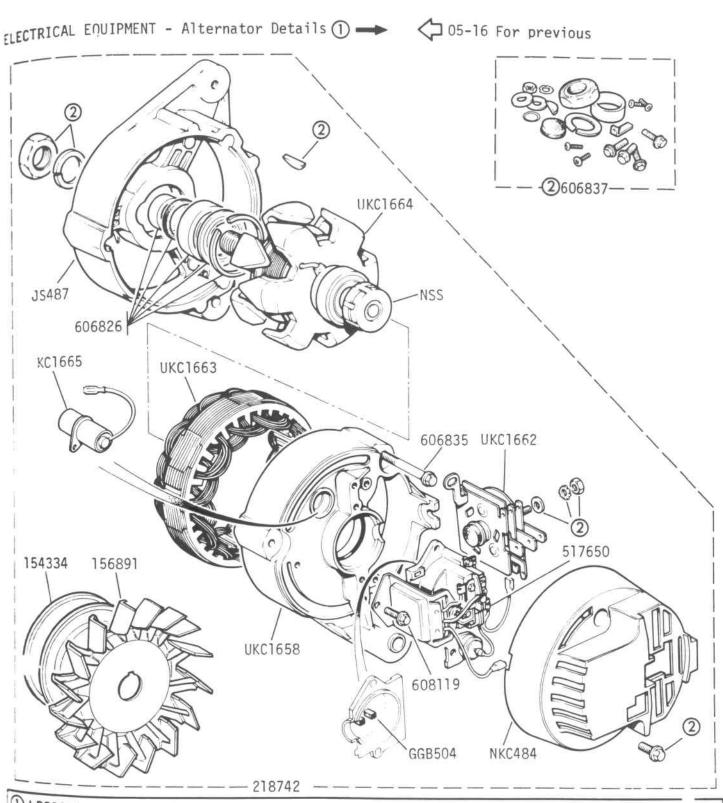


① LD20001

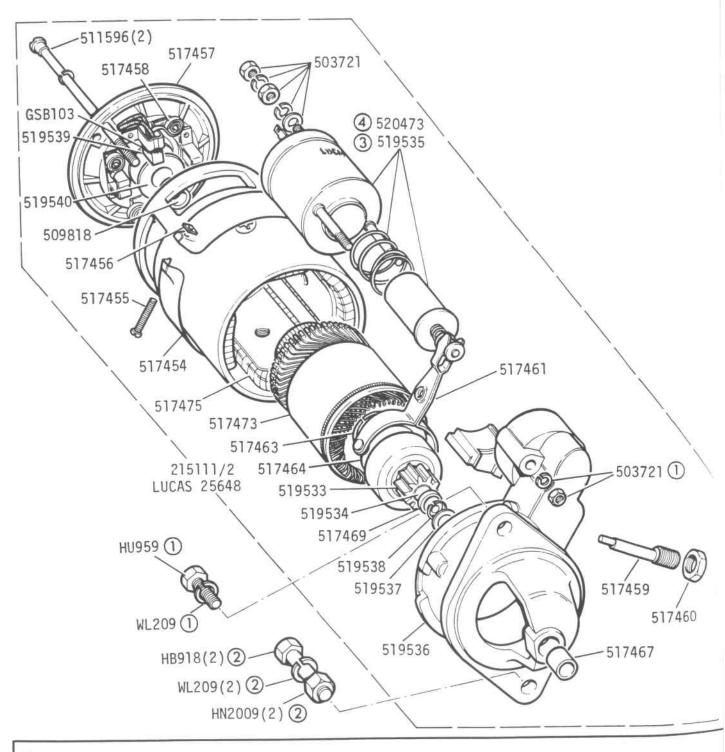

- 1 Manual Transmission
- ② Automatic Transmission
- ③ Suitable for 215111 (Lucas 25627)
- (4) Suitable for 215111/2 (Lucas 25648)

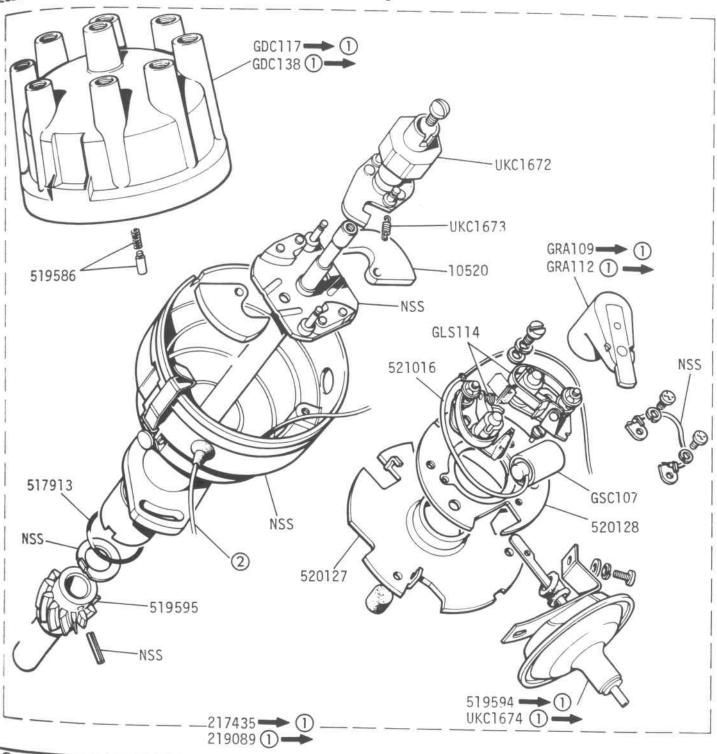

①LF 20,000 E ②521016 Low Tension Lead Kit □ 05-22 for □ □ □ ○ STAG 05-21 B5367

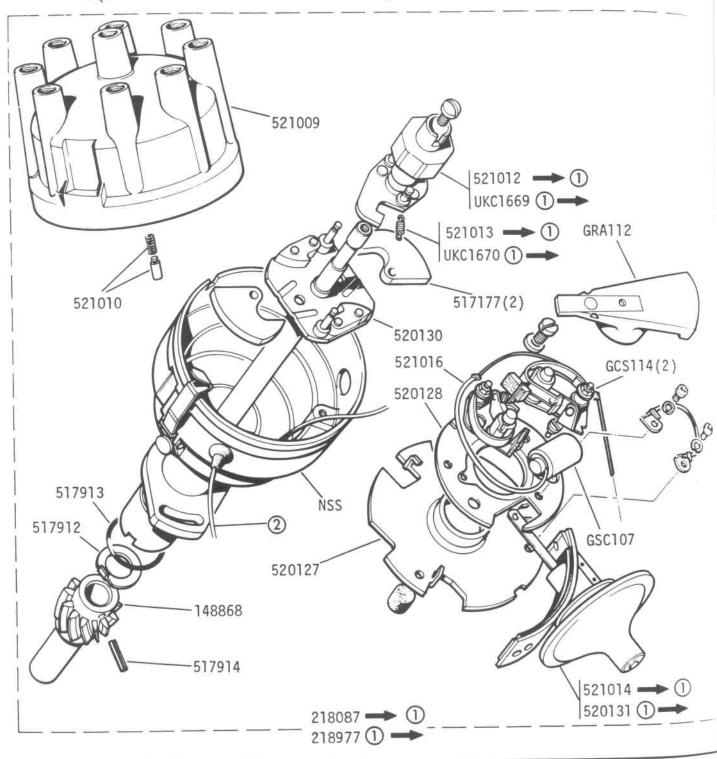

① LE 20,000 UE


2 521016 Low Tension Lead Kit

05-21 for □ ◆

STAG


05-22

ELECTRICAL EQUIPMENT - Coil, Leads and Plugs

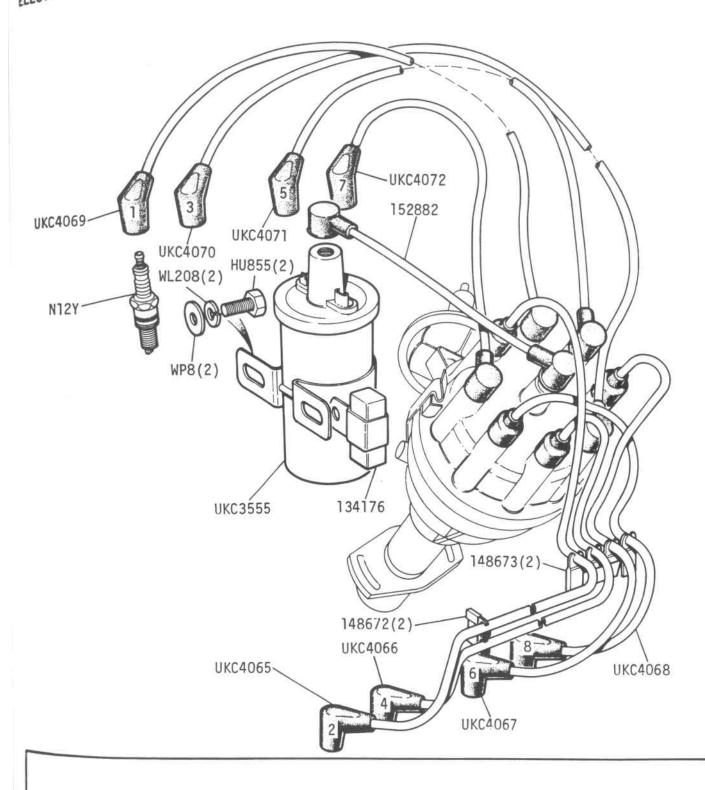

STAG


05-23

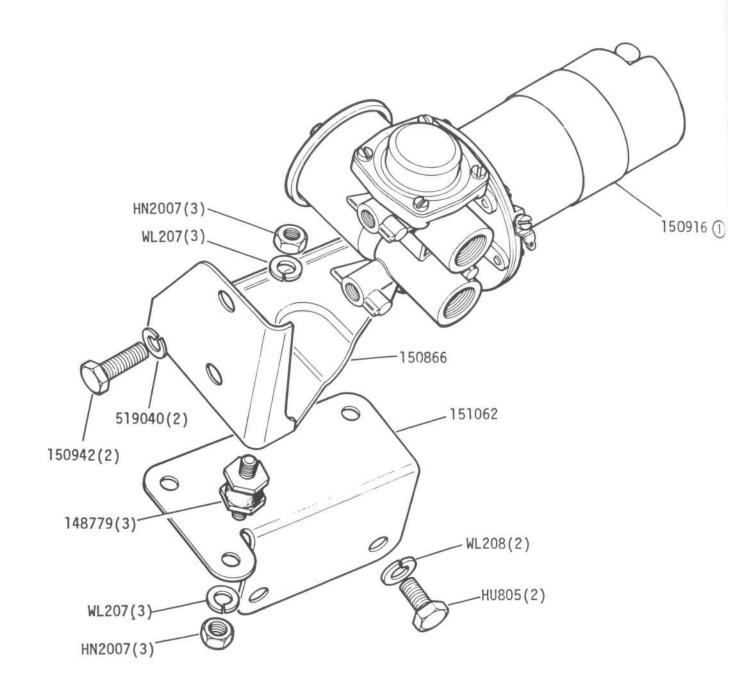

① □ ○ 05-25 For Breakdown


STAG 05-24 8535


ELECTRICAL EQUIPMENT - Petrol Pump Details

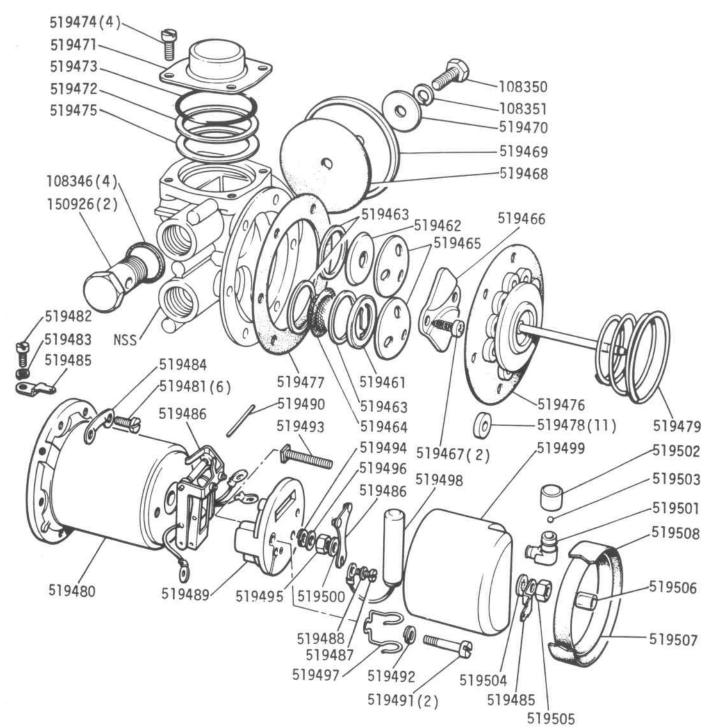


□ 05-24 For Assembly

 
105-25 B5356/1

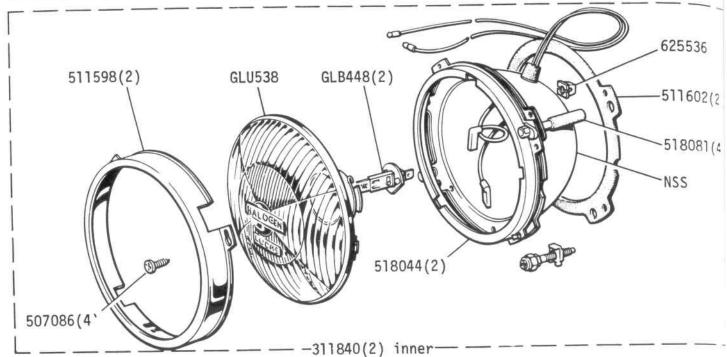


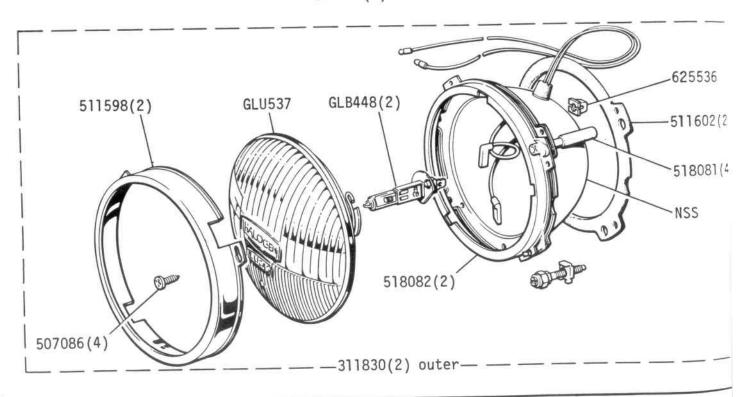






05-26

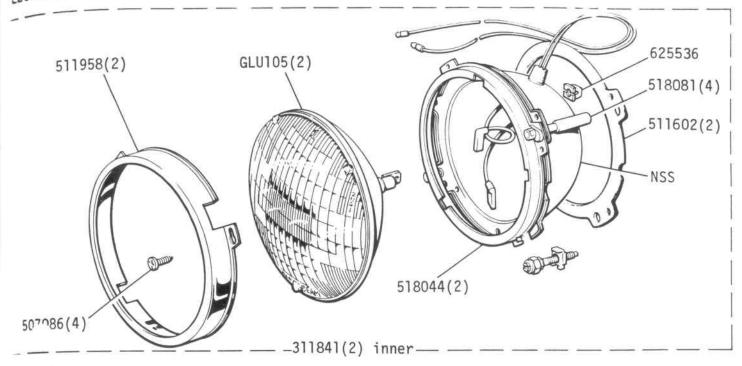


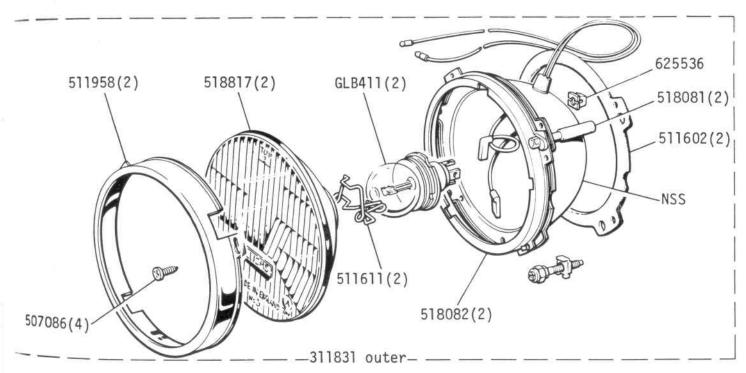

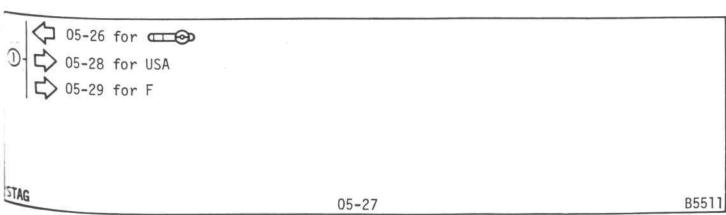


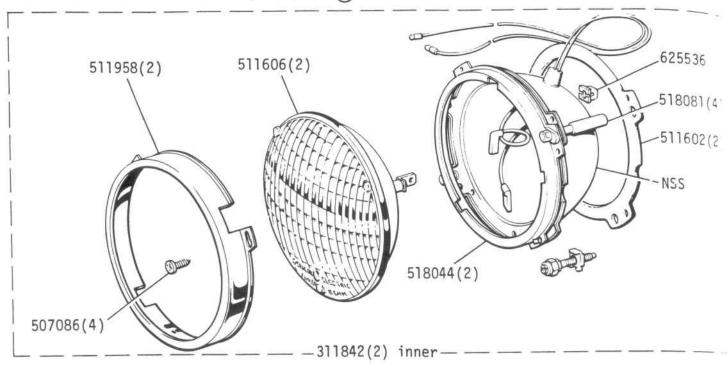


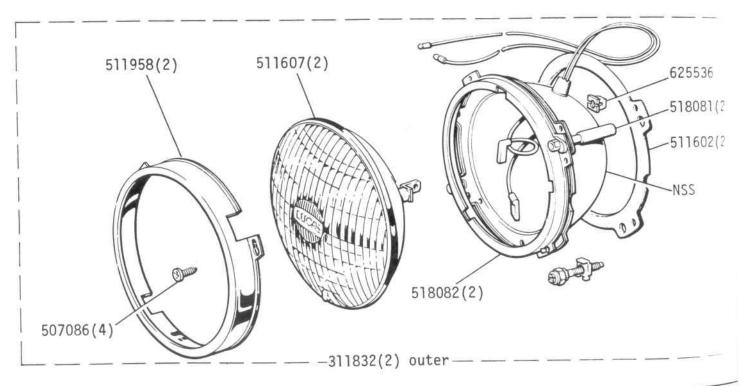 





05-28

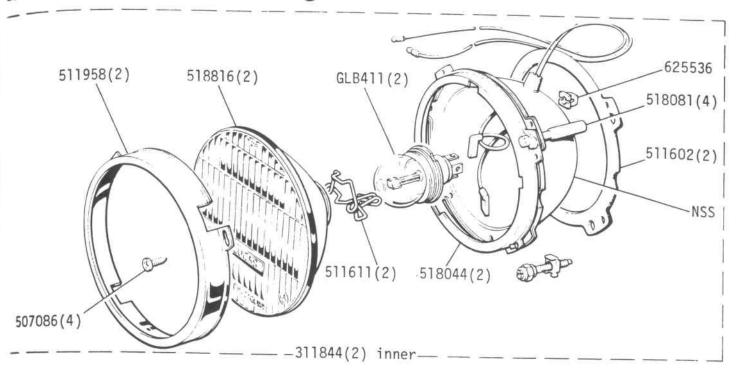


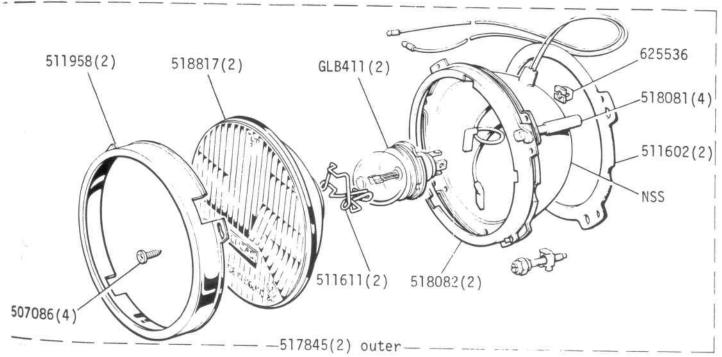


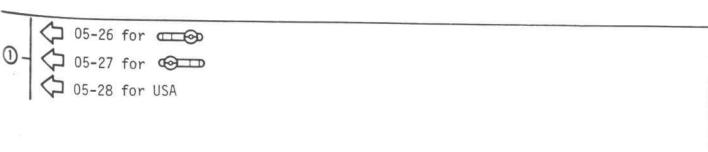


TAGES

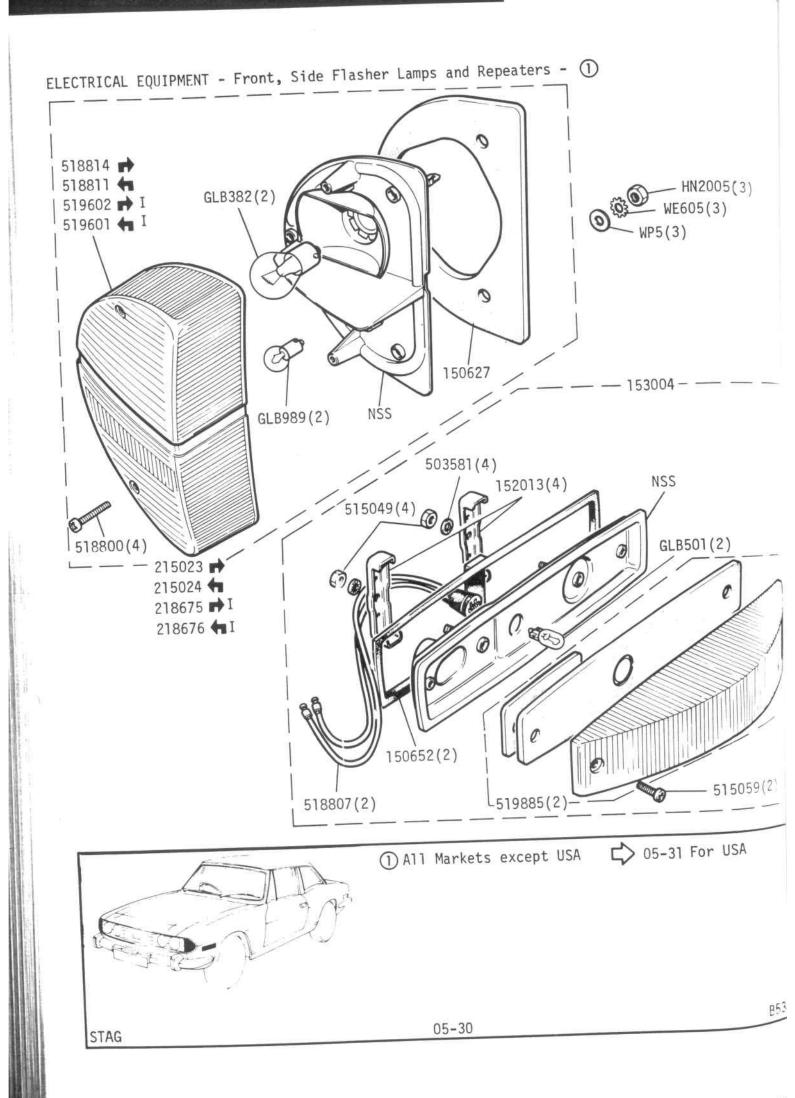


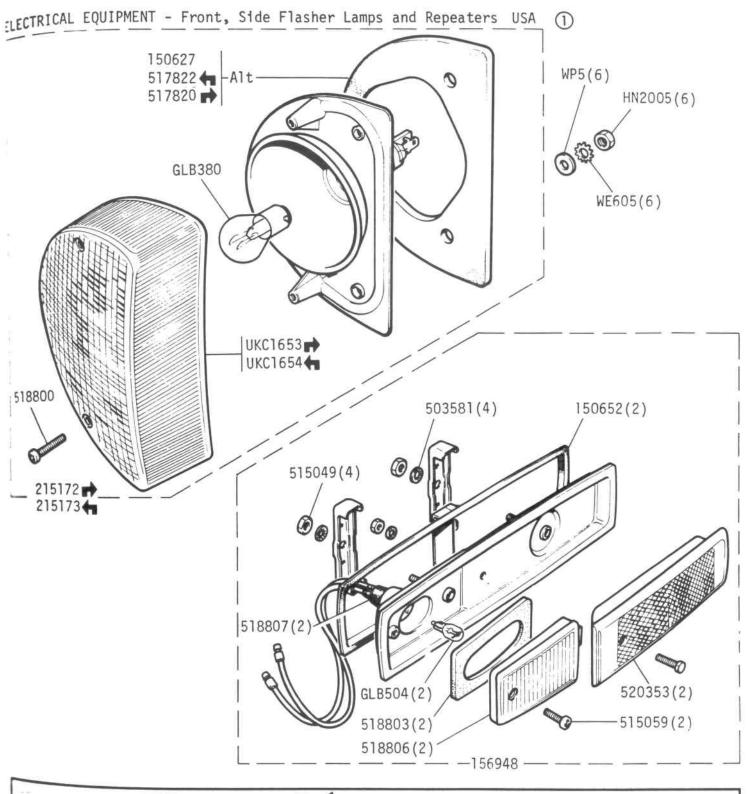


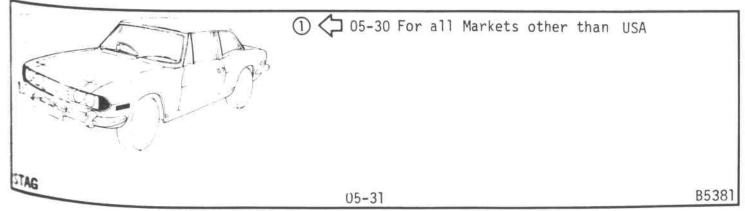

ELECTRICAL EQUIPMENT - Stop/Tail/Flasher and Reverse Lamps ②

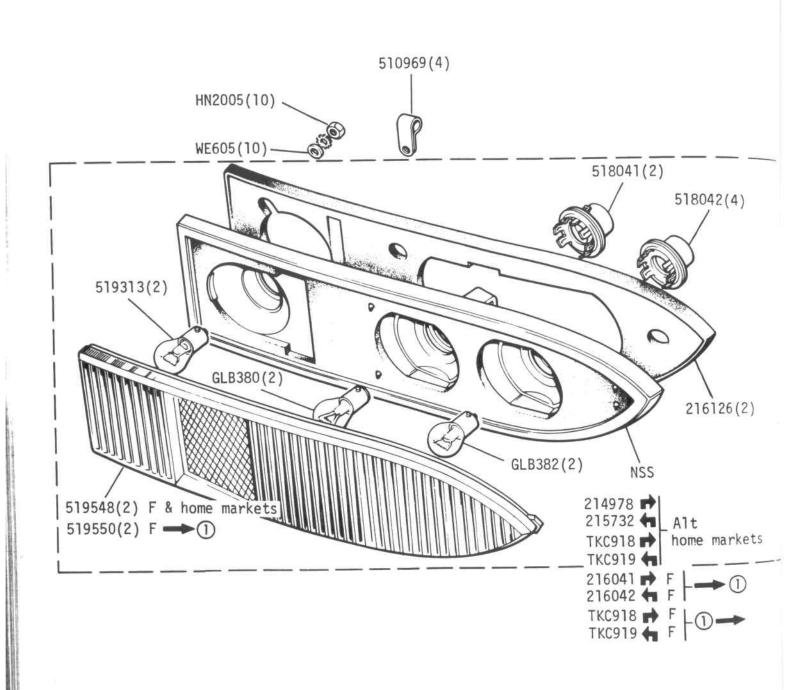


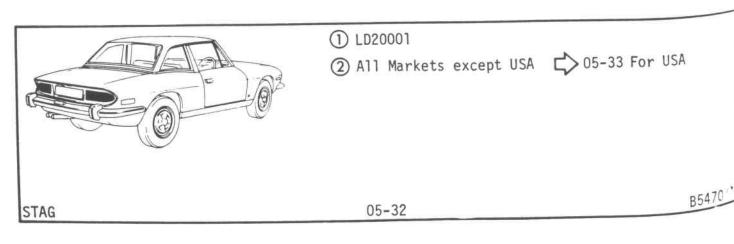

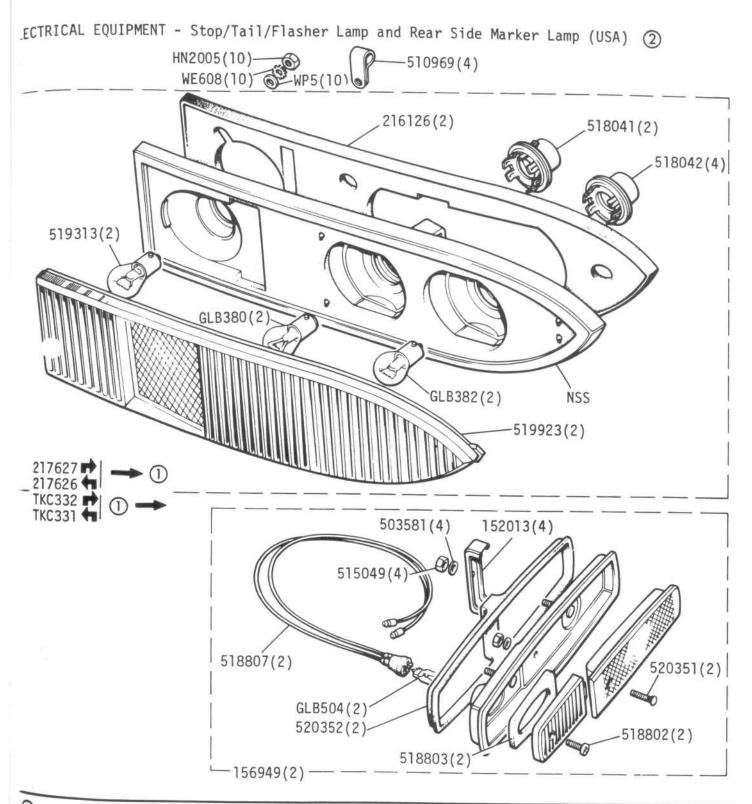



① LE20001

② ← 05-32 For all Markets except USA

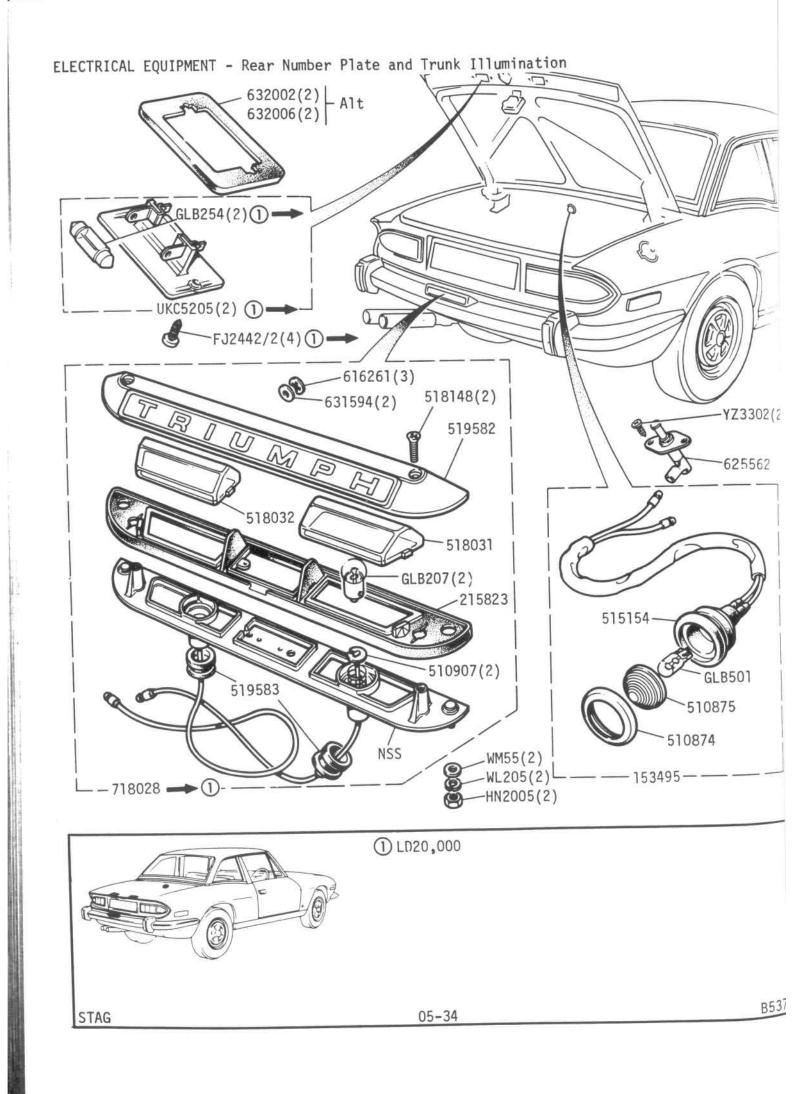


ELECTRICAL EQUIPMENT - 'B' Post Lamp and Arm Rest Puddle Lamp

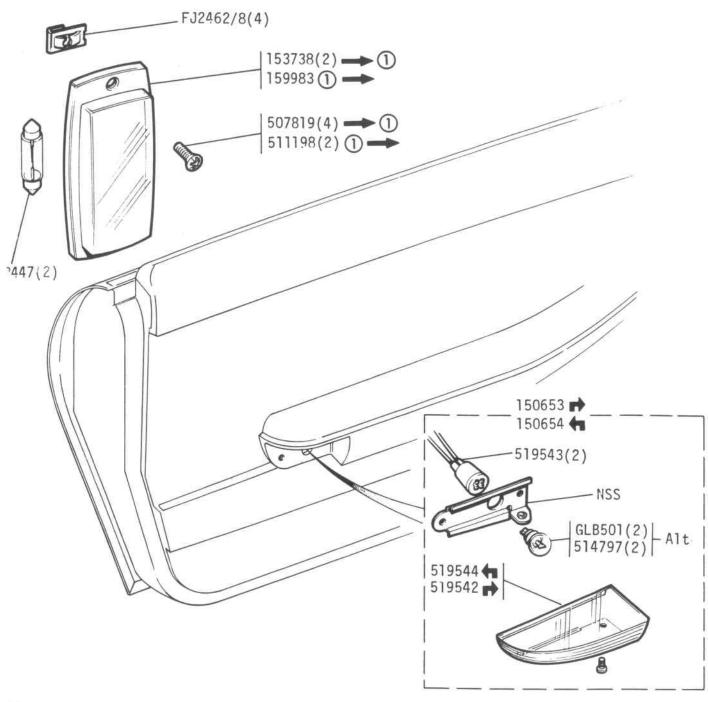

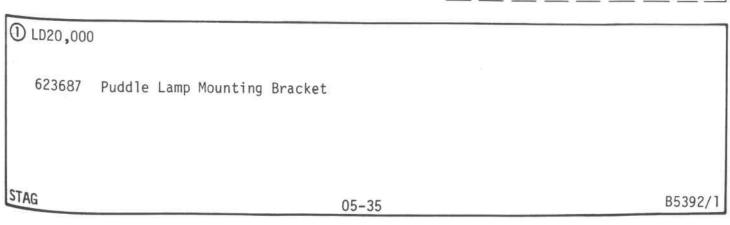

ELECTRICAL - Windscreen Wiper Motor Assy

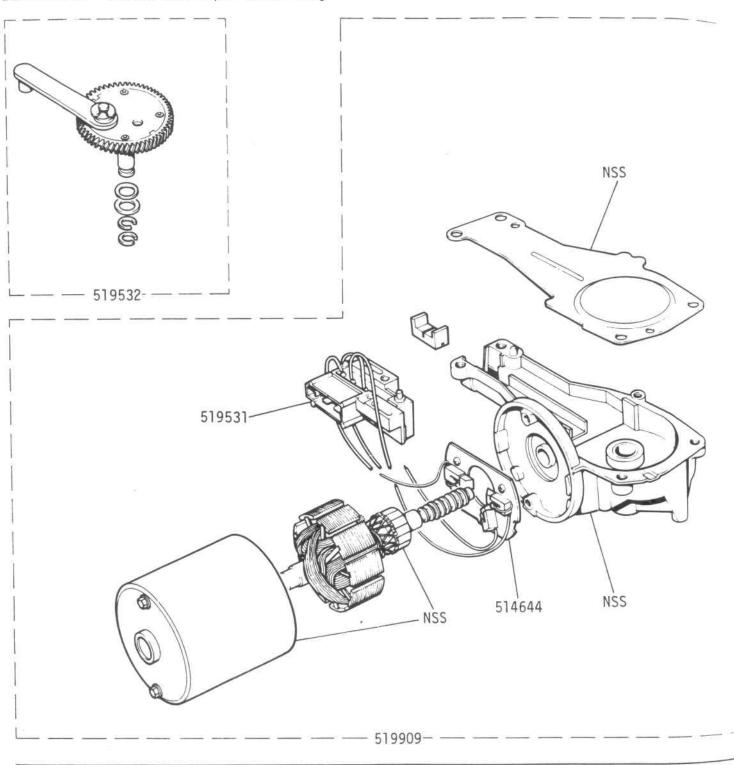



STAG


05-36

B5386/1

CTRICAL EQUIPMENT - Wiper Arms and Blades

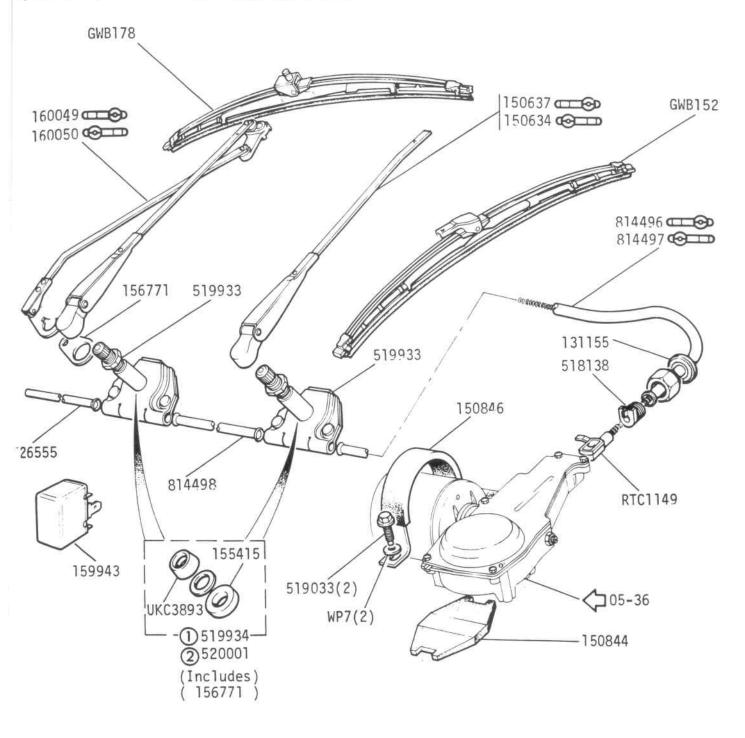

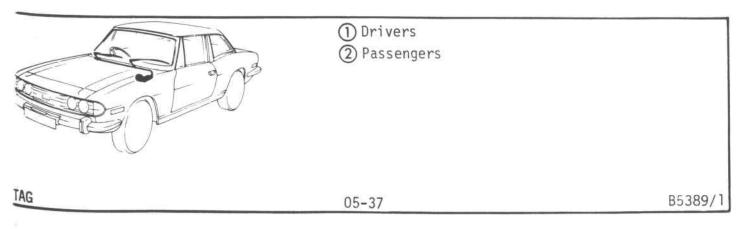


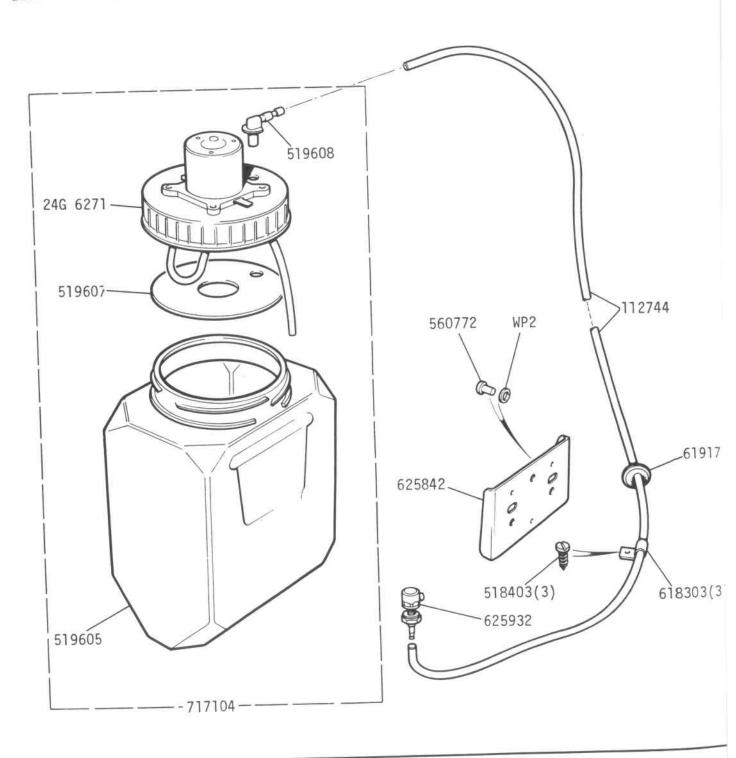



AAU 8845 MOTOR INTRODUCED TO SERVICE TUDOR WASHER BOTTLES FITTED ON LATER MODELS.

STAG

ELECTRICAL EQUIPMENT - Window Lift Regulator

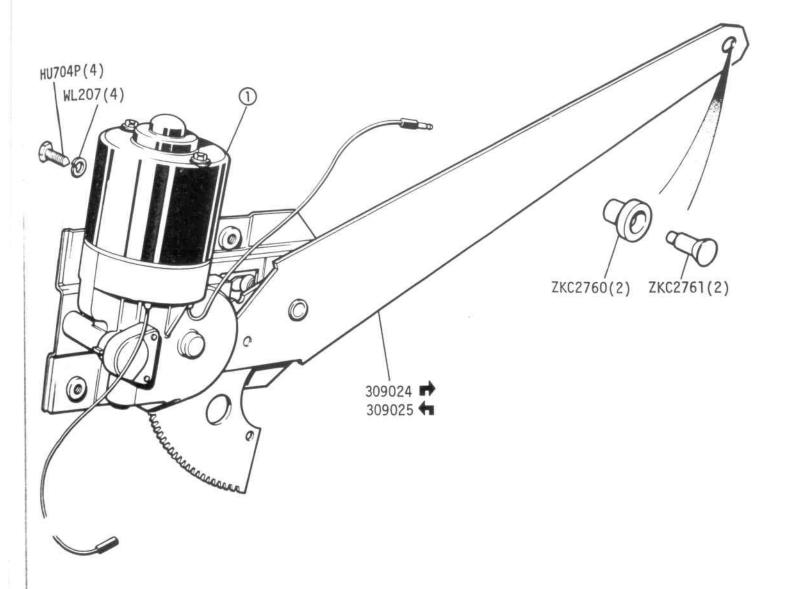

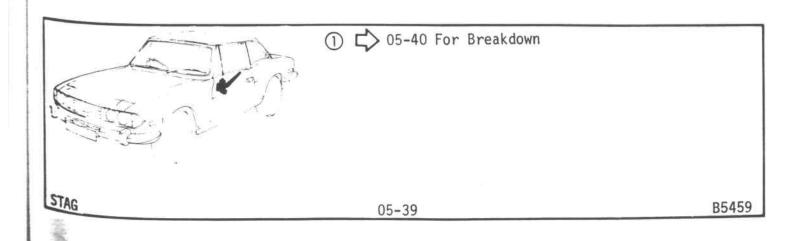


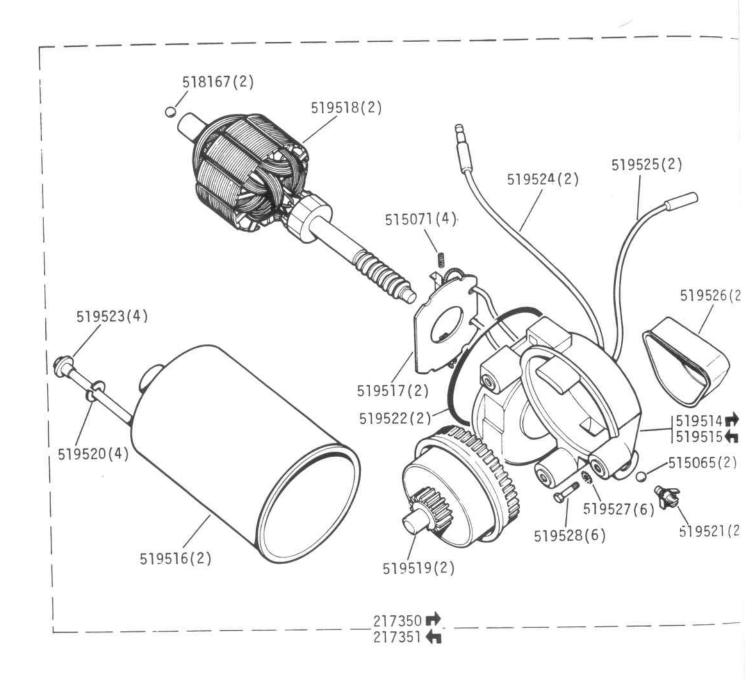

① 🗘 05-39 For Window Regulator Assembly

STAG


ELECTRICAL EQUIPMENT - Speedo, Rev. Counter and Warning Light Cluster

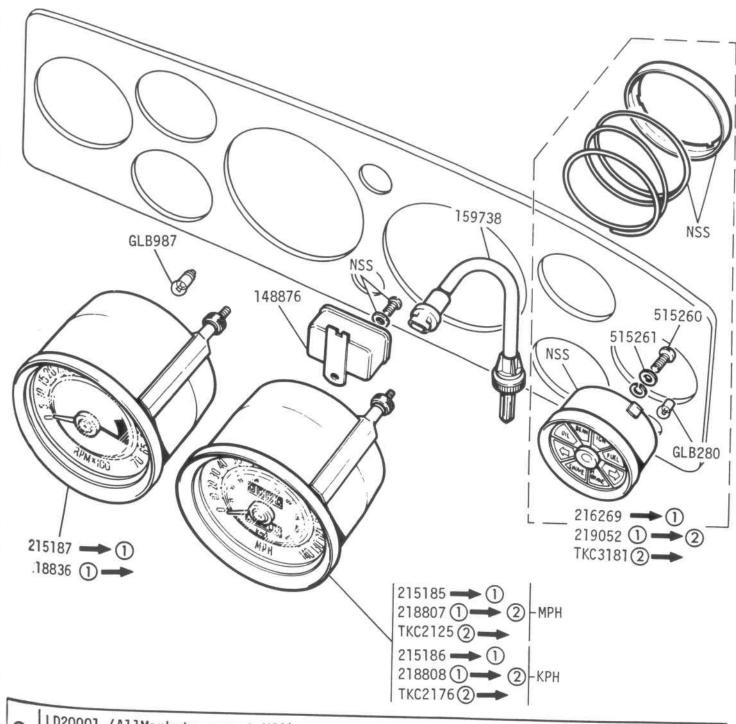

LD20001 (AllMarkets except USA) LE2001 USA

②LD 35940

PTAG TA

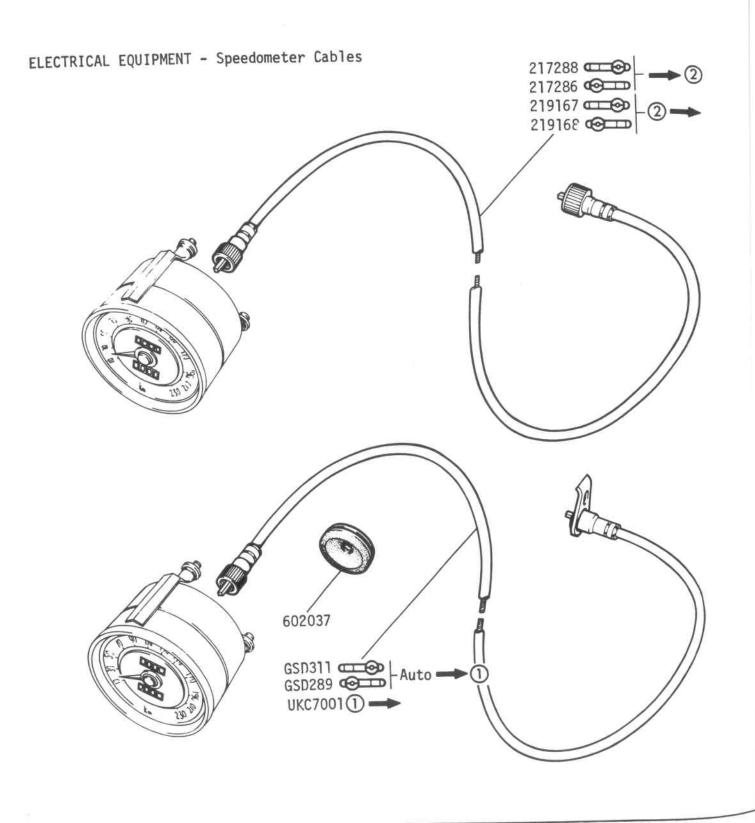

① LD41994


② LD21231

STAG

05-42

B5405

ELECTRICAL EQUIPMENT - Facia Instruments and Switches

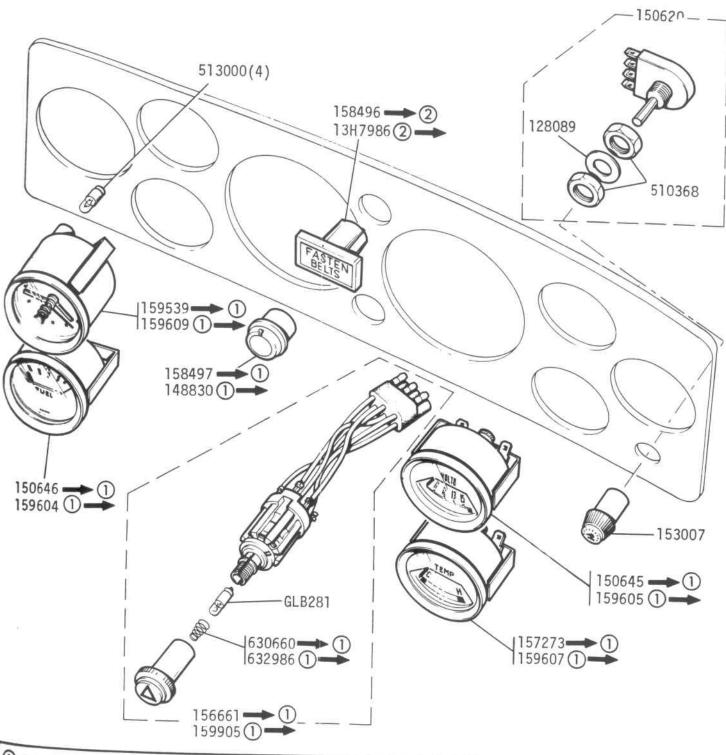


O Commission No. LD20001

3 Commission No. LD38324

STAG

05-43

B5402/1

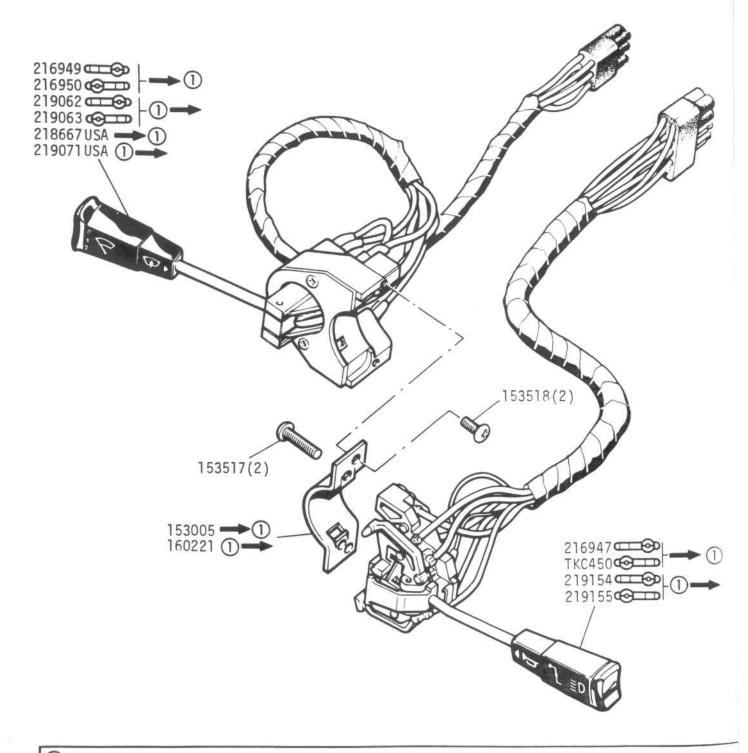


① LD 20,000

STAG


05-44


B53

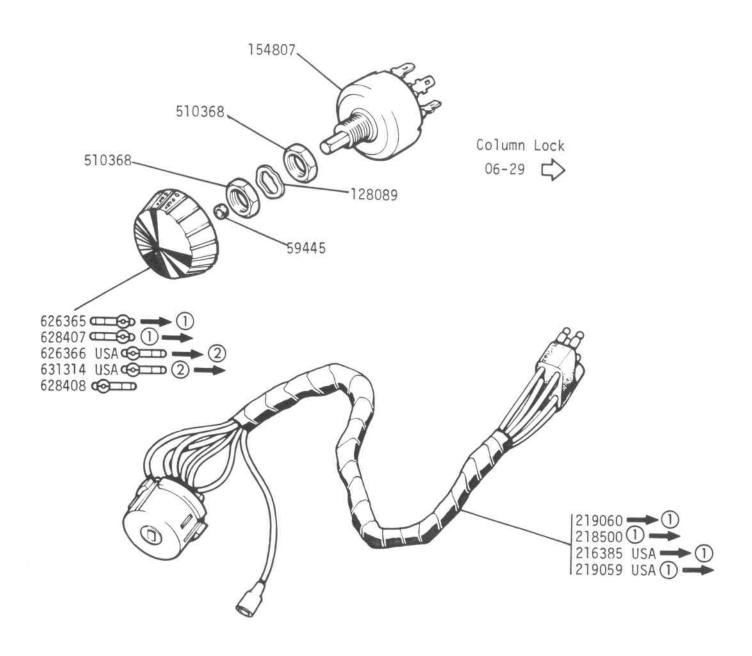


① LD20,000 ② LF11277

STAG

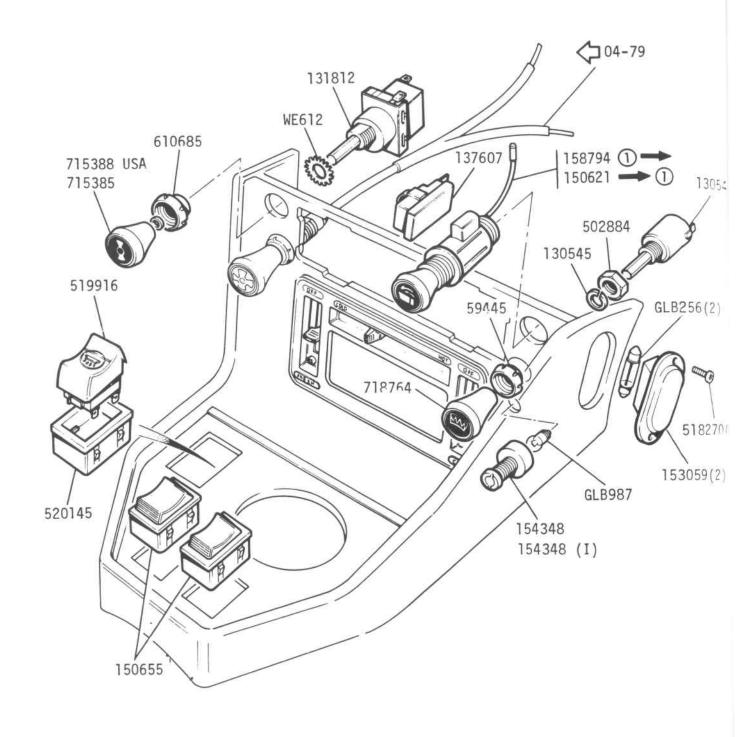


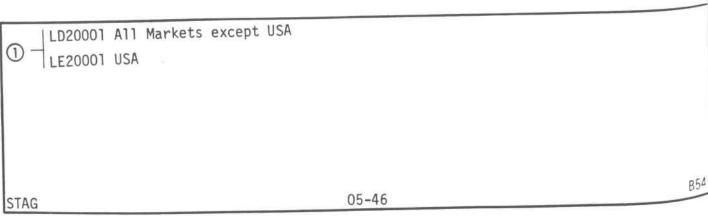

ELECTRICAL EQUIPMENT - Brake Light, Courtesy Light, and Reverse Light Switches

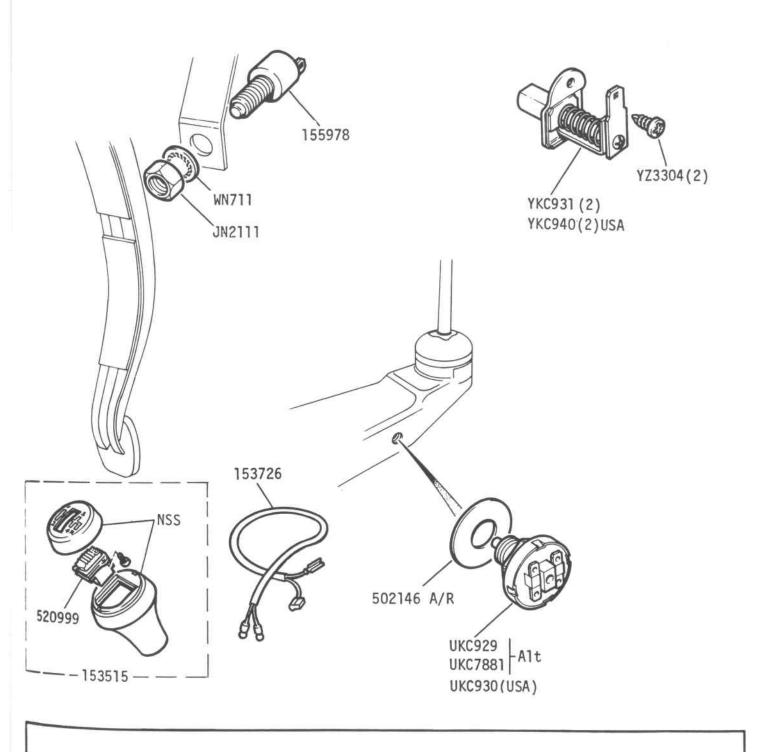


STAG 05-47 B5413/1

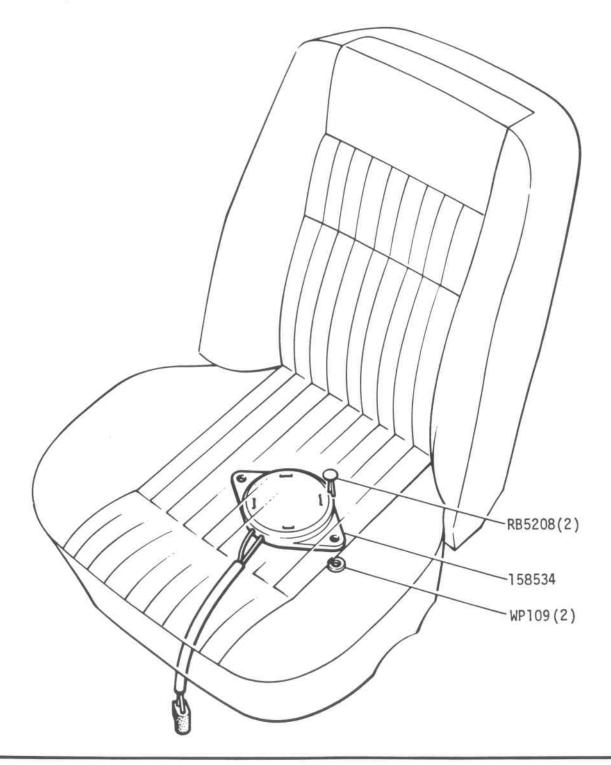


STAG 05-48 B5505


ELECTRICAL EQUIPMENT - Glovebox Lamp, Map Lamp and Switch

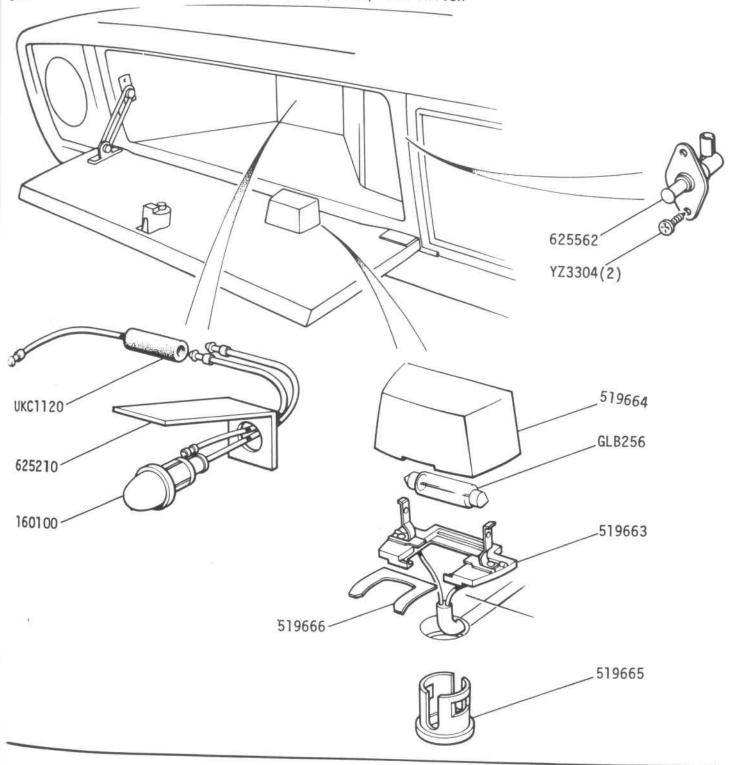

TAG

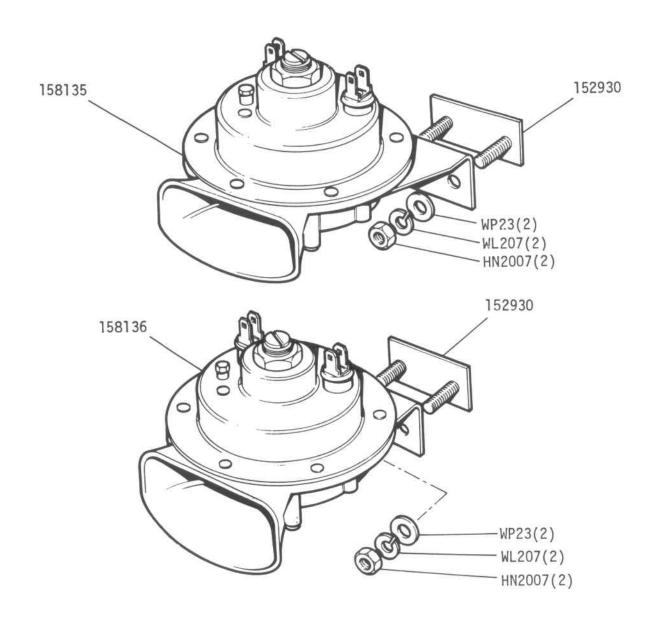


STAG 05-50

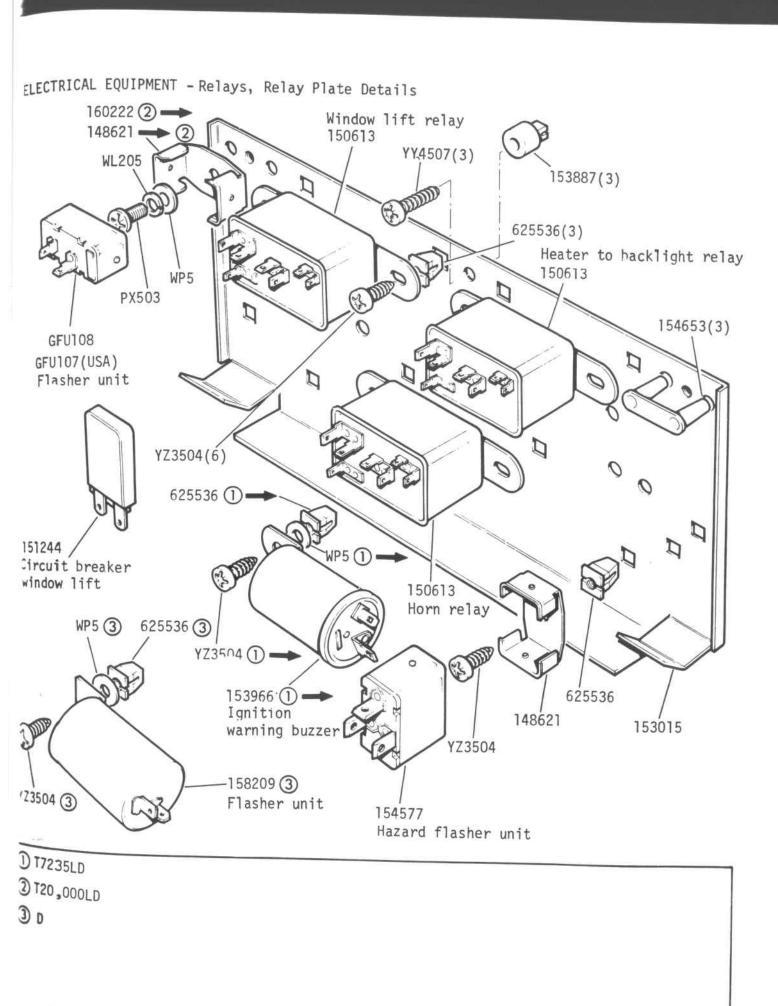

STAGA

05-51

B5403/1

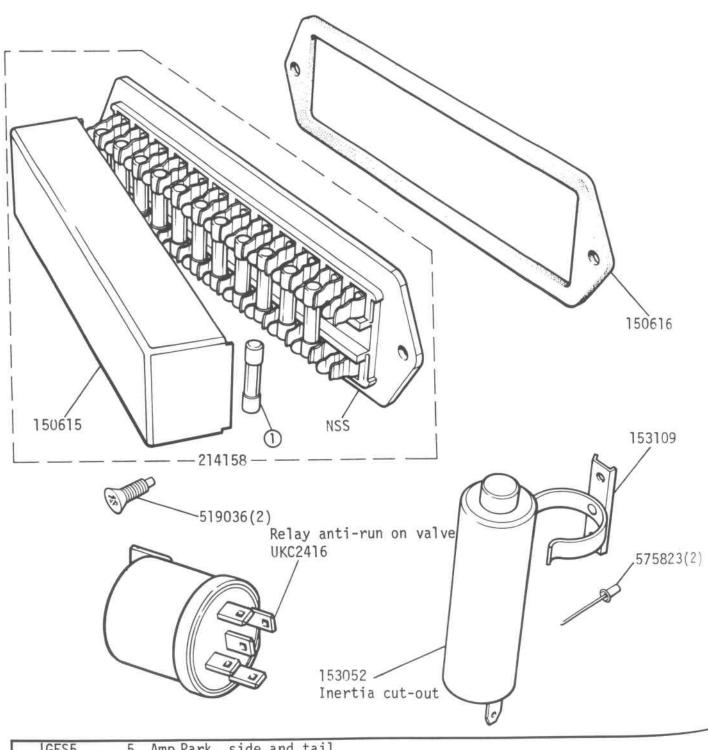

GFS5 5 Amp Park, side and tail
GFS10(4) 10 Amp Dip beam, RH and LH and O/D
GFS15 15 Amp Wiper motor


-518445(3) 20 Amp Main beam
518446(2) 30 Amp A/C (Heater fitted)
GFS25(3) 25 Amp Heater motor
GFS35(3) 35 Amp Battery ignition

STAG

05-52

B5405


ECTRICAL EQUIPMENT - Air Conditioning Relays

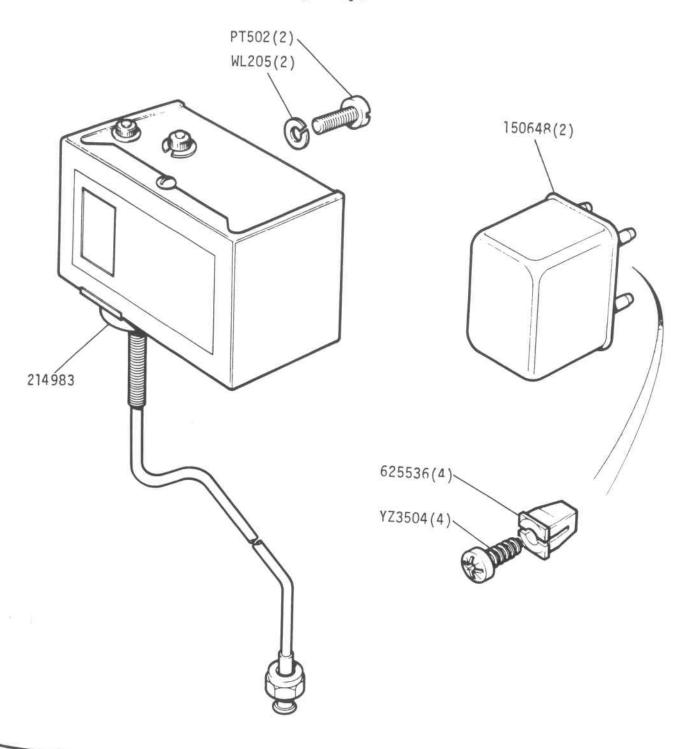

ELECTRICAL EQUIPMENT - Control Box, Night Dimming Relay, Ignition Relay etc. HAZARD 159907 155128 159203 150642 156042 520198(3) 151363 WM55(3) WN705(3) HN2007(3) FU2578/4(2) 137795-216112 YZ3484(2) WP205(2) 519026(2) 150640 158509

05-54

STAG

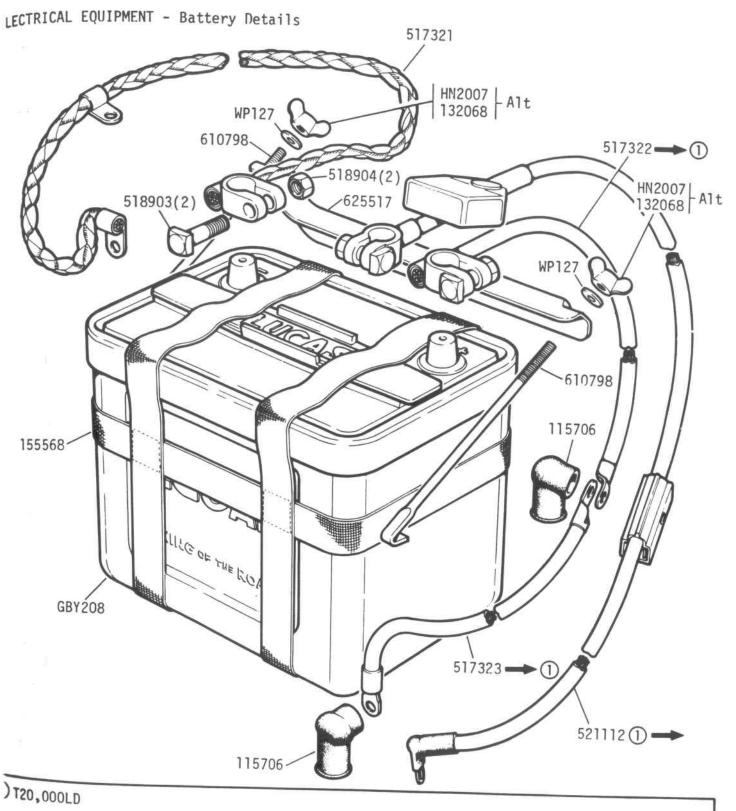


PART NO.	DESCRIPTION	NO.PER UNIT REMARKS
402847 402966 313251 RKC451 RKC778	Main harness Main harness Main harness Main harness Main harness Main harness	From comm No T10060LD From T10061LD up to T20000LD From T20001LD up to T25000LD From T25001LD up to T34826LD From T34827 onw
402848 402967 313253 RKC206 RKC780	Main harness Main harness Main harness Main harness Main harness	From comm No T10060LD From T10061LD u to T20000LD From T20001LD u to T25000LD From T25001LD u to T34826LD From T34827 onw
402849 402968 321352 RKC452 RKC779	Main harness Main harness Main harness Main harness Main harness	From comm No. T10060LD From T10061LD of to T20000LD From T20001LD of to T25000LD From T25001LD of to T34826LD From T34827 one
402850 402969 313254 RKC493 RKC781	Main harness Main harness Main harness Main harness Main harness	From comm No T10060LD From T10061LD to T20000LD From T20001LD to T25000LD From T25001LD to T34826LD From T34827 or
312435 313255 312436 313256	Main harness - U.S.A. Main harness - U.S.A. Main harness - U.S.A. A/C Main harness - U.S.A.	Fitted from T11277LE up to T20,000LE Fitted from T20001LE onwar Fitted from T11277LE up to T20000LE Fitted from T20001LE onwar
STAG	05-56	B


7659 Facia harness 9114 Facia harness 9114 Facia harness 9114 Facia harness 6868 Facia harness 6455 Facia harness 9113 Facia harness 9113 Facia harness 9114 Facia harness 915 Facia harness 91658 Facia harness 917658 Facia harness 918 Facia harness 919 Facia harness 919 Facia harness 910 Fitted 9110 Facia harness 910 Facia harness 910 Fitted 9110 Harness - Console 9110 Harness - Relay plate 9110 Fitted 9110 Fit	MARKS
RHS Facia harness Fitted up to T Fitted up to T Fitted onwards Fitted up to T F	up to T1005
gill4 Facia harness C868 Facia harness Facia harness Fitted up to T Fitted onwards Fitted LD Fitted LD Fitted up to T	
C868 Facia harness Facia harness Fitted up to T Fitted onwards Fitted up to T F	20000LD
Fitted onwards Fitted LD From T25	from T20001
Fitted LD Fitted up to Ti Fitt	from T25001
LHS LHS LHS Fitted up to Tr	ID to T100F
HIS Fitted up to T. Fitted up	
Fitted up to Trifited onwards Fitted onwards	from T100601
Facia harness - U.S.A. Fitted onwards Fitted onwar	from T20001
Fitted onwards Fitted onwards	25000LD
Fitted of LE Fi	from T25001
Facia harness - U.S.A. Fitted for the proof of the proof	n to T11276
Fitted of Single Parish State of State of Single Parish Single Parish State of Single Parish Single	
Fitted of converse console larges and console larges are console larges and console larges are console large	rom T11277
Body harness RH IRE23 Body harness RH IRE24 Body harness LH IRE25 Body harness LH IRE27 Body harness LH IRE28 Body harness U.S.A. RH IRE28 Body harness U.S.A. RH IRE29 Body harness U.S.A. RH IRE29 Body harness U.S.A. LH IRE29 Body harnes	rom T20001L
Body harness RH Body harness LH Fitted U Body harness LH Body harness U.S.A. RH From T25 Body harness U.S.A. RH Fitted U Body harness U.S.A. LH Body harness U.S.A. LH Fitted U	
Body harness LH Fitted uses the state of the second of th	p to T25000
Fitted upon the second of the	001LD onwar
Body harness LH Body harness U.S.A. RH Fitted u.S.A. LH Body harness U.S.A. LH Body harness U.S.A. LH Fitted u.S.A.	p to T25000
Body harness U.S.A. RH Fitted up Reference to the second of the second o	
776 Body harness U.S.A. LH 778 Body harness U.S.A. LH 779 Harness - console 770 Harness - console 770 Harness - console 770 Harness - console 770 Harness - console 771 Harness - console 772 Harness - console 773 Harness - console 775 Harness - console 776 Fitted of	001LD onwar
O71 Body harness U.S.A. LH O75 Harness - console O76 Harness - Relay plate O77 Harness - Relay plate O78 Harness - Relay plate O79 Harness - Relay plate	p to 120000
07F Harness - console 19, Harness - console 075 Harness - console 1551 Harness - console 110 Harness - Relay plate 698 Harness - Relay plate 698 Harness - Relay plate	n to T20001L
19, Harness - console 1075 Harness - console 1551 Harness - console 110 Harness - Relay plate 698 Harness - Relay plate 698 Harness - Relay plate	rom T20001L
Fitted f Fitted u Fitted f Fitted u Fitted f Fitted u Fitted f Fitted f Fitted u Fitted f Fitted f	p to T30000
1551 Harness - console 110 Harness - Relay plate 698 Harness - Relay plate A/C	rom T30001L
Harness - Relay plate Harness - Relay plate A/C	p to T21721
Harness - Relay plate A/C	rom T21722L
III U FITTON II	n to T20000
Harness - Relay plate A/C	p to T200001 rom T20001L1
narness - Gearbox USA	7. 120001LI
narriess - Gearbox Auto U.S.A.	
namess - Overdrive and reverse lamp	
Harness - J type Overdrive U.S.A.	
Harness extension - Geabox Auto U.S.A. Harness Gearbox extension - Auto U.S.A	
Conversion harness (use with ign. switch 218560)	


PART NO.	DESCRIPTION	NO.PER UNIT	REMARKS
150669 151809 216457 216456 217697	Extension lead, reverse lamp and Overdrive Extension lead, reverse lamp Auto Extension lead, relay plate except U.S.A Extension lead, relay plate except U.S.A Extension lead relay plate (air conditioning		
160074 UKC1961 154113 155213 156519	and U.S.A.) Lead extension number plate Courtesy light lead Extension lead console Extension lead heated backlight Extension lead heated backlight		Fitted up to T20000 From T20001
521016 514054 518850 153227 512565 13H5802 508804	Lead kit (for use with 218087 distributor ant pollution) 'P' Clip - relay lead to front wing valance Sleeve PVC Main harness to wing valance Clip - Cable harness front valance Bullet Crimp on Cable connector Lucar double ended	i air	
UKC8216	Harness A.R.V. AUS		
508804	Lucar double ended		

30DY AND FITTINGS - Body Shell

923352 Body Shell Assembly (Prime Finish)
923353 Body Shell Assembly (Prime Finish)
NKC491 Body Shell Assembly (White Finish) France
Note:- The above assemblies are complete
with Bonnet, Boot lid, front and rear doors
908247 Body Shell Assembly (Prime Finish)
Note:- The above assembly is less bonnet, Boot lid,
front and rear doors

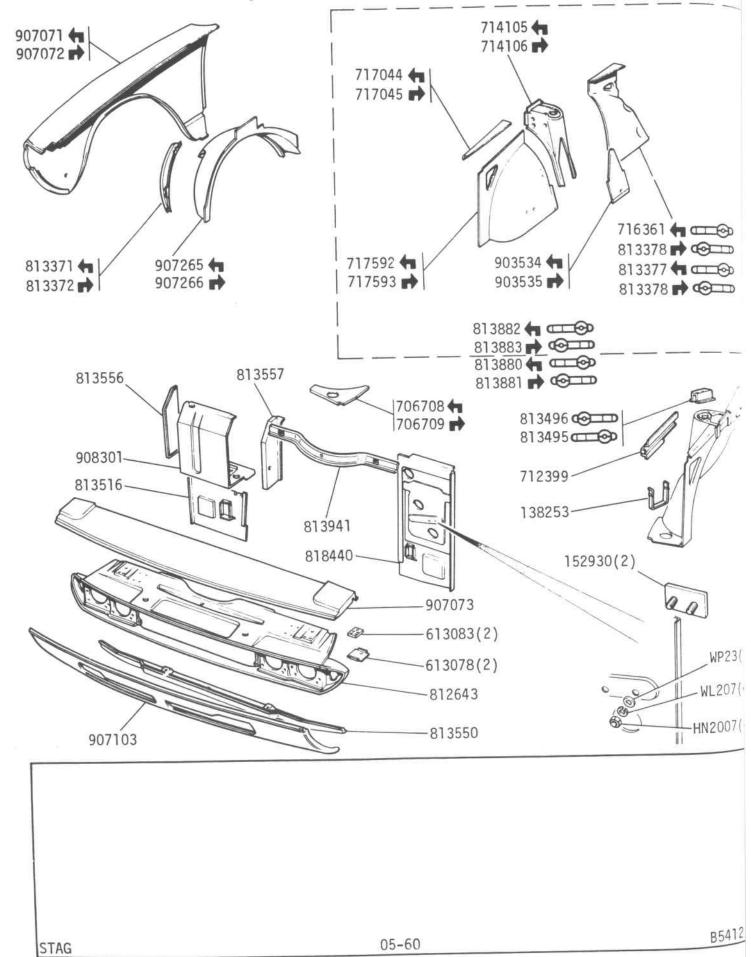


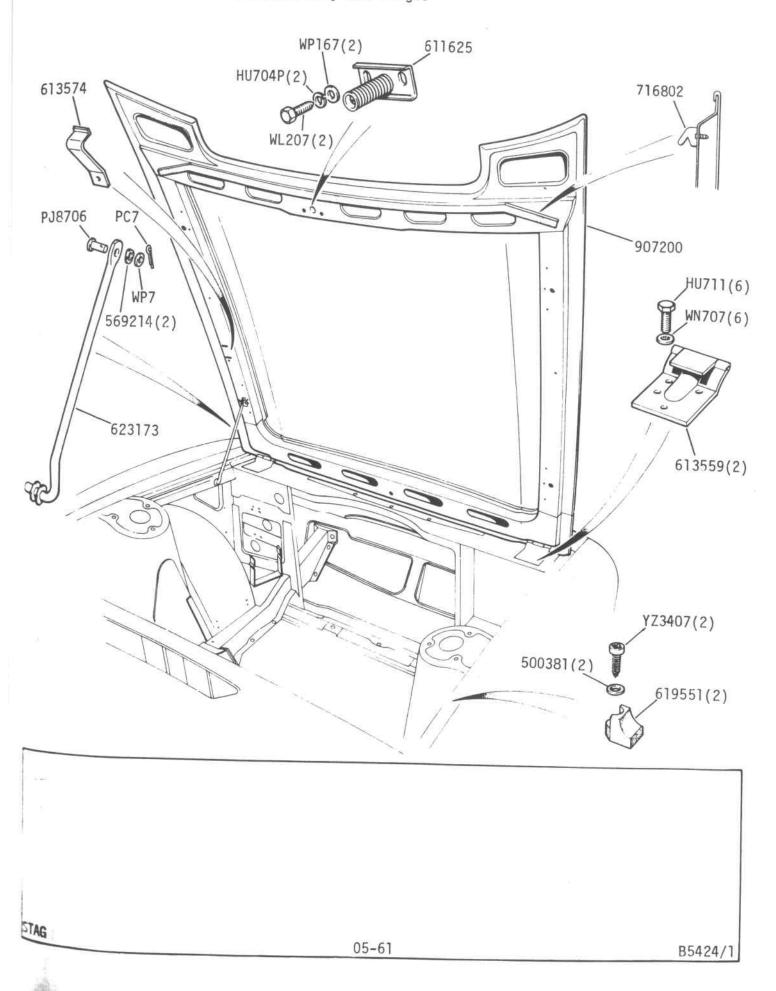

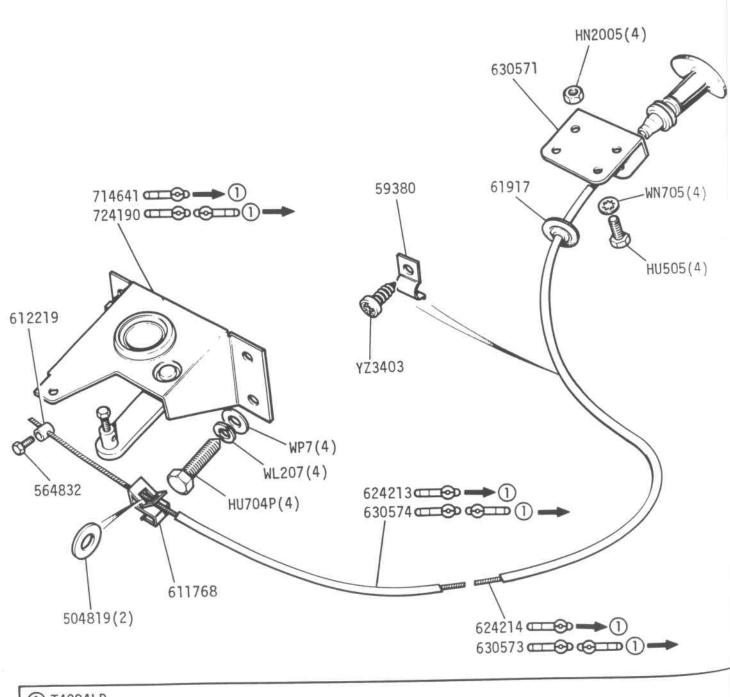


① T4284LD

STAG 05-62 85426

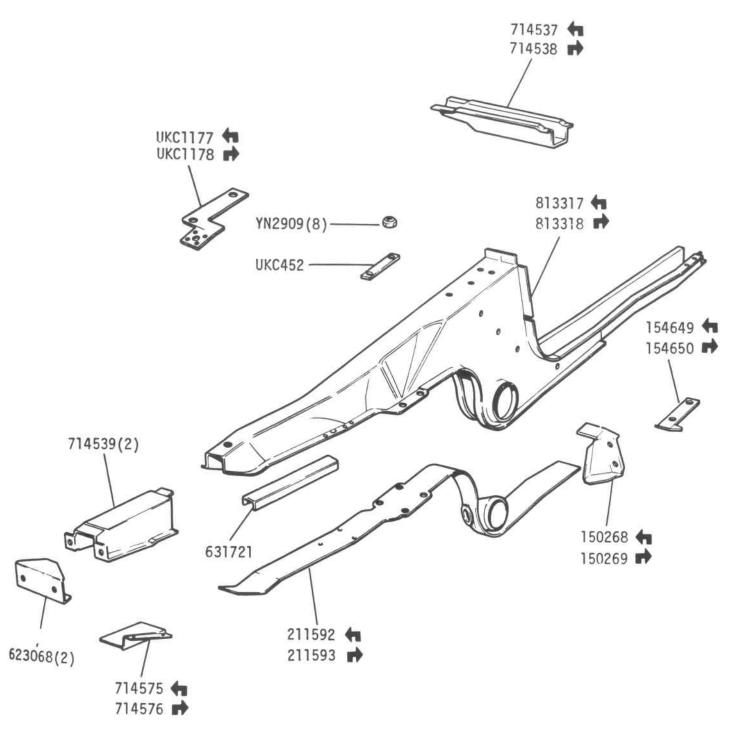

STAG 05-63 B5416/1

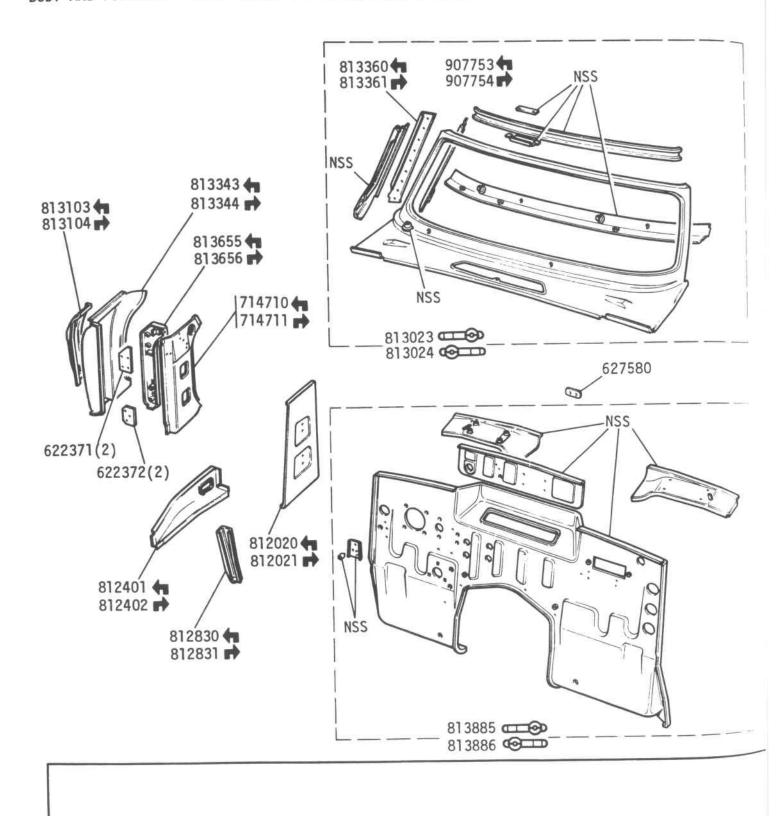


STAG

05-64

B5417

BODY AND FITTINGS - Hard Top Assembly

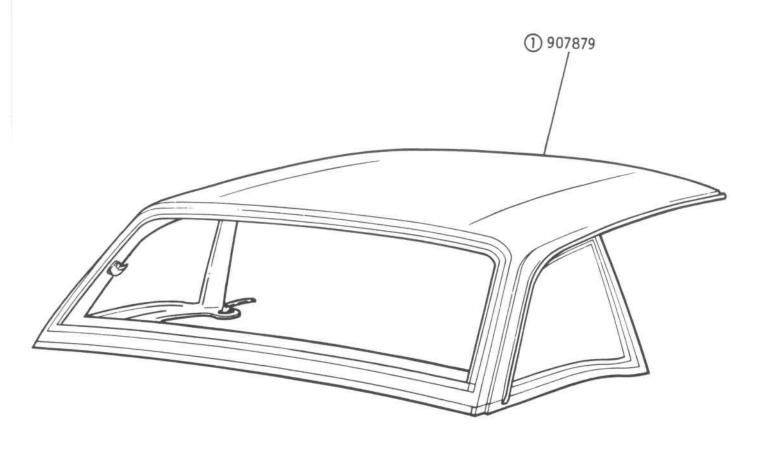


HRW 155902 (2) Female

① Primed Condition Less Glass


⁵⁷⁶⁰³⁰ Complete Hard Top Kit (Sundym Glass)


Electrial Contacts for HRW 155901 (2) Male

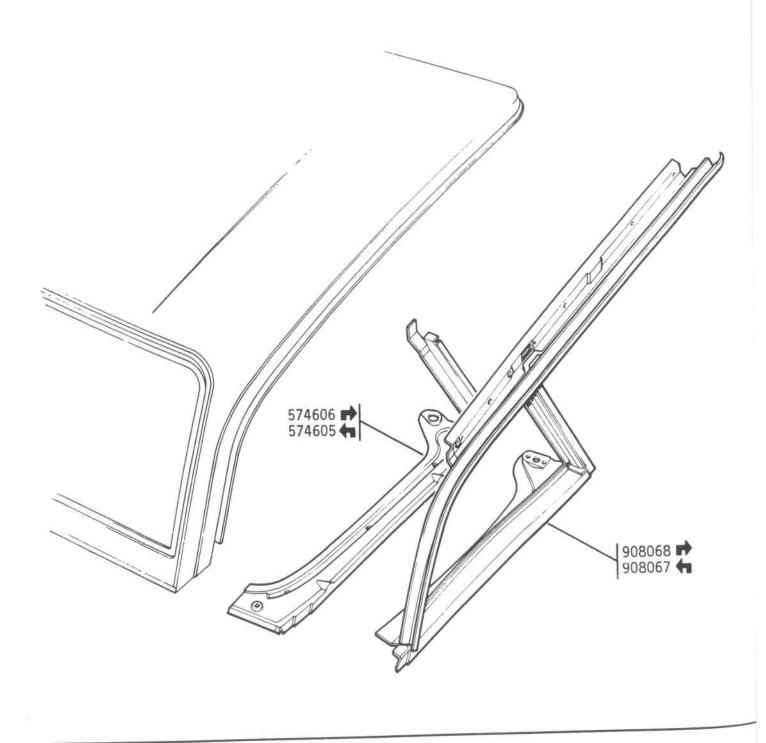


STAG 05-66 B547

ODY AND FITTINGS - Hard Top Attachments

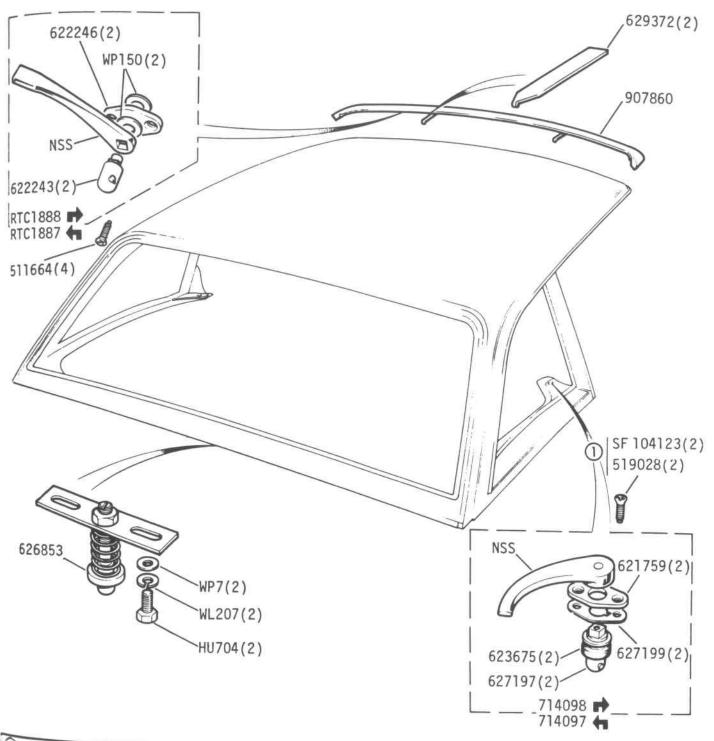


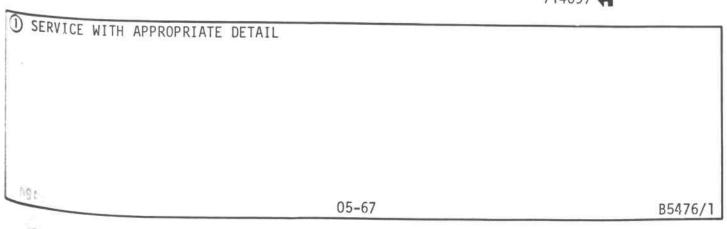


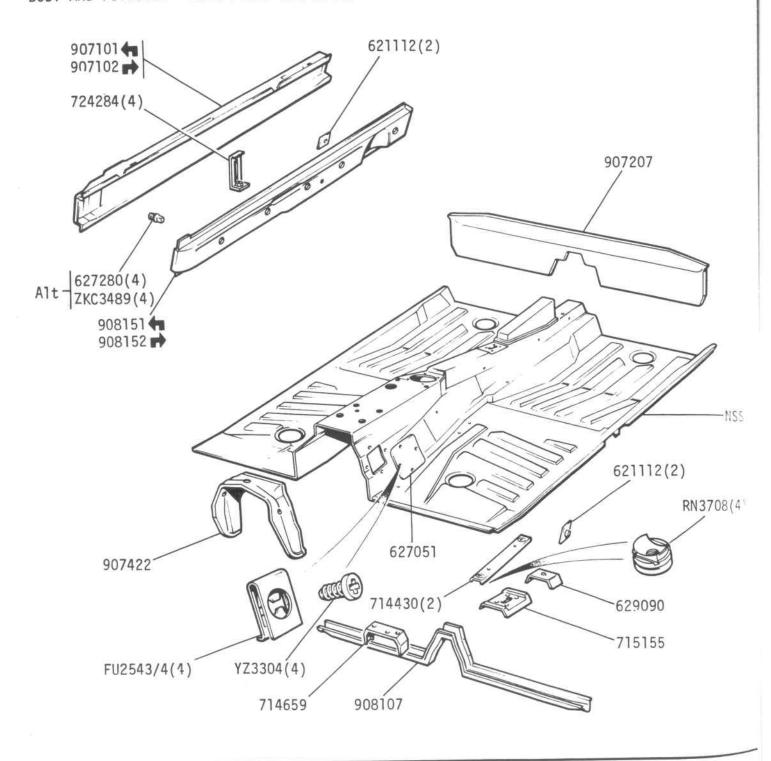


STAG 05-68 B542C


ODY AND FITTINGS -Rear Deck, Rear Quarter Inner Panel Rear Wheelarch

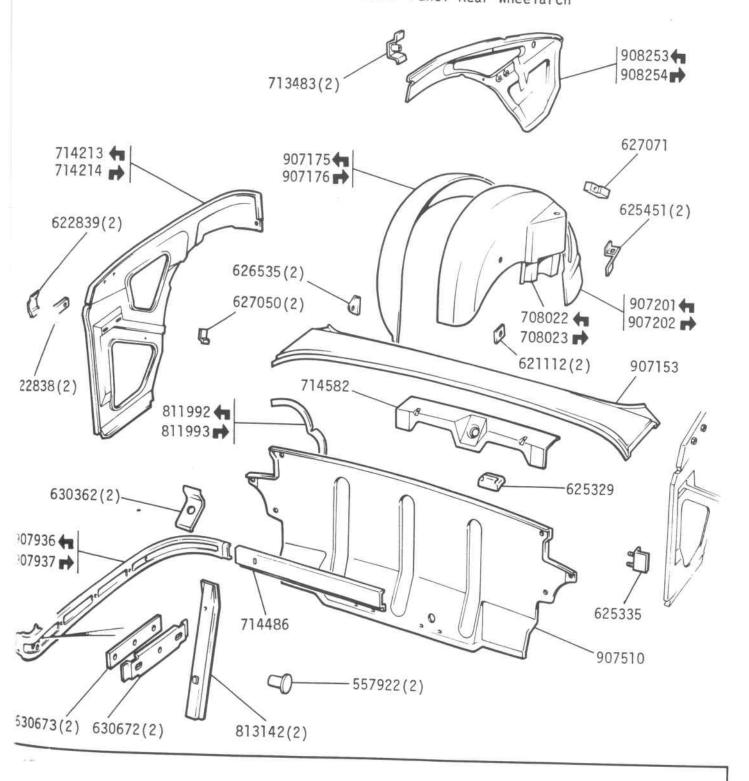

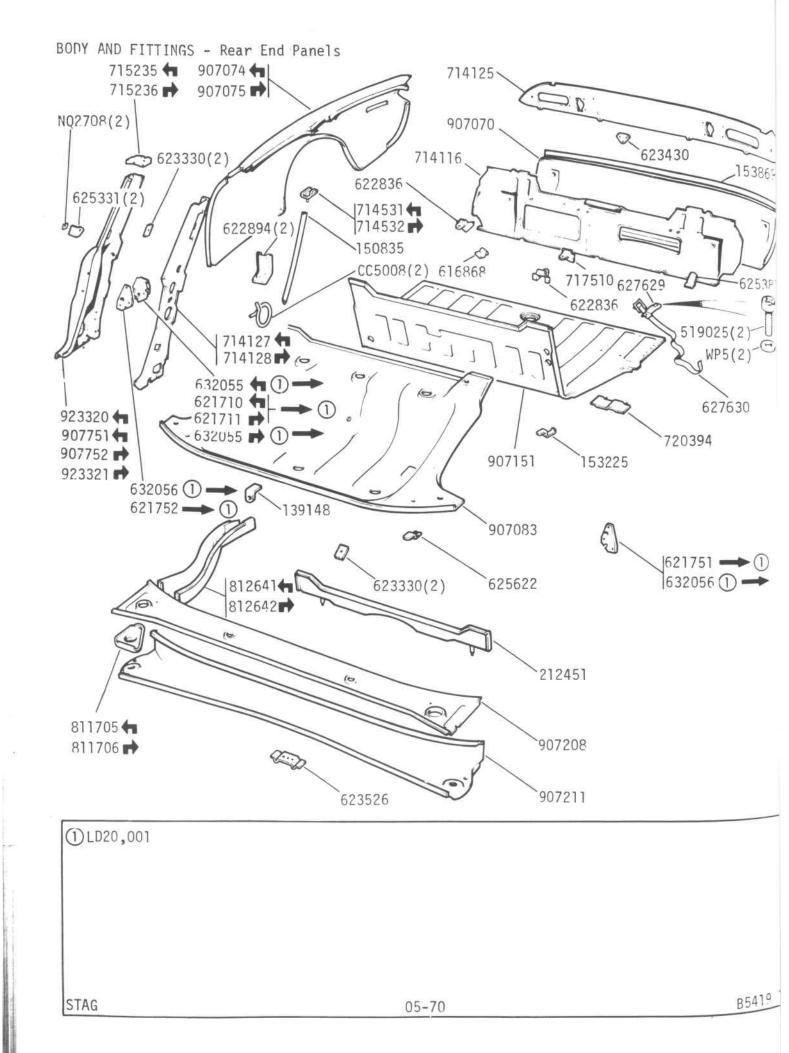

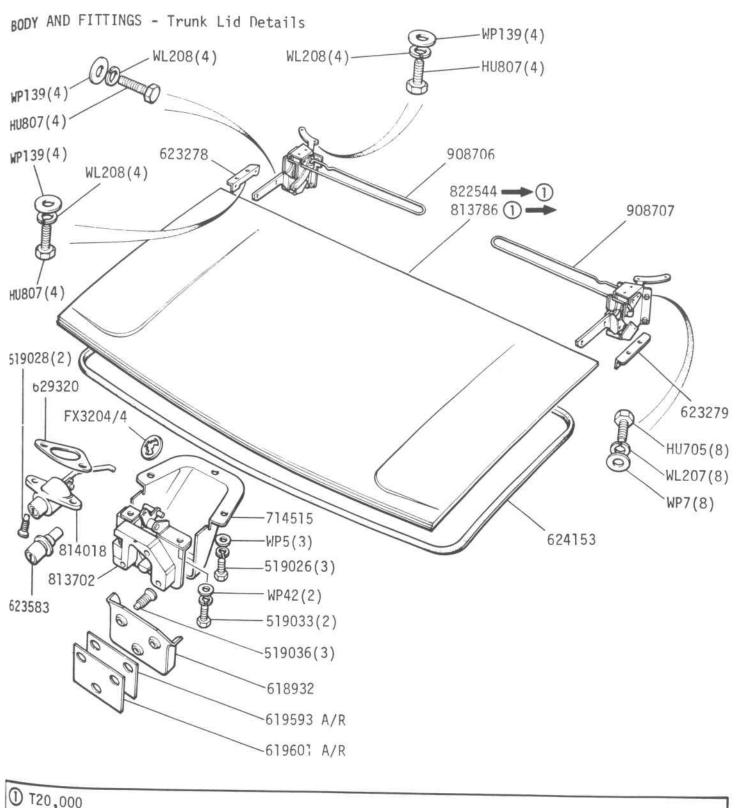

D T20,000		
AG	05-71	B5484/

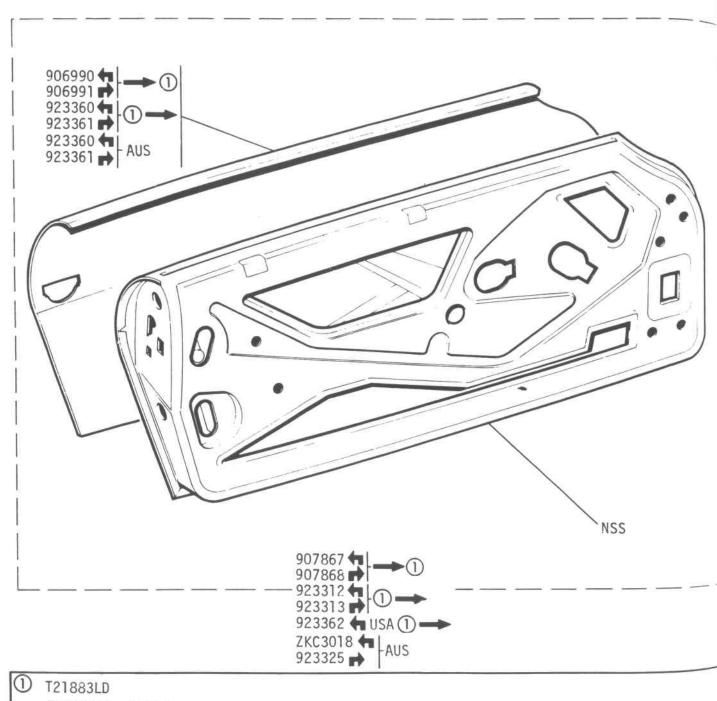


T20987LE (USA)

STAG

06-01

DY AND FITTINGS - Door Water Curtains and Hinges

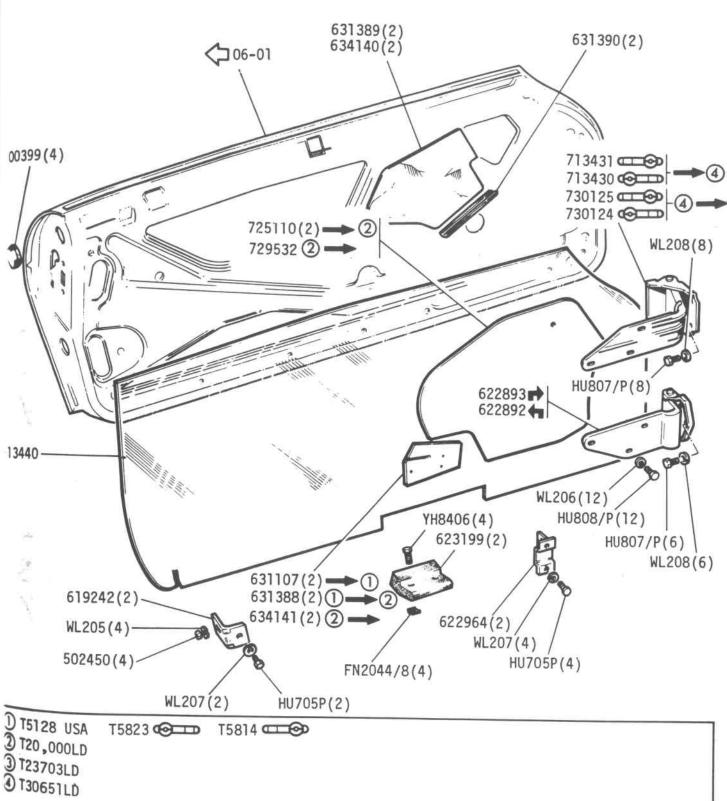


06-02 B5506

520045(2)

520048(2)

520049(2)

576469(2)

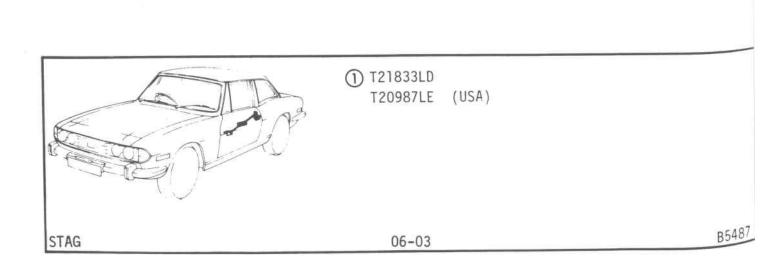

577052(2)


576157(2)


628012(2)


814079


923319 **+** 923318 **+**


814078

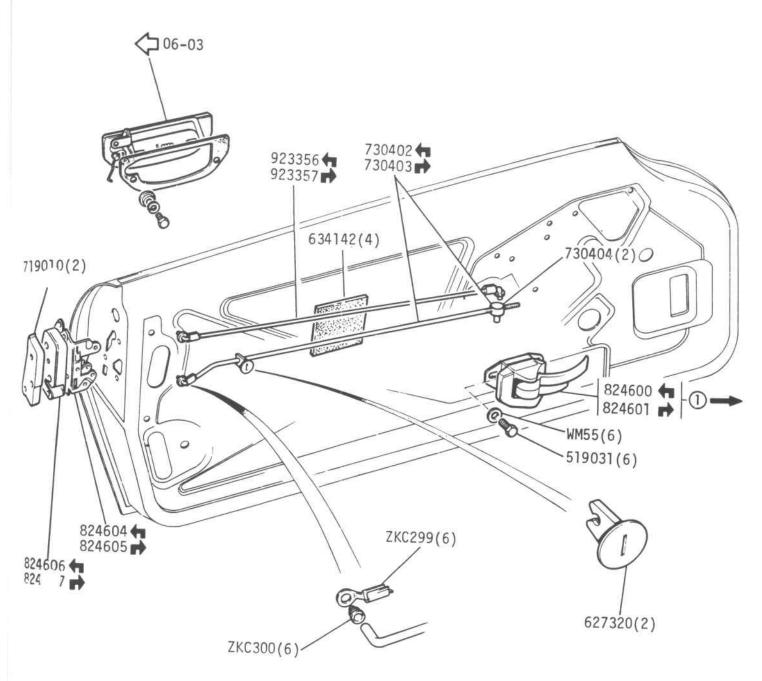


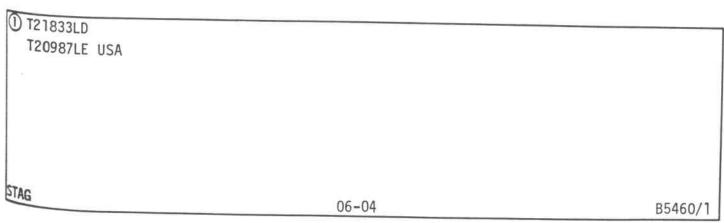


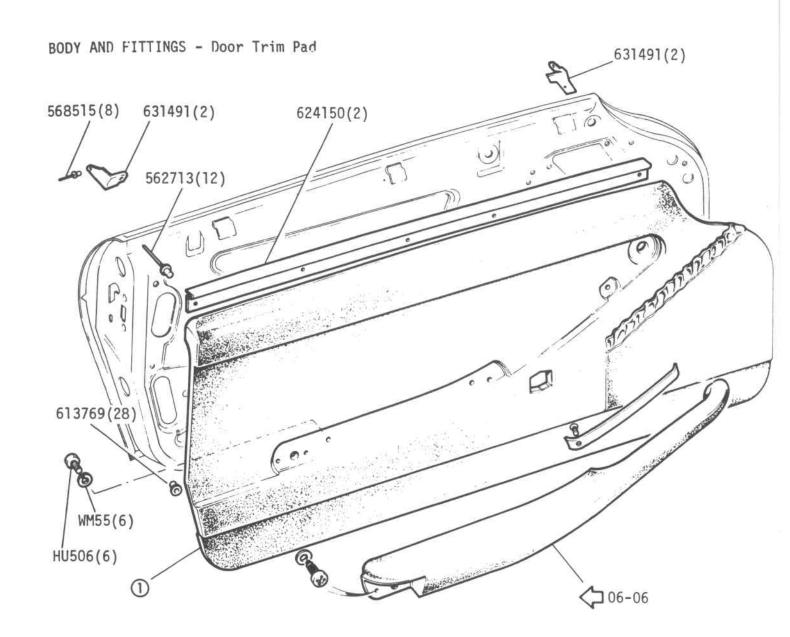


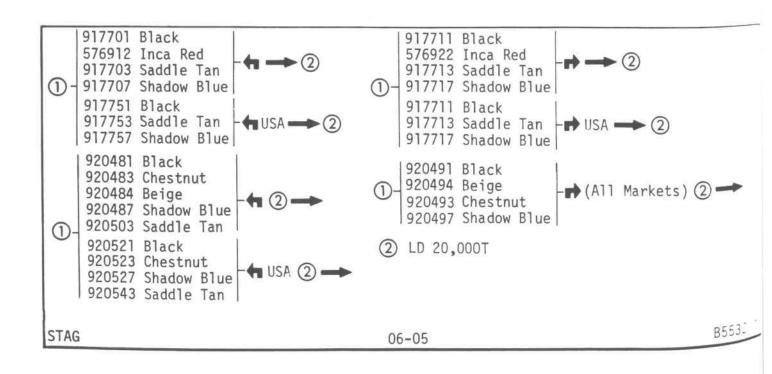

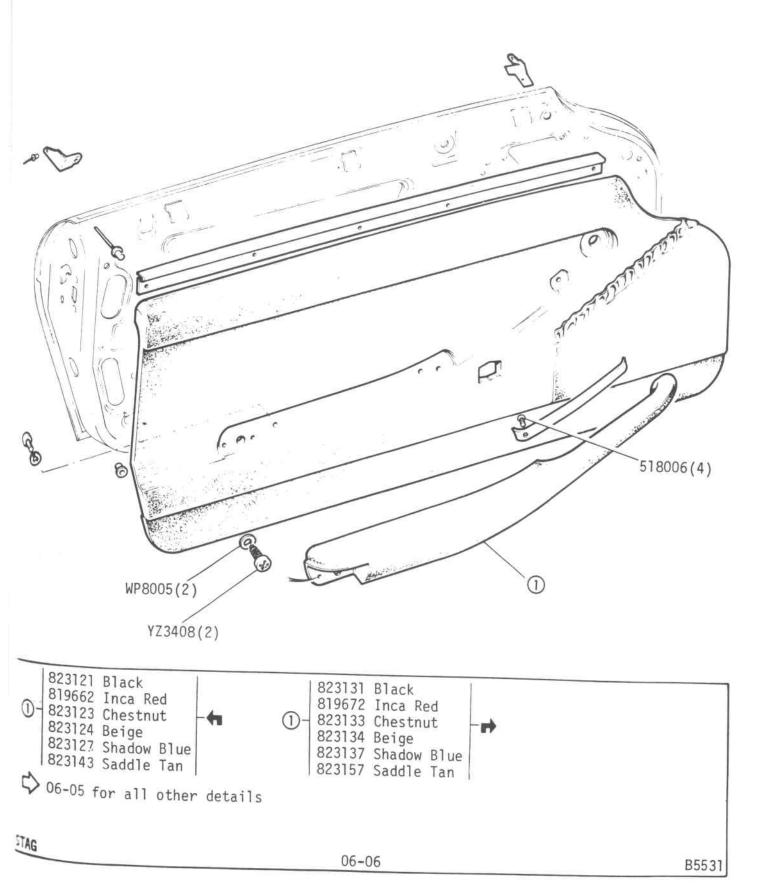


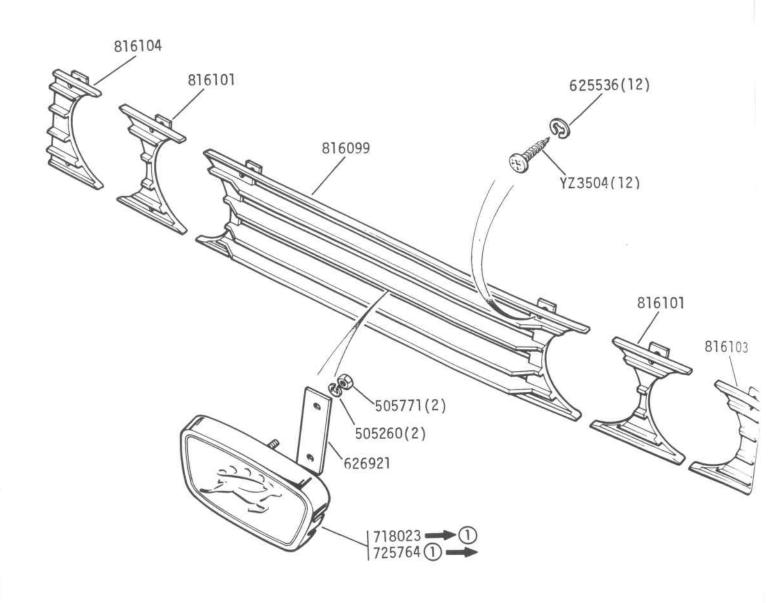

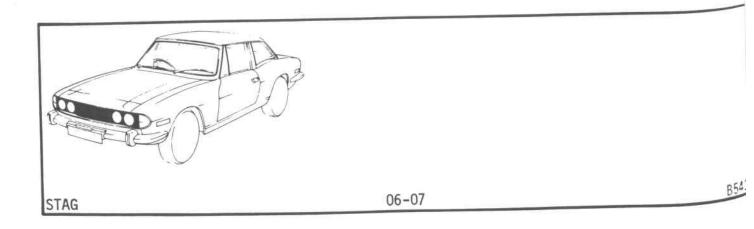

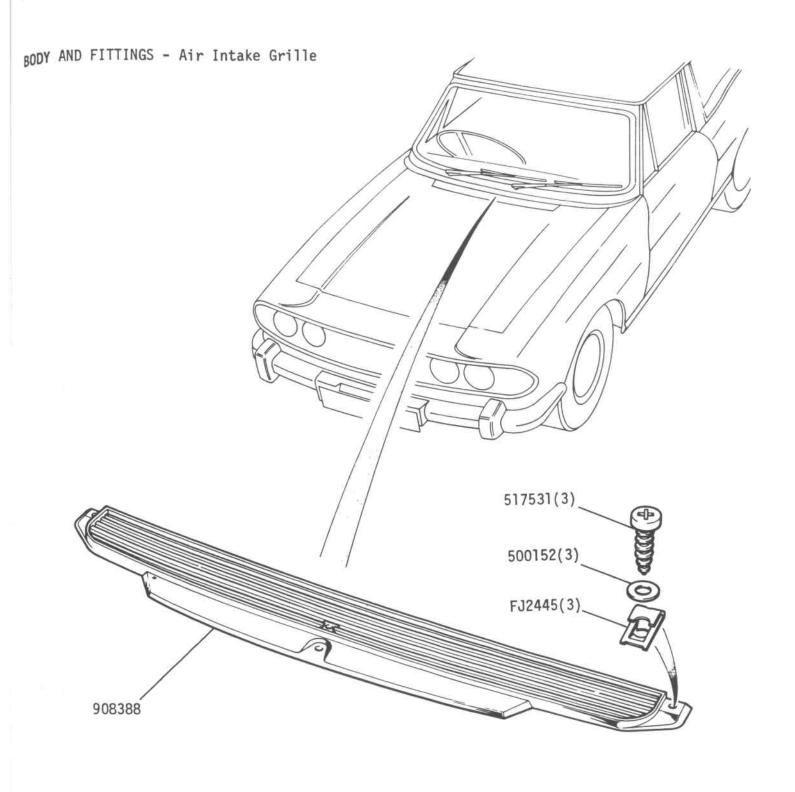



STAG 06-08 B5468

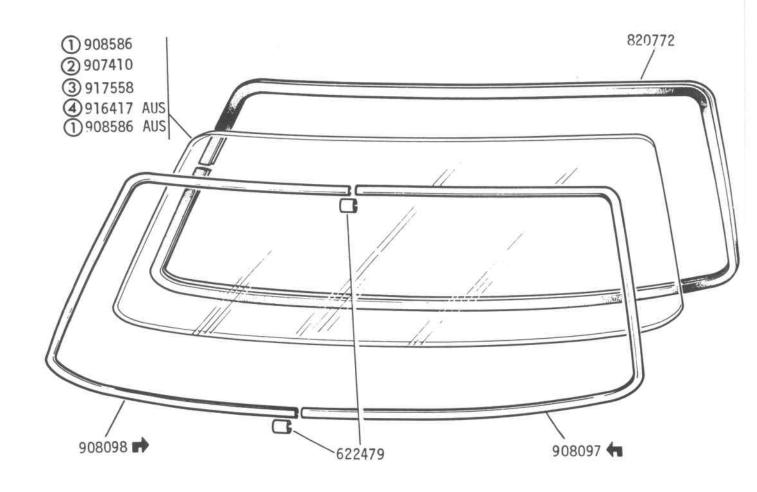

- 1 Zone toughened
- ② Laminated
- 3 Sundym
- 4 High Impact

06-09

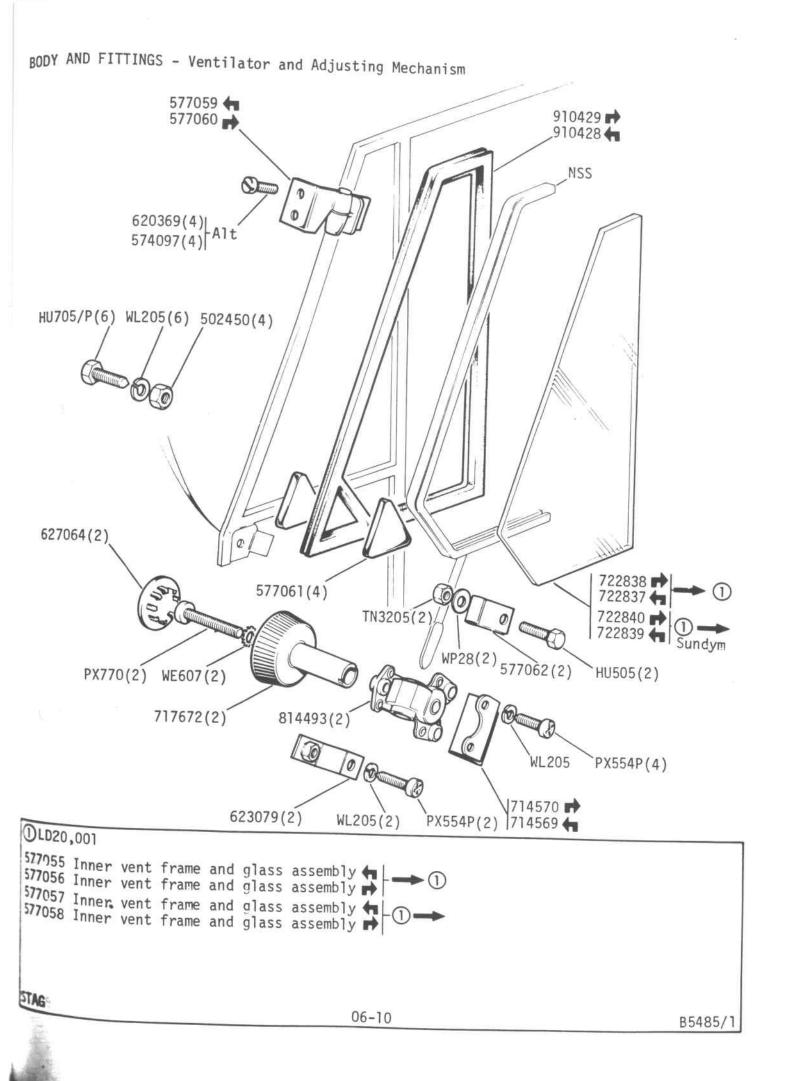


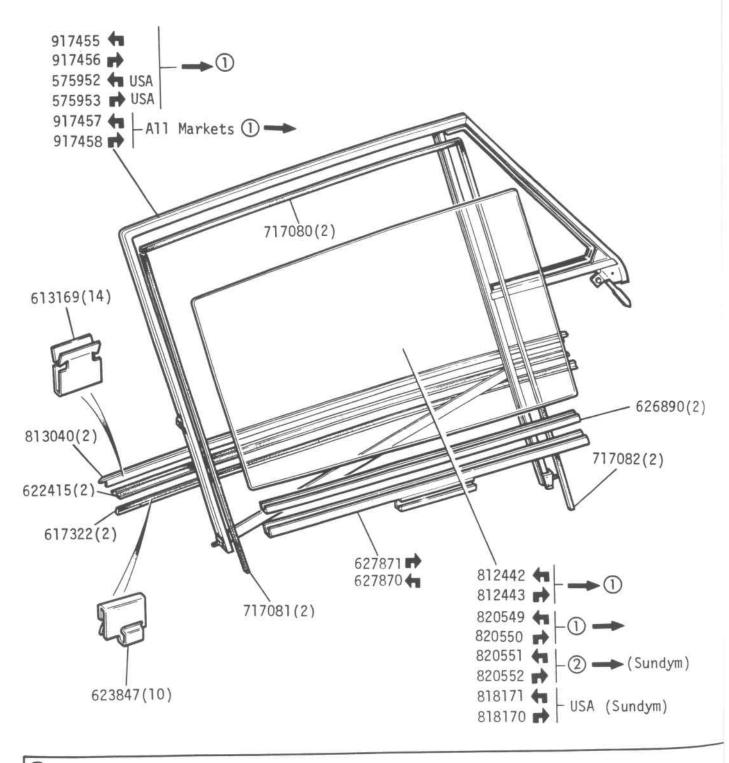

①10,000 LD

06-11

^{20,000} LD

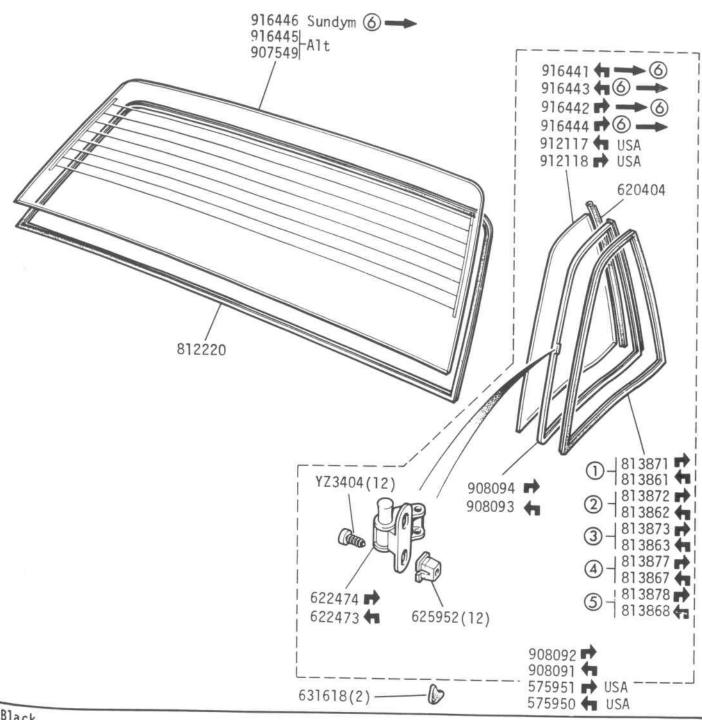


DBlack
DInca Red
Saddle Tan
Shadow Blue
DGrey
T20,000LD

TAG


06-12


B5522/1

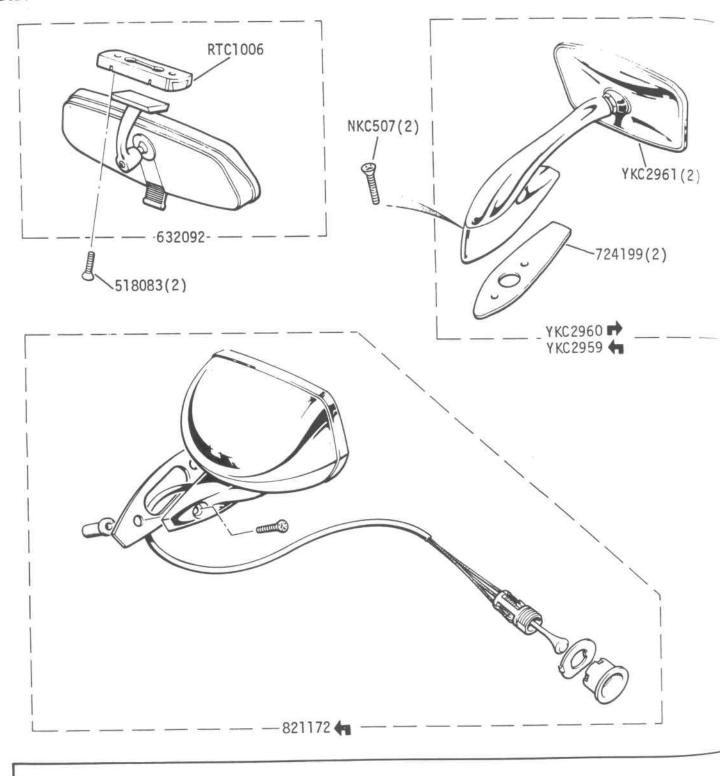


06-13

30DY AND FITTINGS - Body Mouldings and Badges

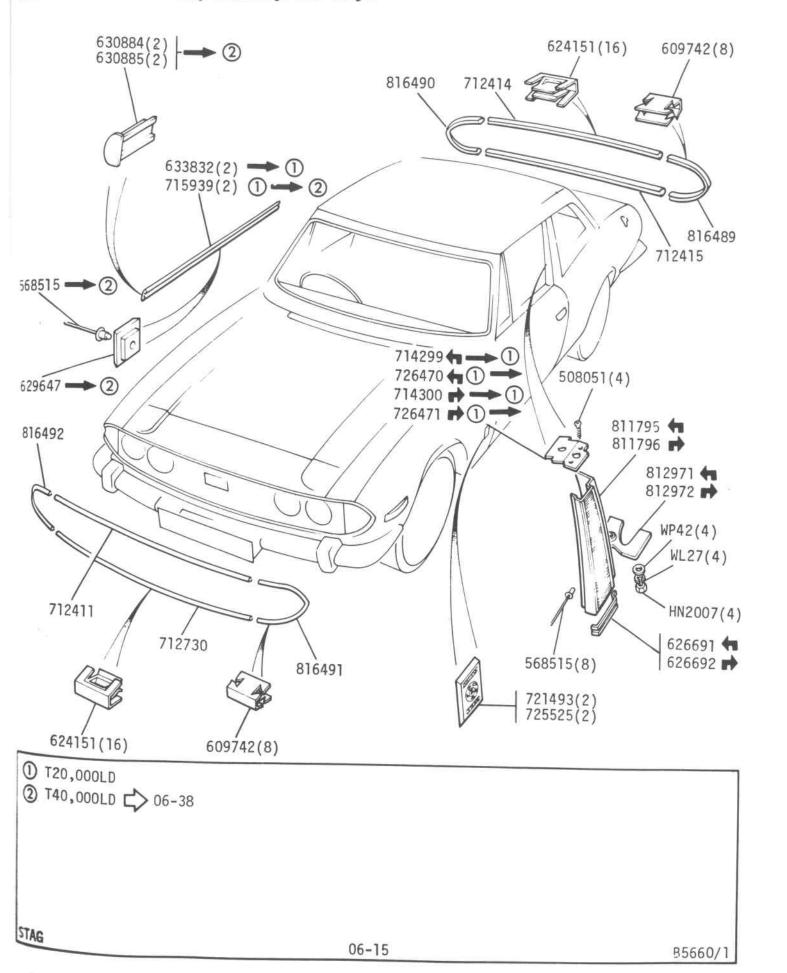

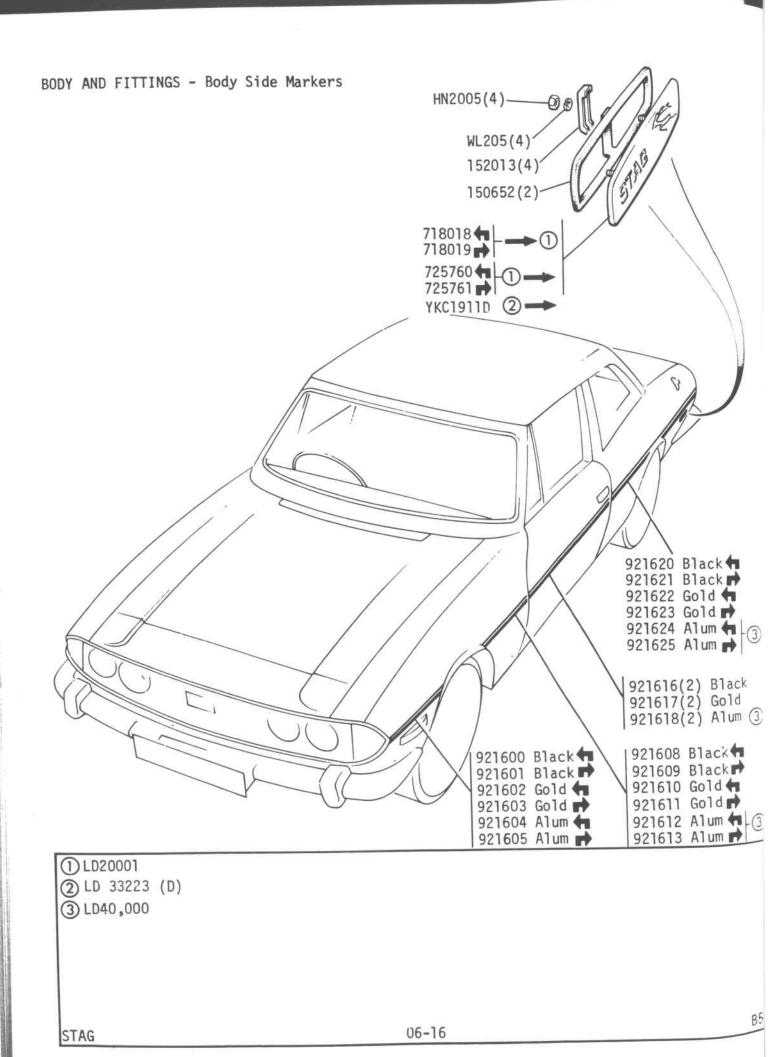

BODY AND FITTINGS - Hard Top Mouldings and Finishers

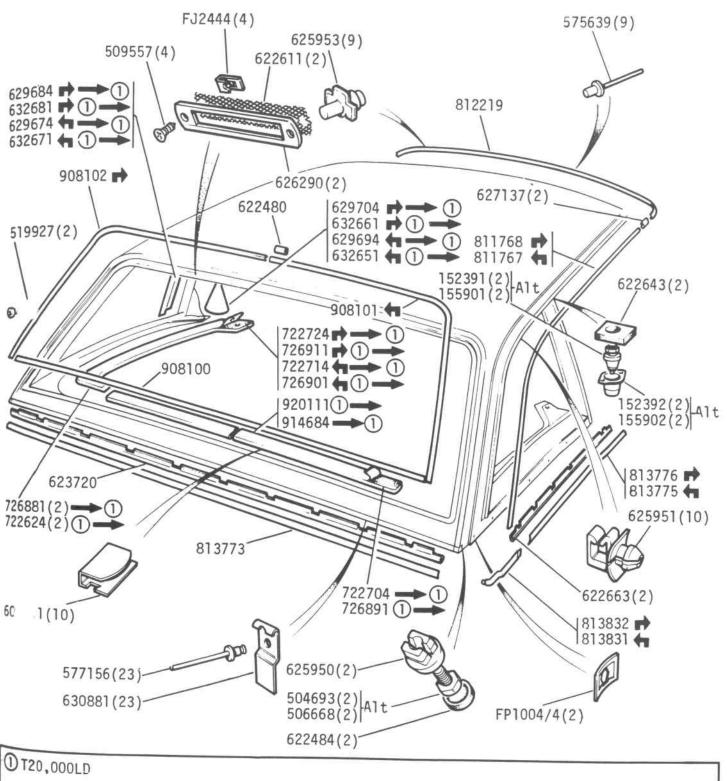



① T20,000LD

STAG


06-17

B5474

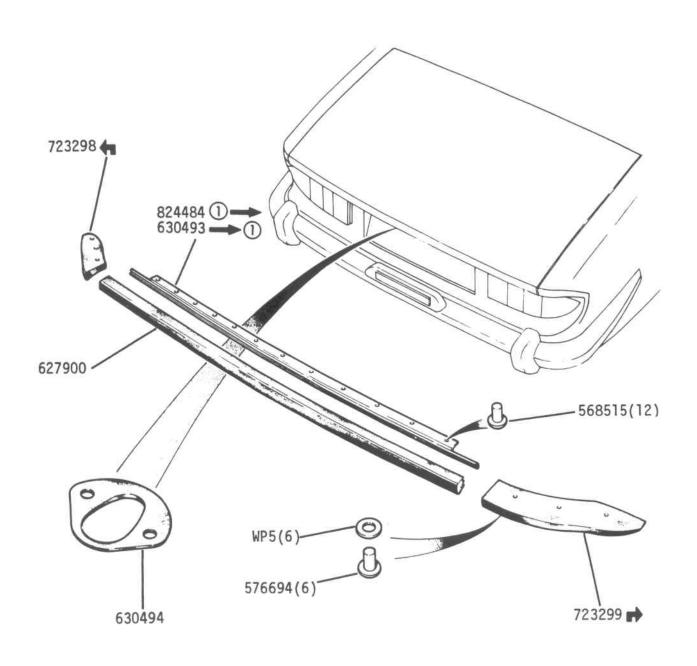

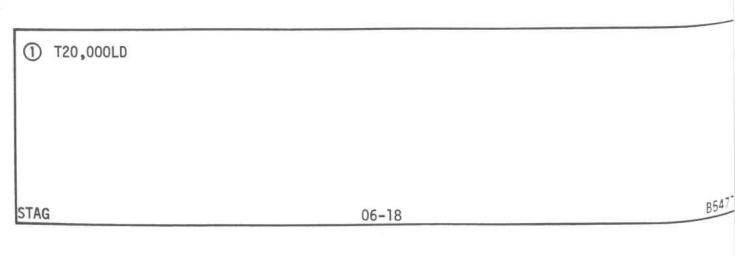


)DY AND FITTINGS - Front Bumper

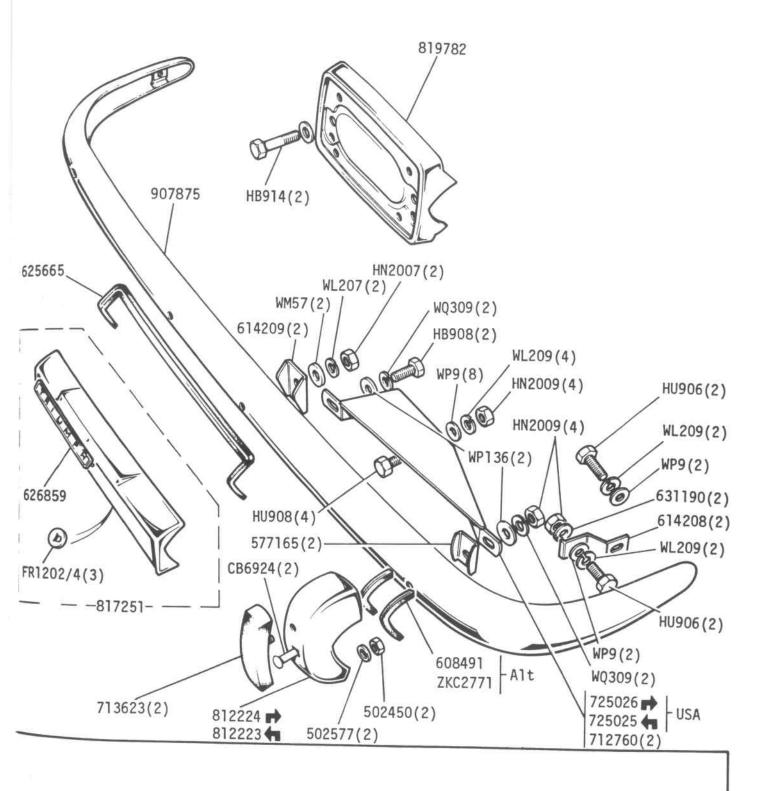


AG

06-19

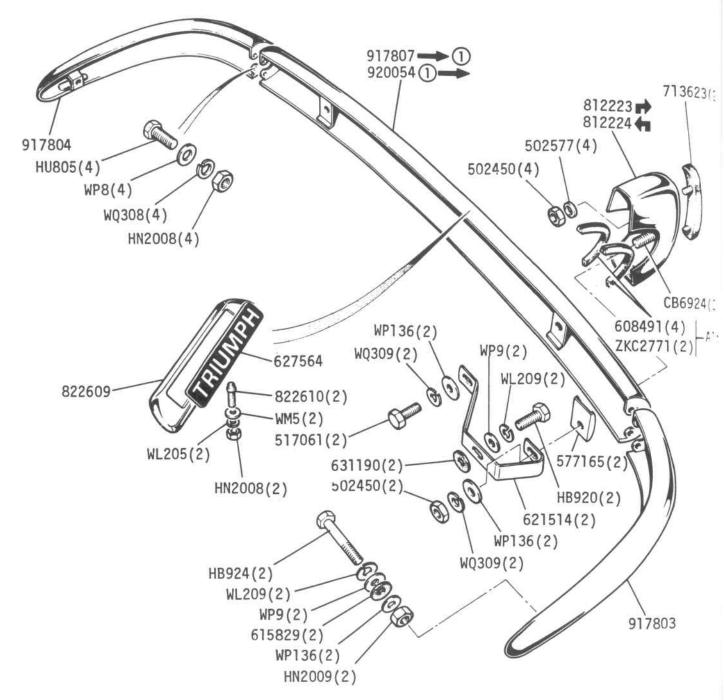

D T20,000LD	


30DY AND FITTINGS - Sunvisors and Windscreen Header Capping

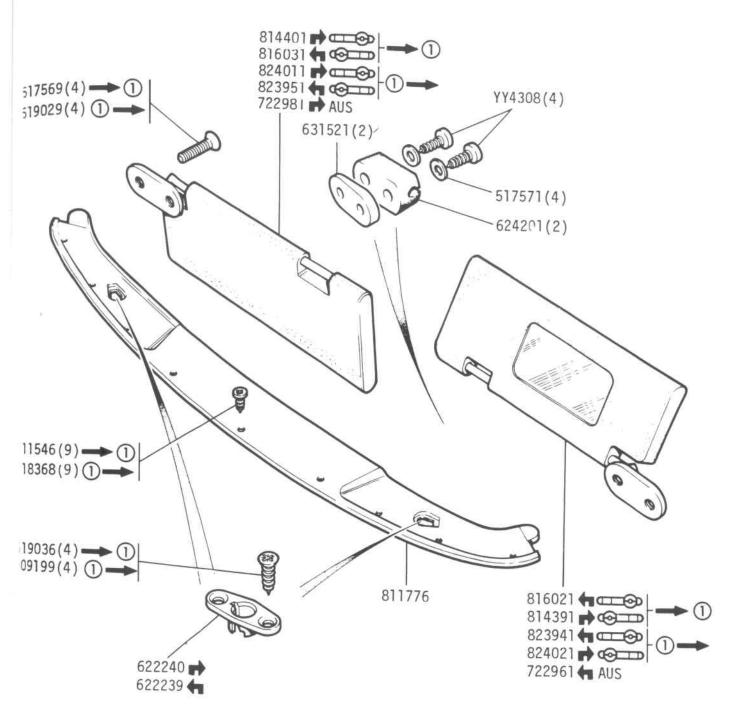

① LD20,000

TAG 06-21


B5467/1

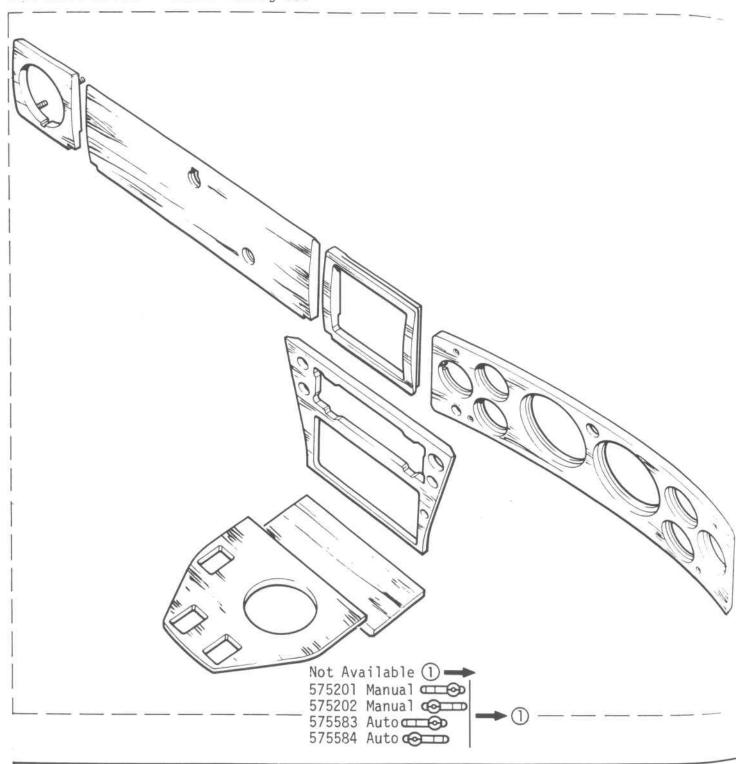

① 20,000LD

STAG

06-22

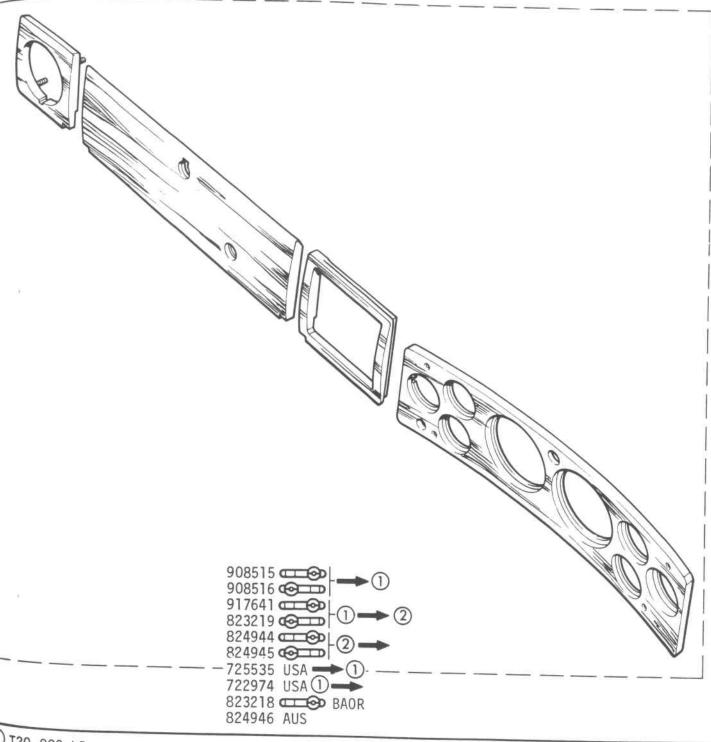


D T20,000 LD D T25,000 LD

TAG

06-23

BODY AND FITTINGS - (Veneered Facia and Air Ducts)

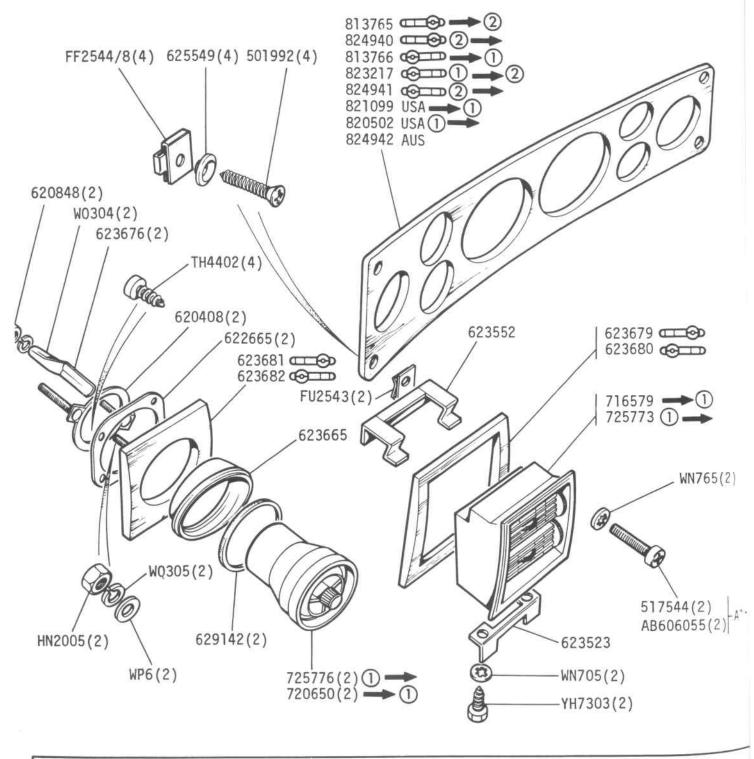


1 T20000LD/LE


2 T25000LD/LE

STAG

06 - 24

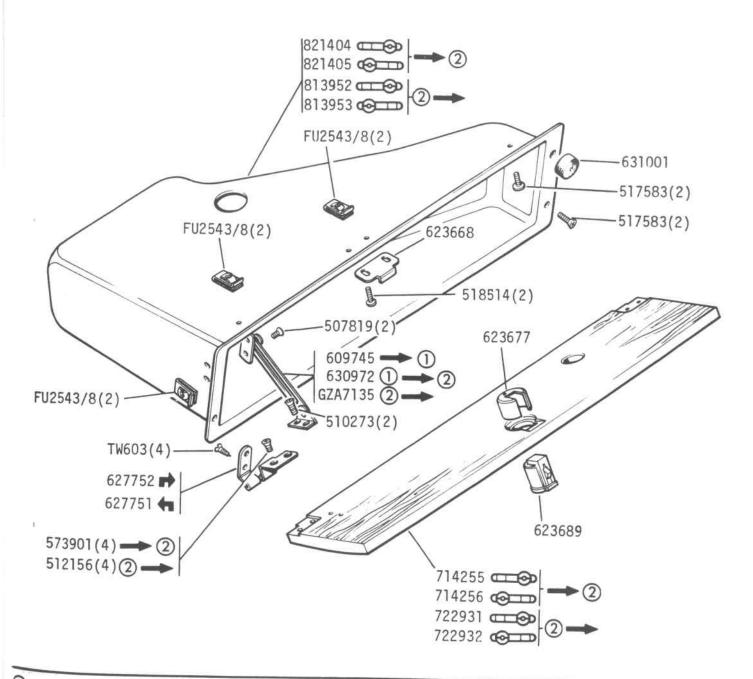


①T10,000 LD ②T20,000 LD

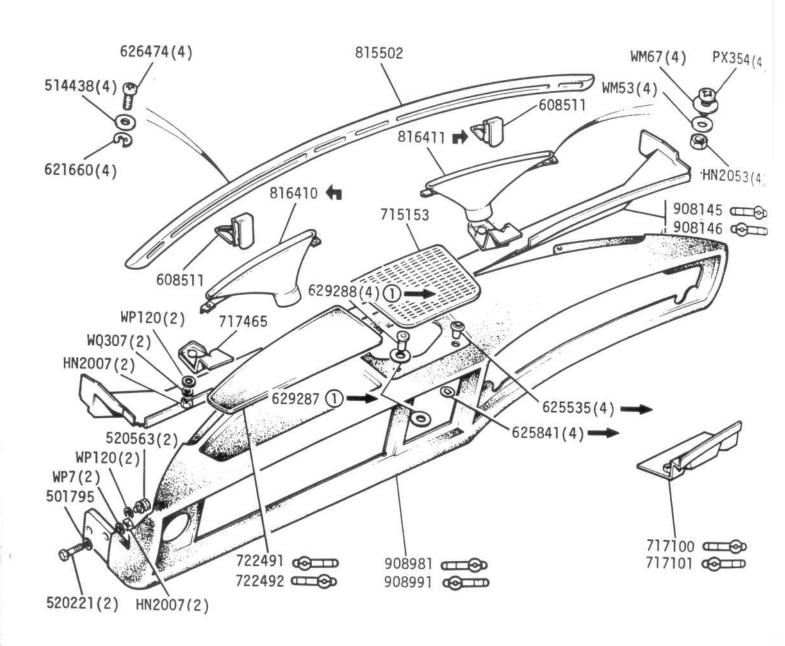


STAG 06-26 B5526/1


ODY AND FITTINGS - Parcel Shelf - front

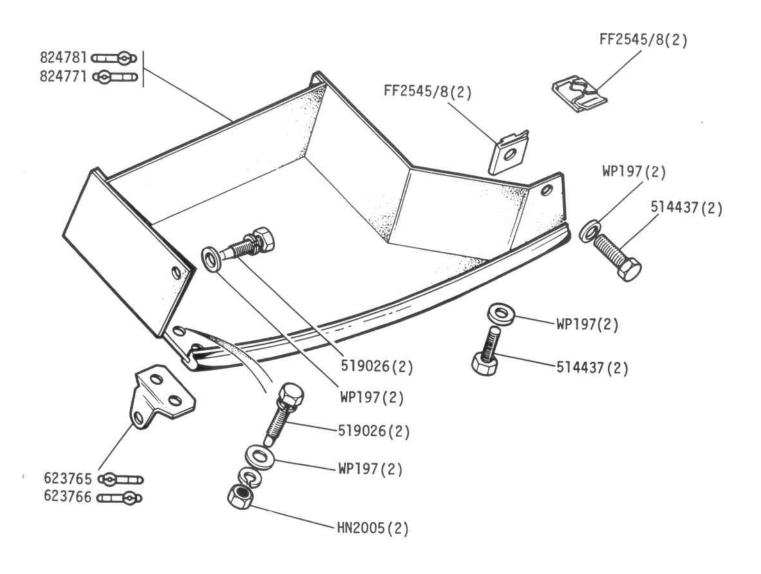


STAG

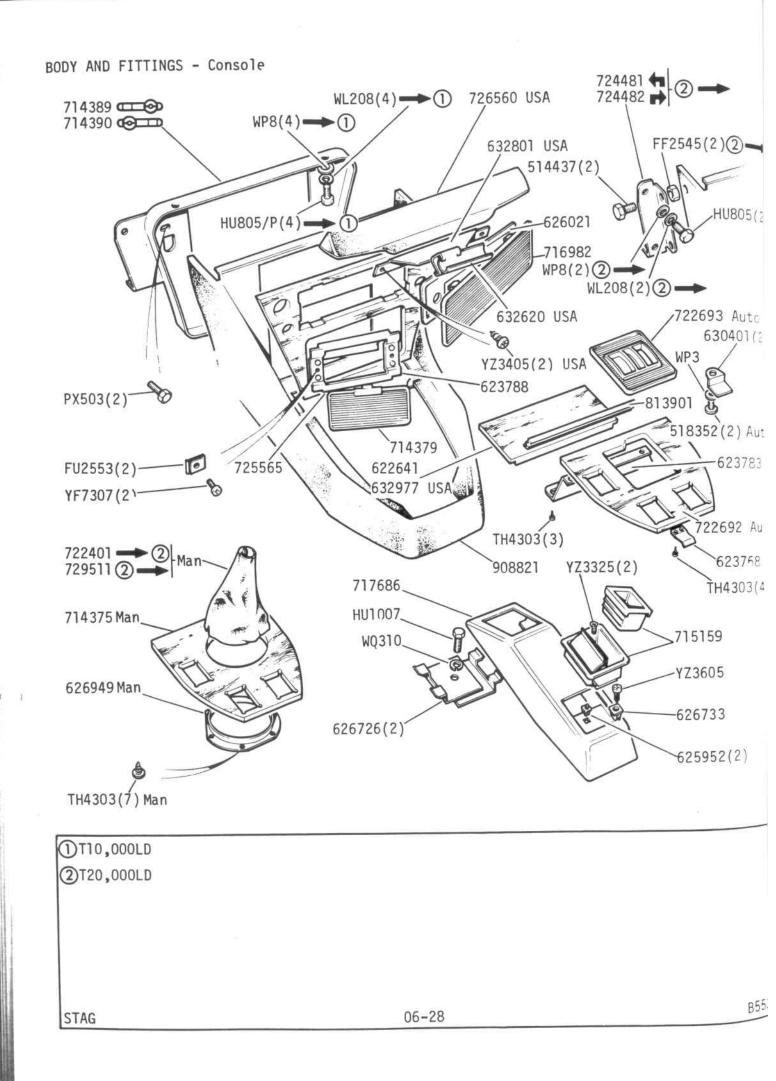

BODY AND FITTINGS - Steering Column Support and Nacelle Locking Device

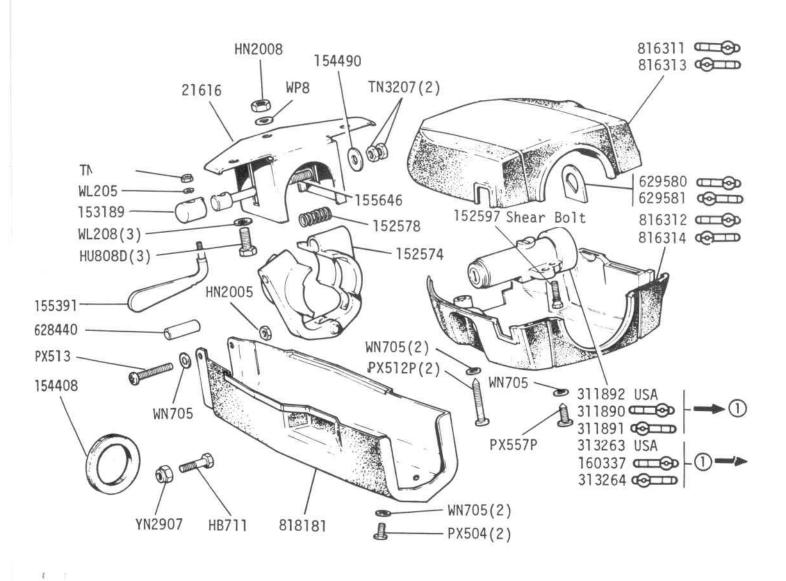


DLD20,000T		
В		
STAG	06-29	B5528/2

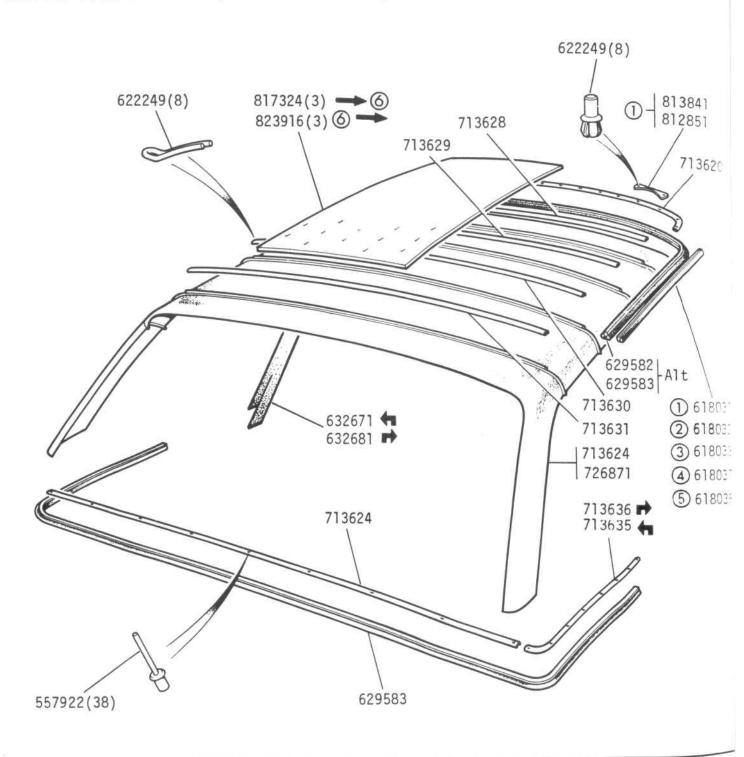




- 2 Inca Red
- 3 Saddle Tan
- (4) Shadow Blue
- (5) Grey
- (6) T20,000LD

06-30

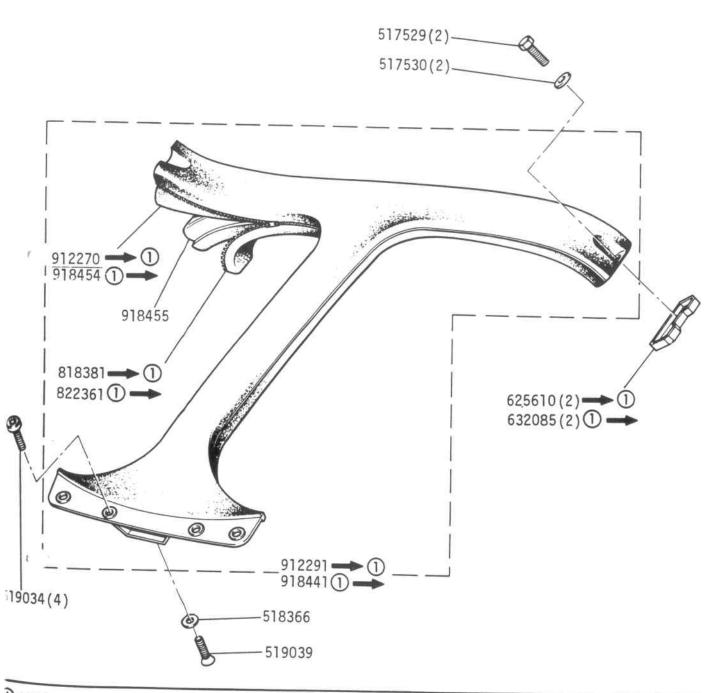

D rdso,000

TAG

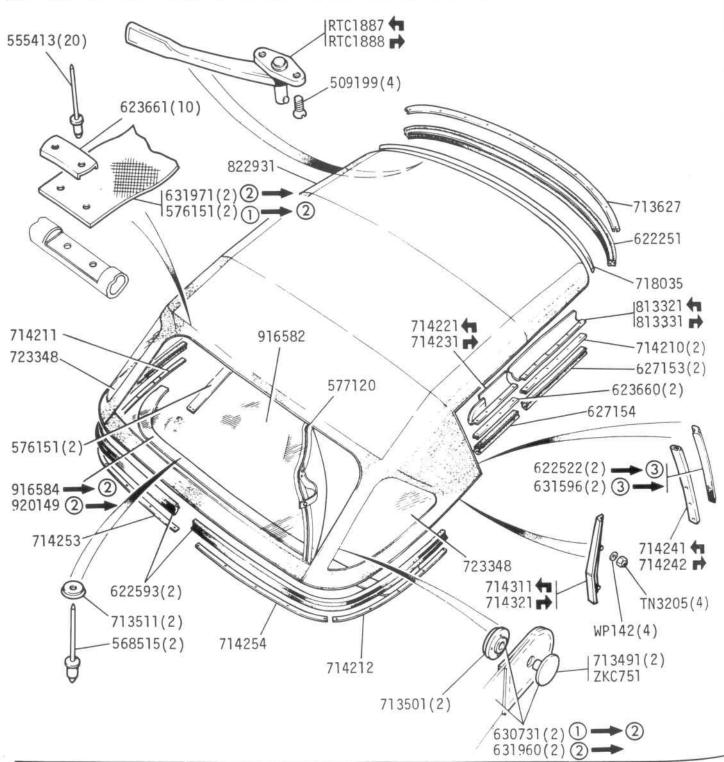


- ① T6059LD → T59431LD ←
- 2 T25,000LD
- 3 T20,000LD

Soft Top Kit NKC111 Comprising Plates 06-32, 06-33 and 06-34


STAG

06-32

B551:

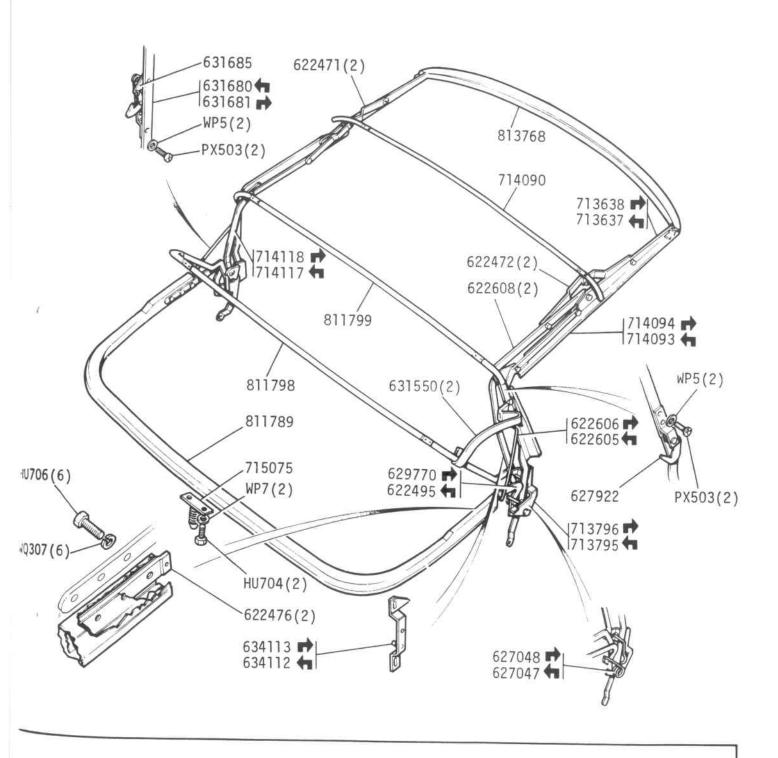


06-33

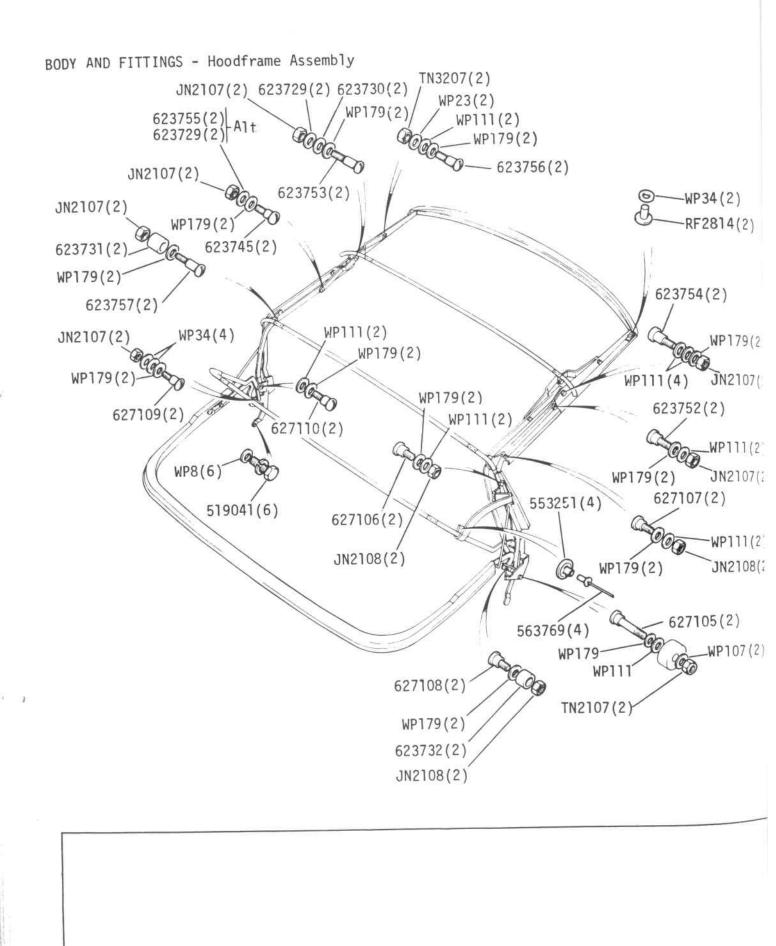

06 - 34


STAG

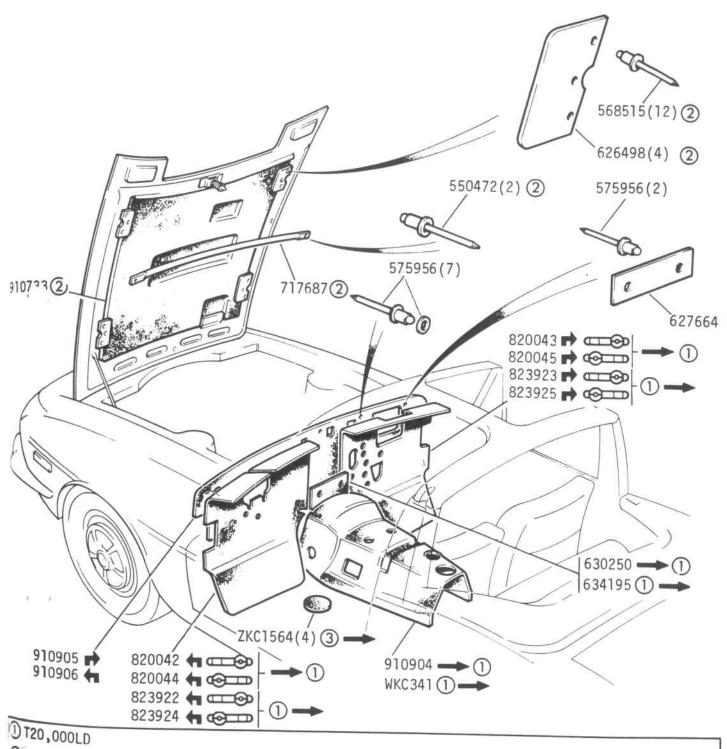


2A11 markets except USA

3733800LD

 
06 - 35



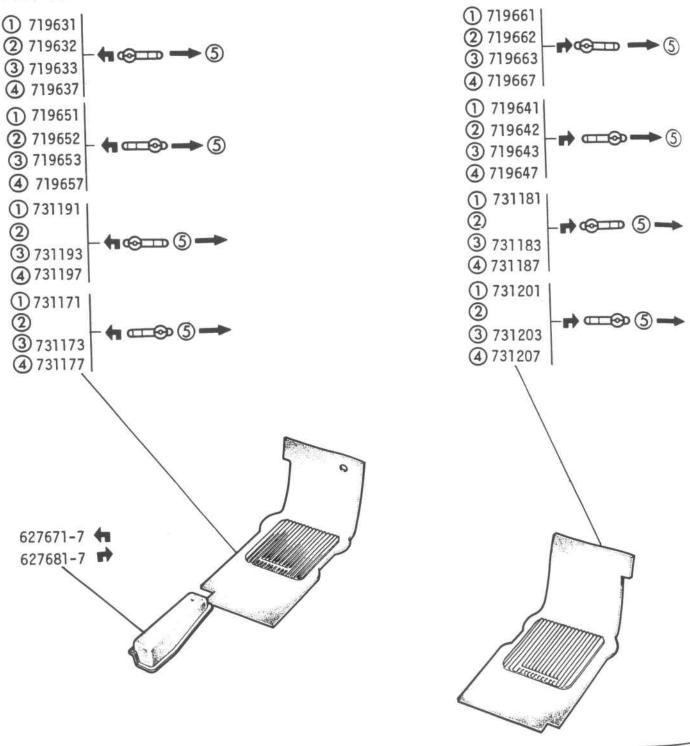

- ① Black
- ② Inca Red
- 3 Saddle Tan
- 4 Shadow Blue
- (5) T20,000LD

06-36

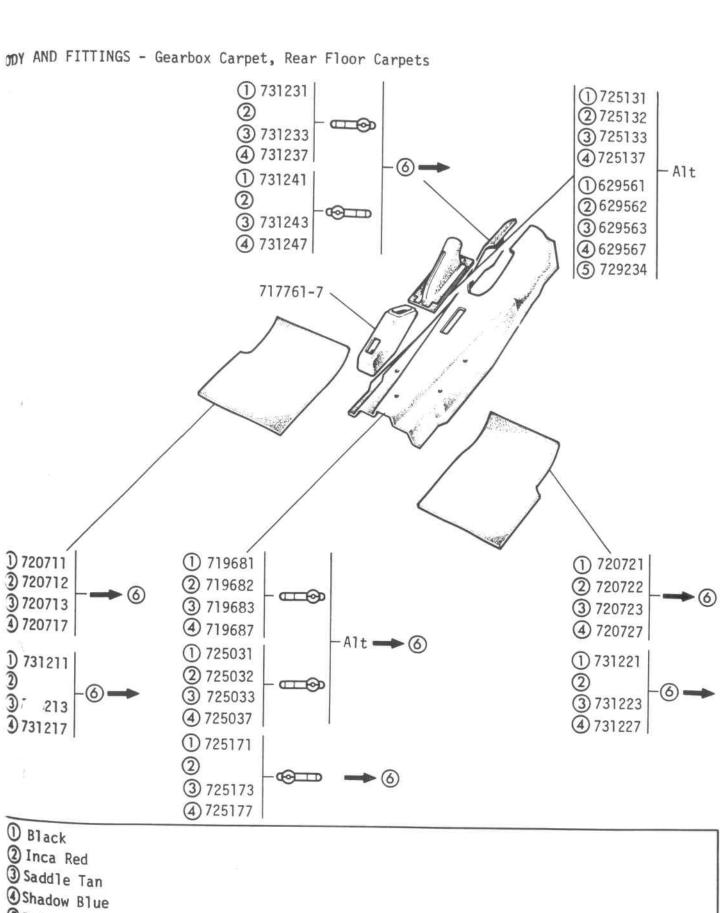


SBeige

③ T20,000LD

STAG

06-37


BODY AND FITTINGS - Windscreen Finisher, Dash Side and 'B' Post Trim

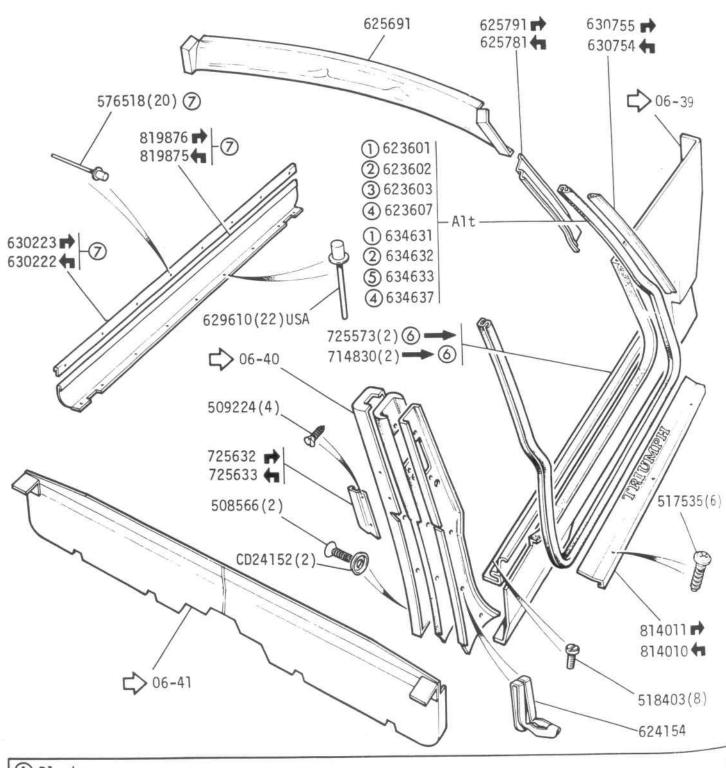


- 1) Black
- 2 Inca Red
- 3 Saddle Tan
- (4) Shadow Blue
- (5) Chestnut
- @ T20,000LD
- ⑦ USA Home and European T40,000LD →

06-38

B5536/1

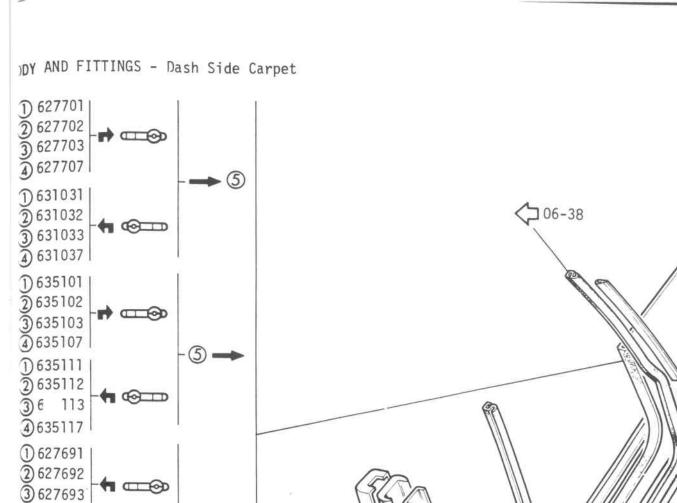

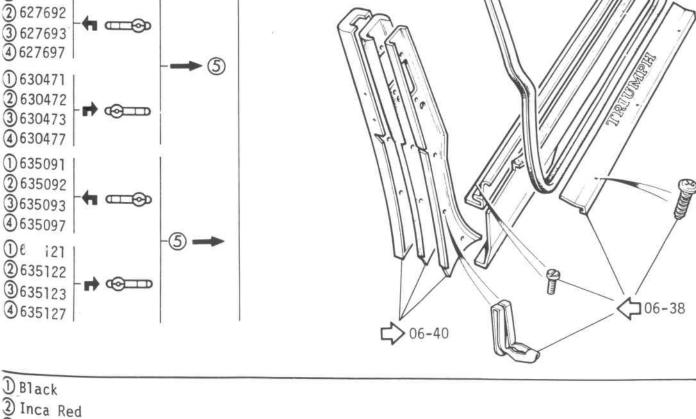

② Inca Red ③ Saddle Tan


Shadow Blue

3 T20,000LD

STAG


06 - 39

B5537/1

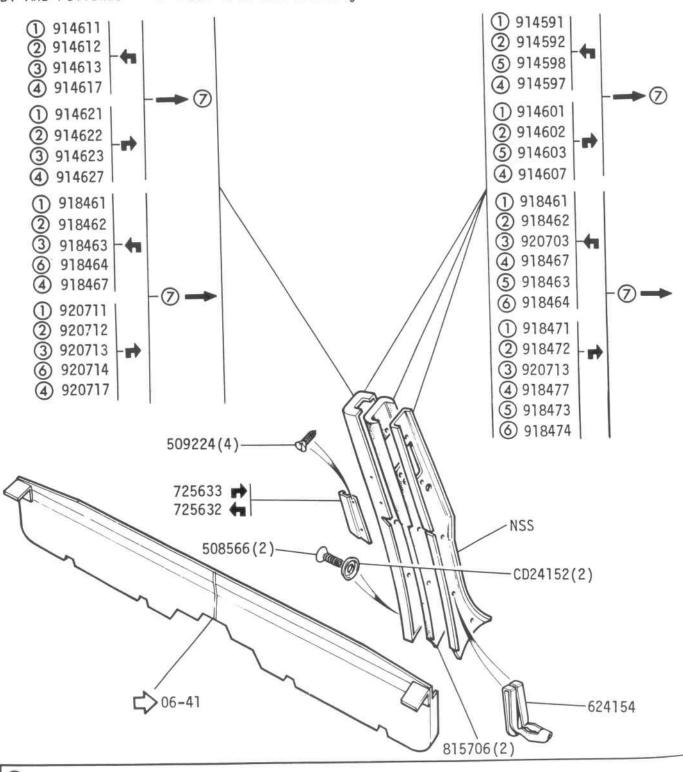

- (1) Black
- ② Inca Red
- Saddle Tan
- Shadow Blue
- ⑤ Chestnut
- Beige
- 7 T30,000LD

06-40

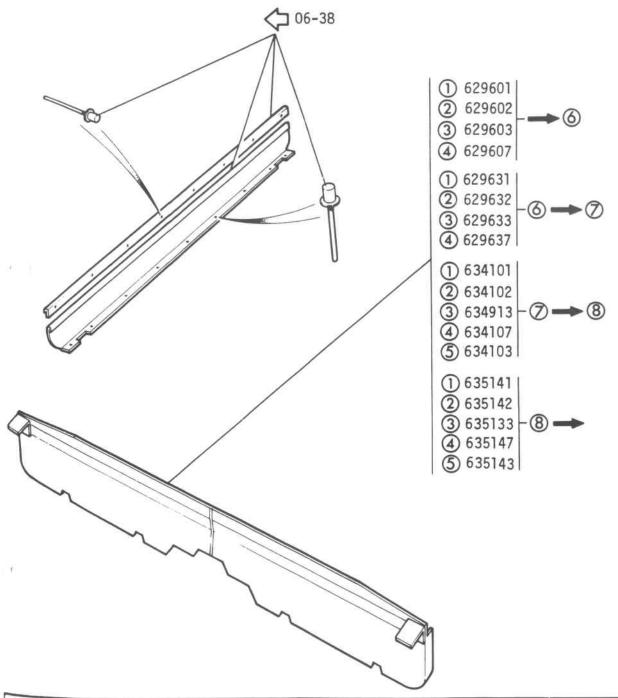

① Black

2 Inca Red

3 Saddle Tan

♠ Shadow Blue

3 Chestnut


6 LD500


⑦ LD20,000


8 LD33,953

STAG


06-41

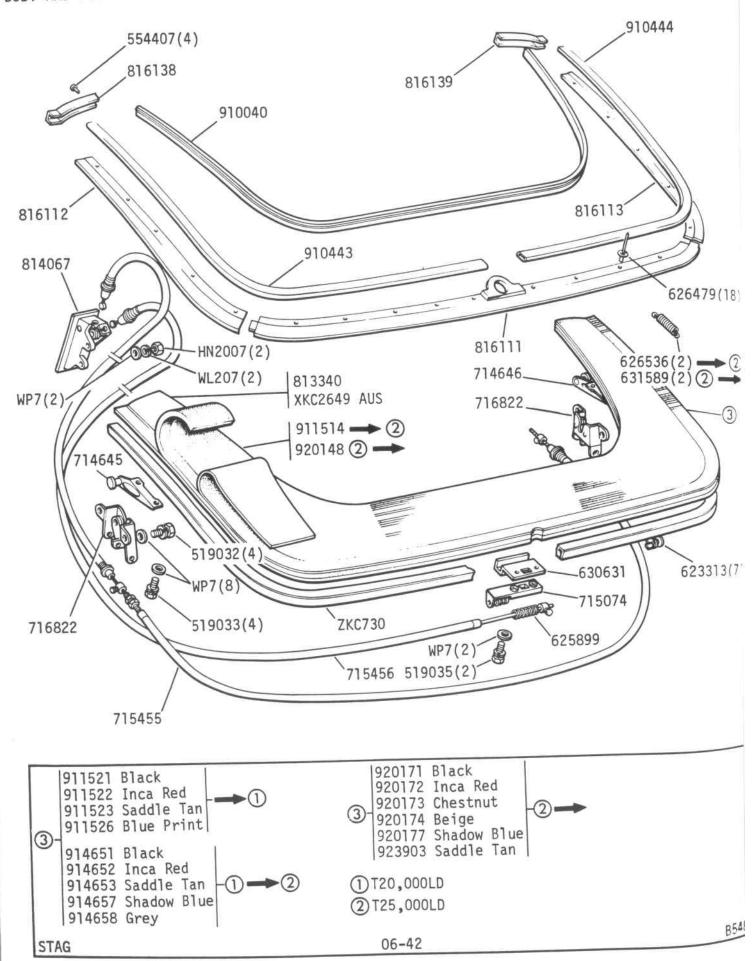


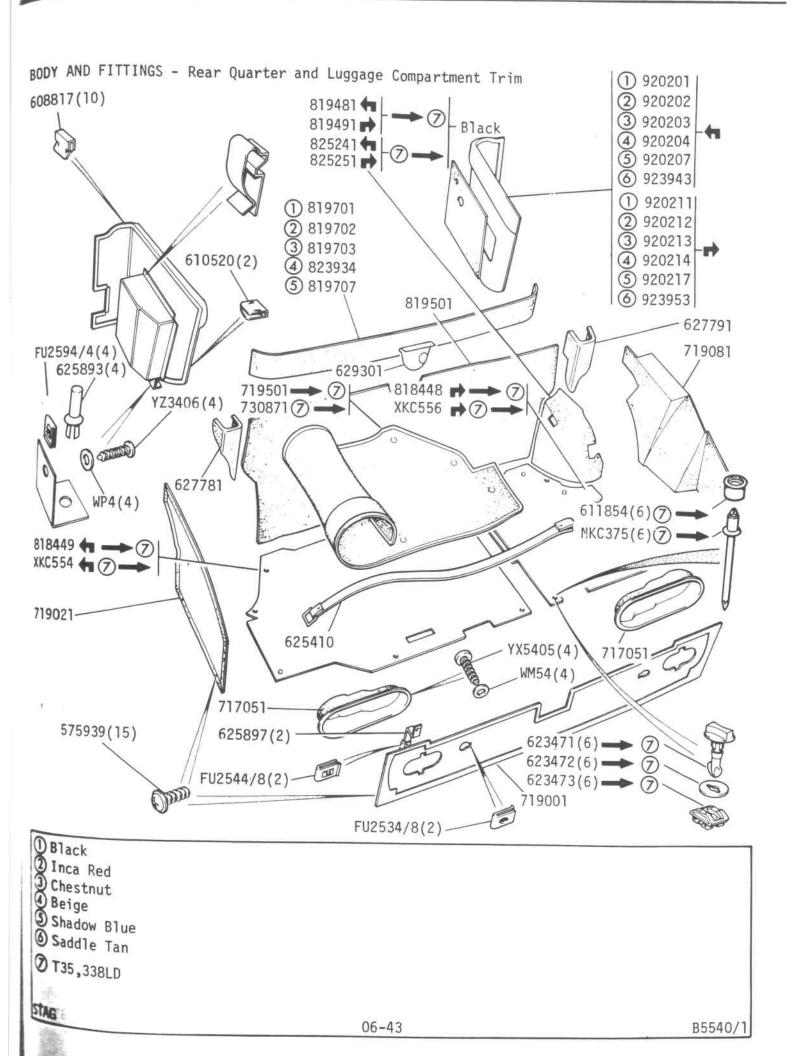


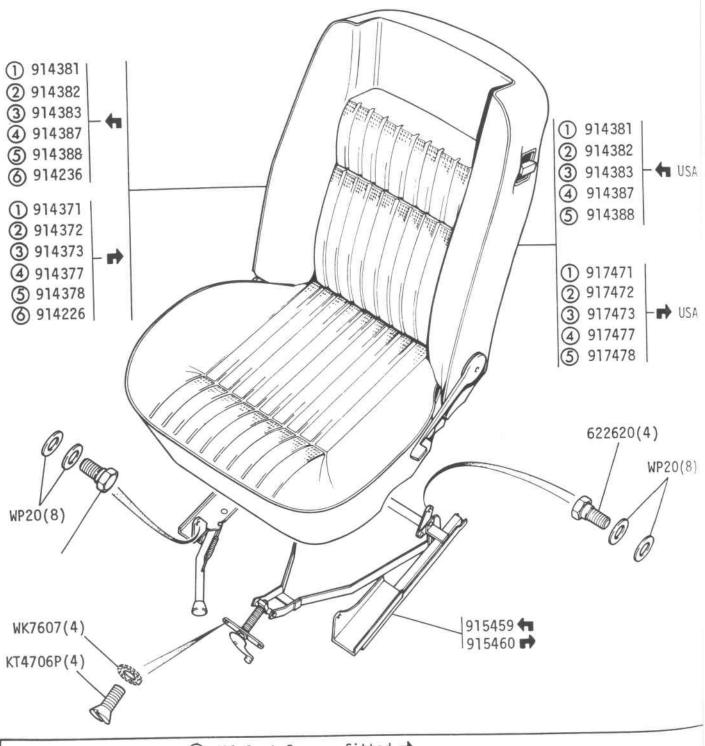

- (1) Black
- 2 Inca Red
- 3 Saddle Tan
- 4 Shadow Blue
- (5) Grey
- Blue Print
- 🗇 USA Seat Sensor fitted 🖈
 - \bigcirc 06-45 \bigcirc and 06-46 \bigcirc and USA For future

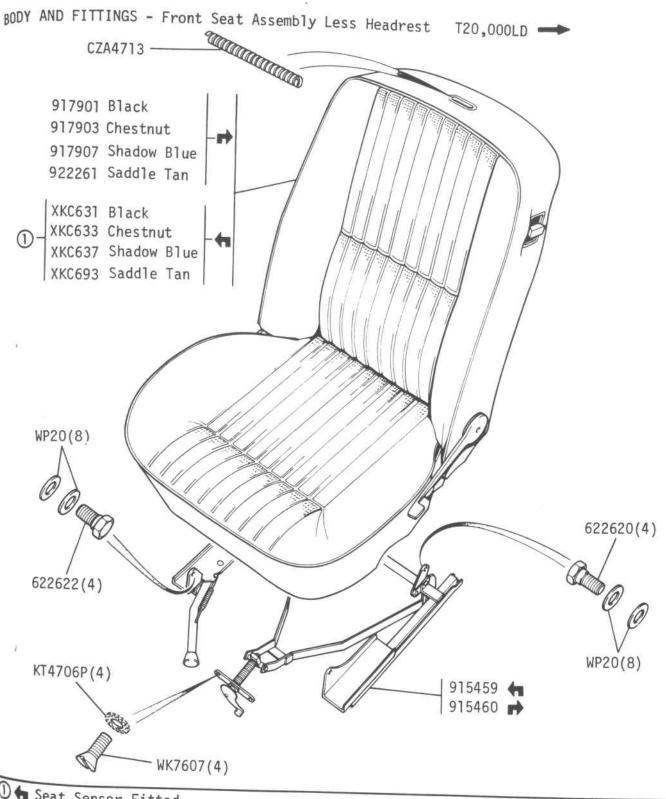

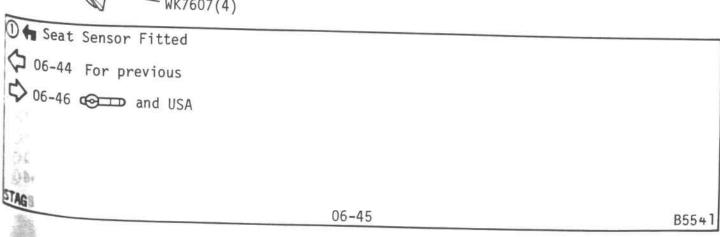

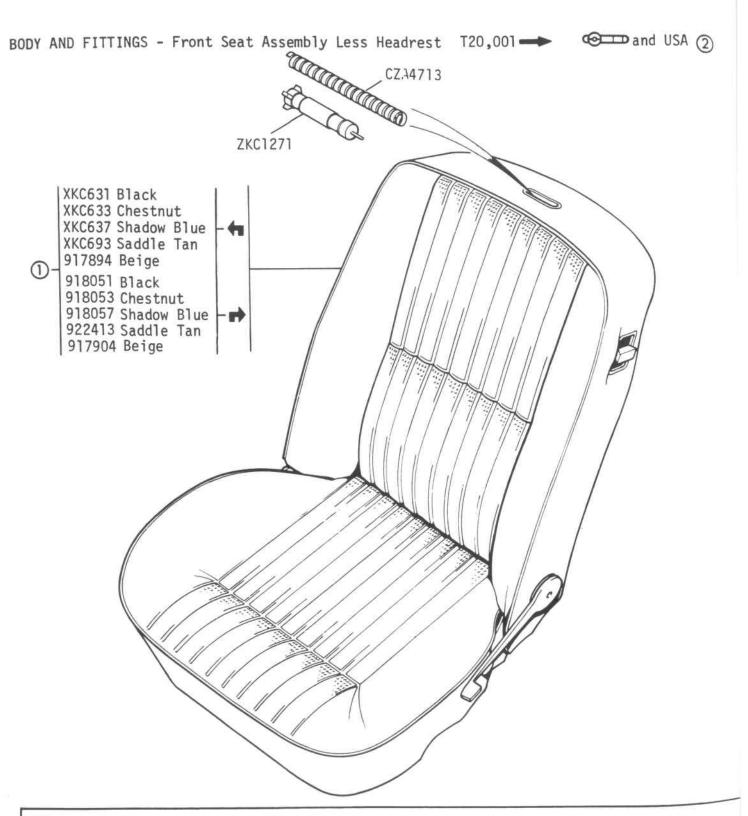



Seat Sensor Fitted

② <> 06-44 For previous and 06-45 for •••

STAG

06-46

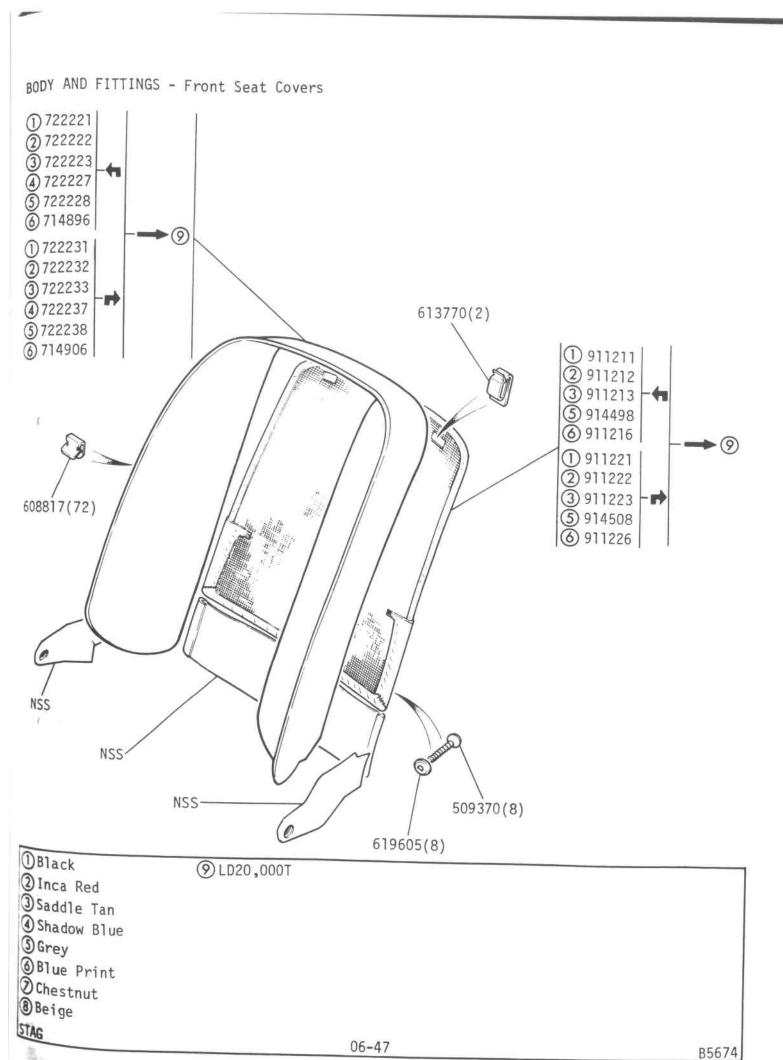


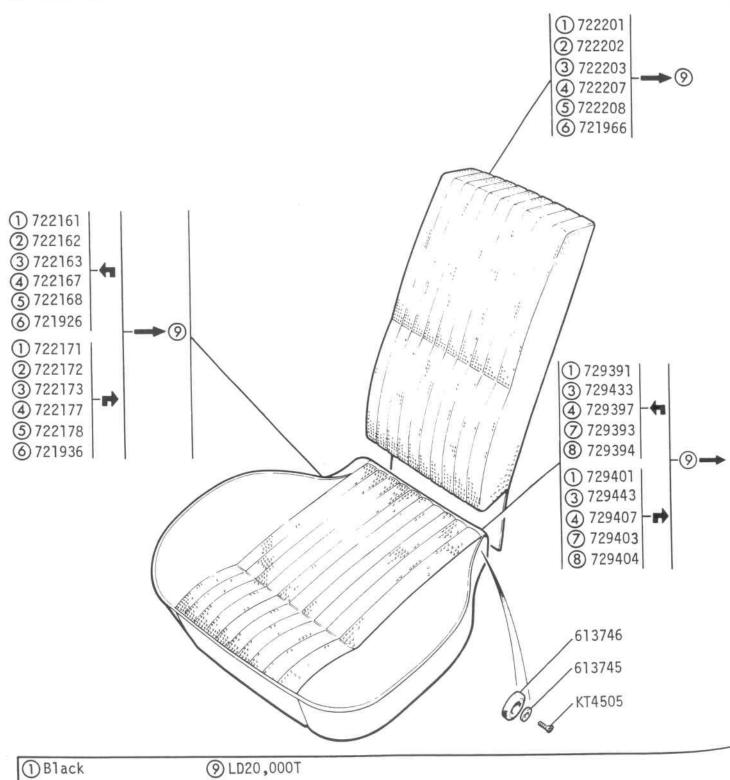



- 2) Inca Red
- 3 Saddle Tan
- (4) Shadow Blue
- (5) Grey
- 6 Blue Print
- 7 Chestnut
- 8 Beige

06-48

B.5961

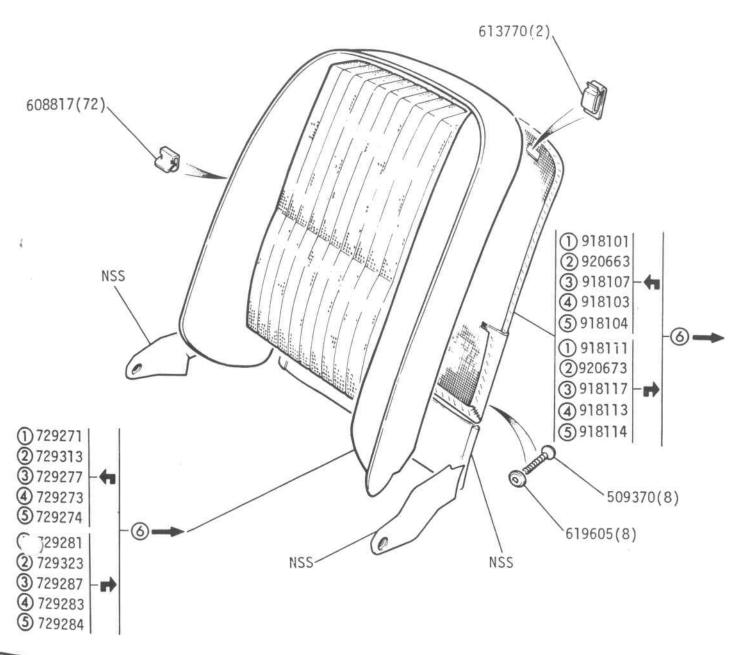

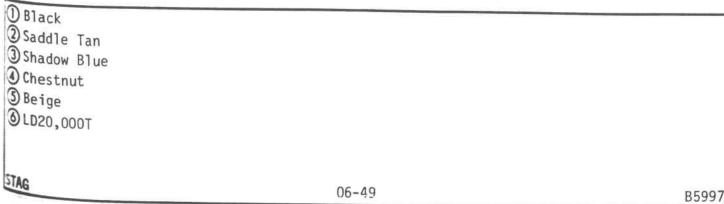

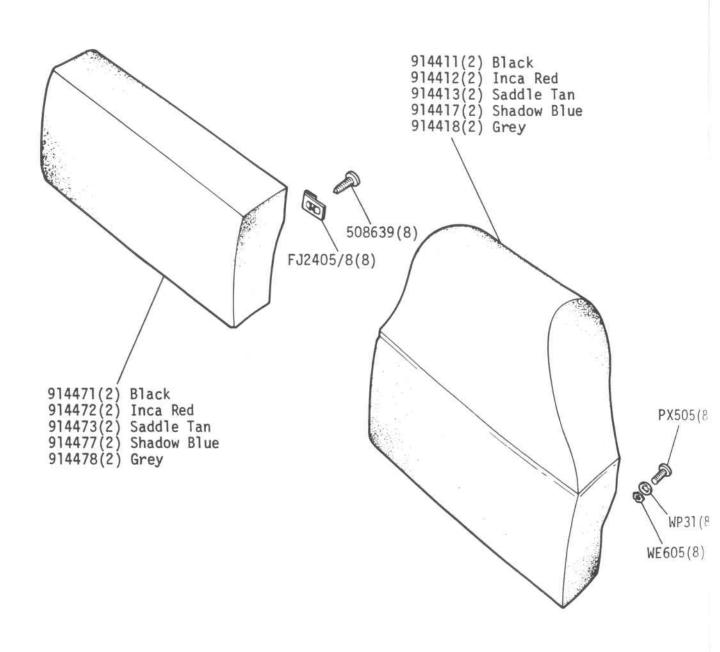





O6-50 for future

STAG

06-50

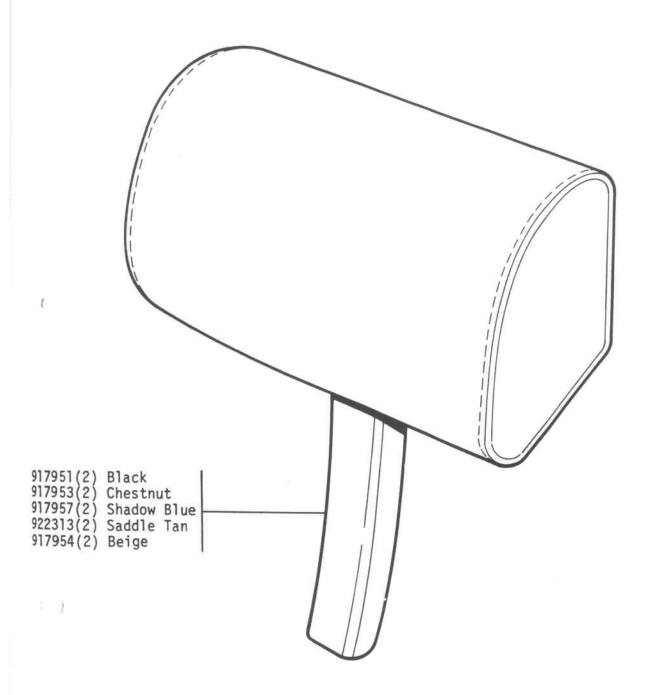


STAG 06-51 B5507

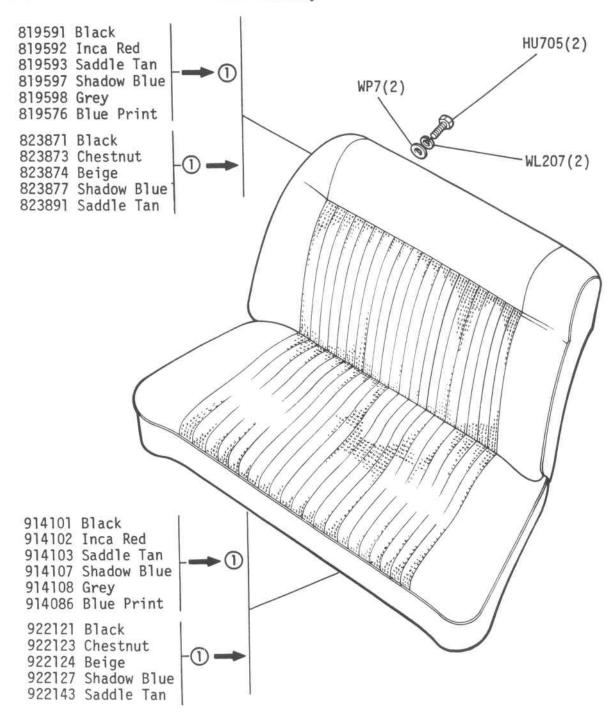



① T20,000LD

STAG

06-52

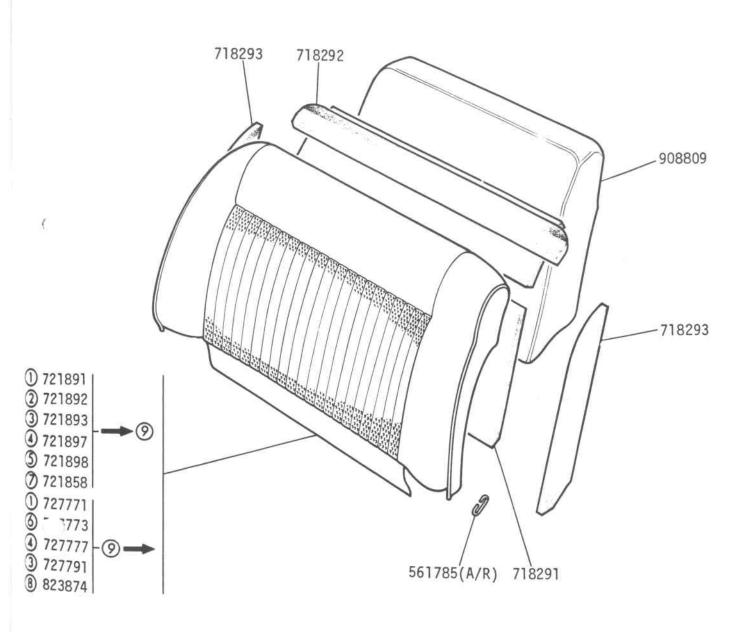


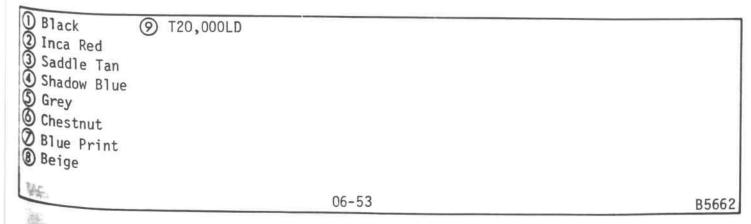

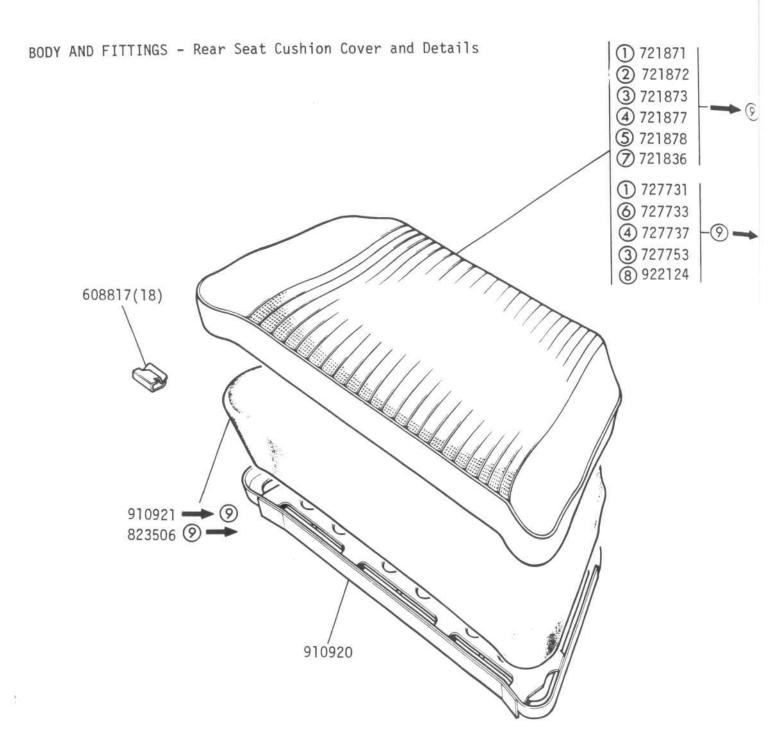

- ① Black
- 2 Inca Red
- 3 Saddle Tan
- 4 Shadow Blue
- (5) Grey
- 6 Chestnut
- 3 Blue Print

- 8 Beige
- 9 T20000LD

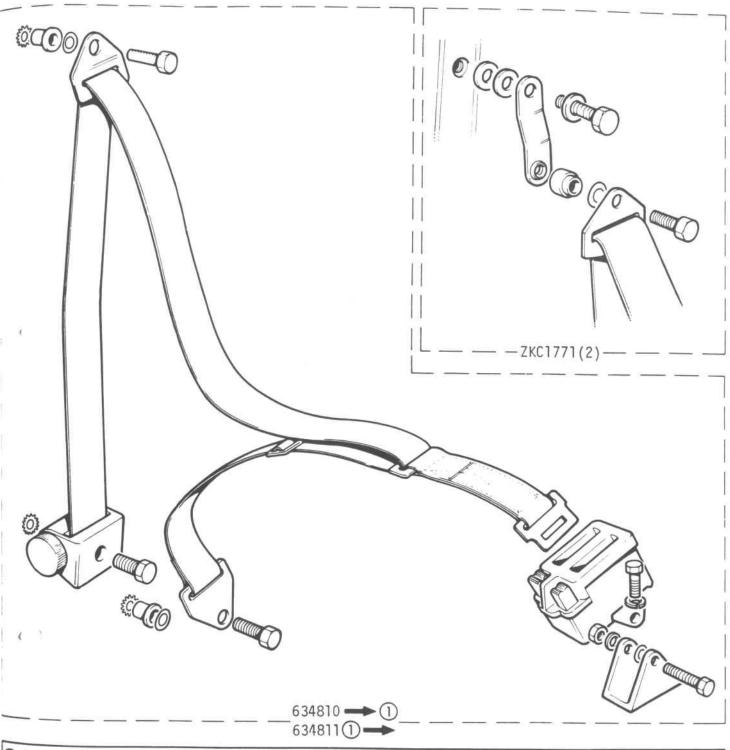


①LD10000 🖒 06-56 For audible warning seat belts

STAG

06-55


B5493

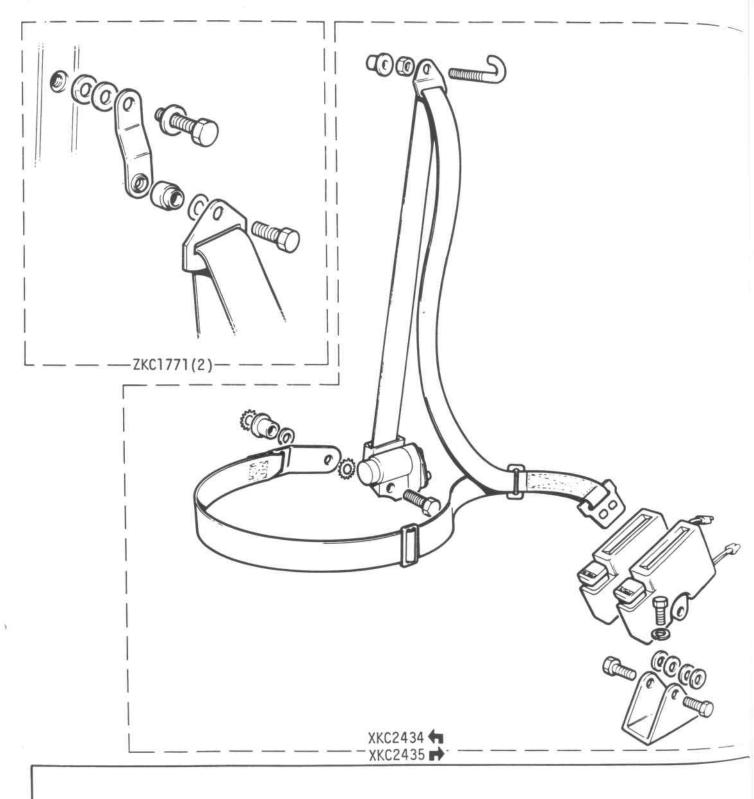

06-56

B549:

BODY AND FITTINGS - Front Seat Safety Harness (Kangol Reel Type) D 20,001 -

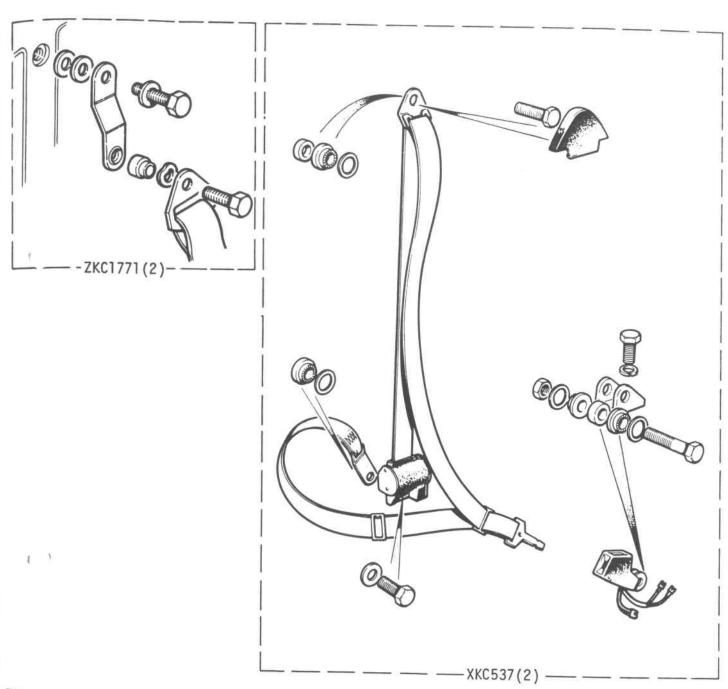


06-57

O6-56 For previous

ZKC203 Hook Stowage

STAG

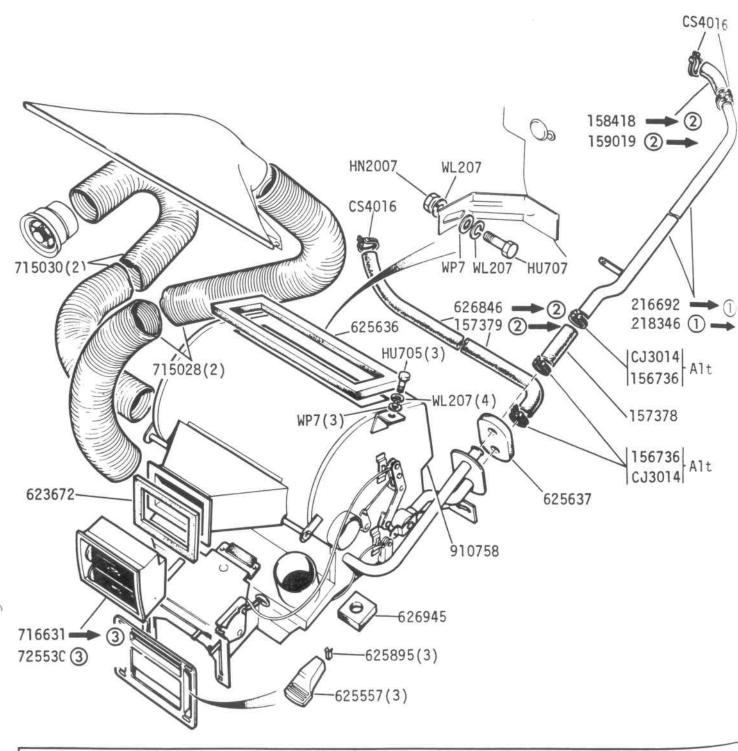





- ②LF10316
- 3LE11277

06-59

B5503/1

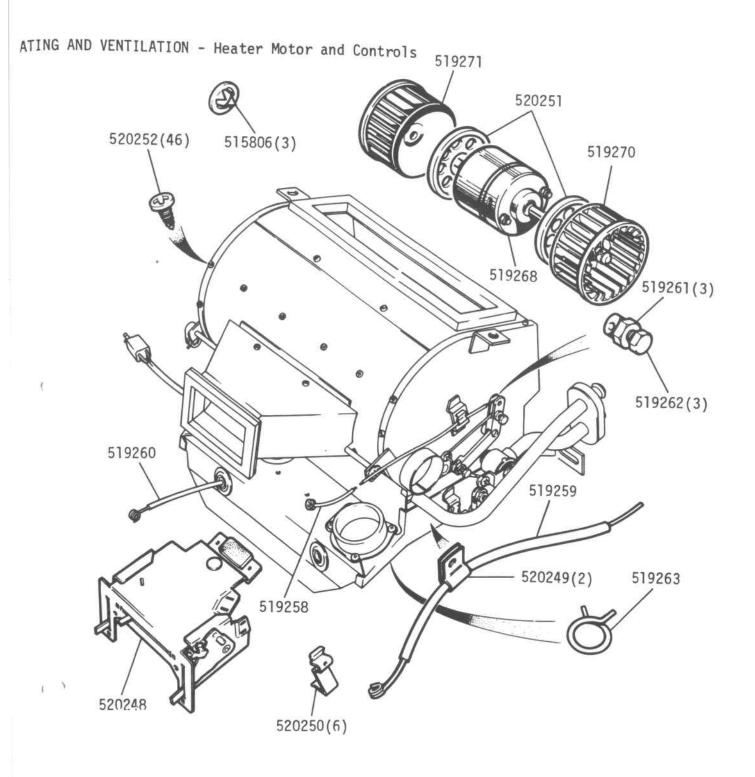


AG

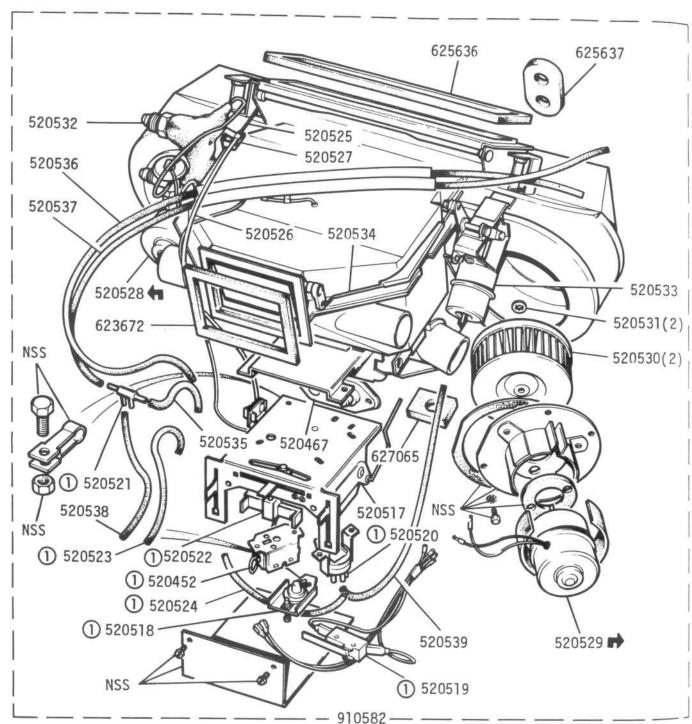

① Part of Control Box Assembly 520517


STAG 06-61 B5543


EATING AND VENTILATION - Air Conditioning Pipework

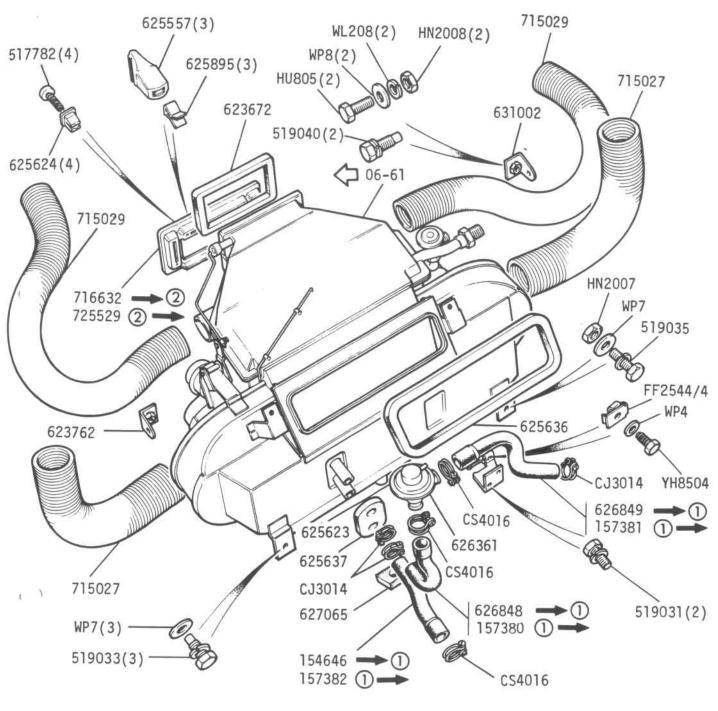



	157382 ①	CS4016
LF10316		
LE11276		
G		
iu .	06-62	B5542

HEATING AND VENTILATION - Air Conditioning Condenser, Fan, Pipes, etc. → ①

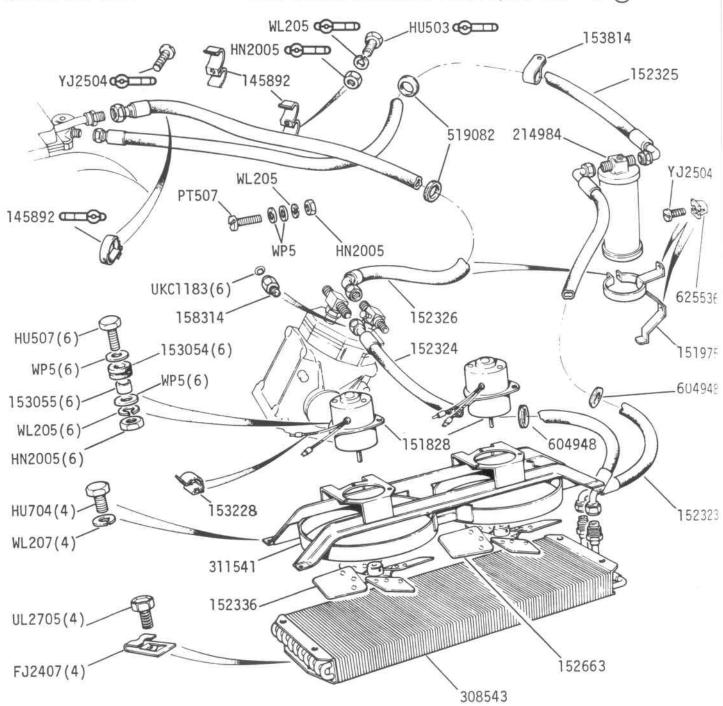

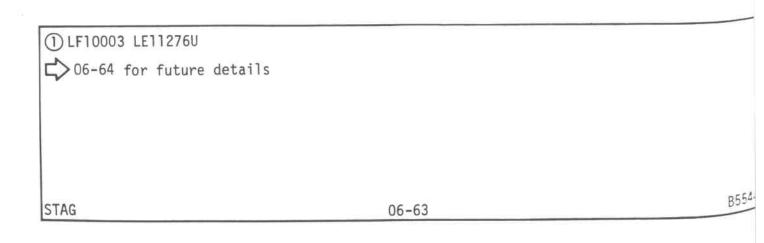

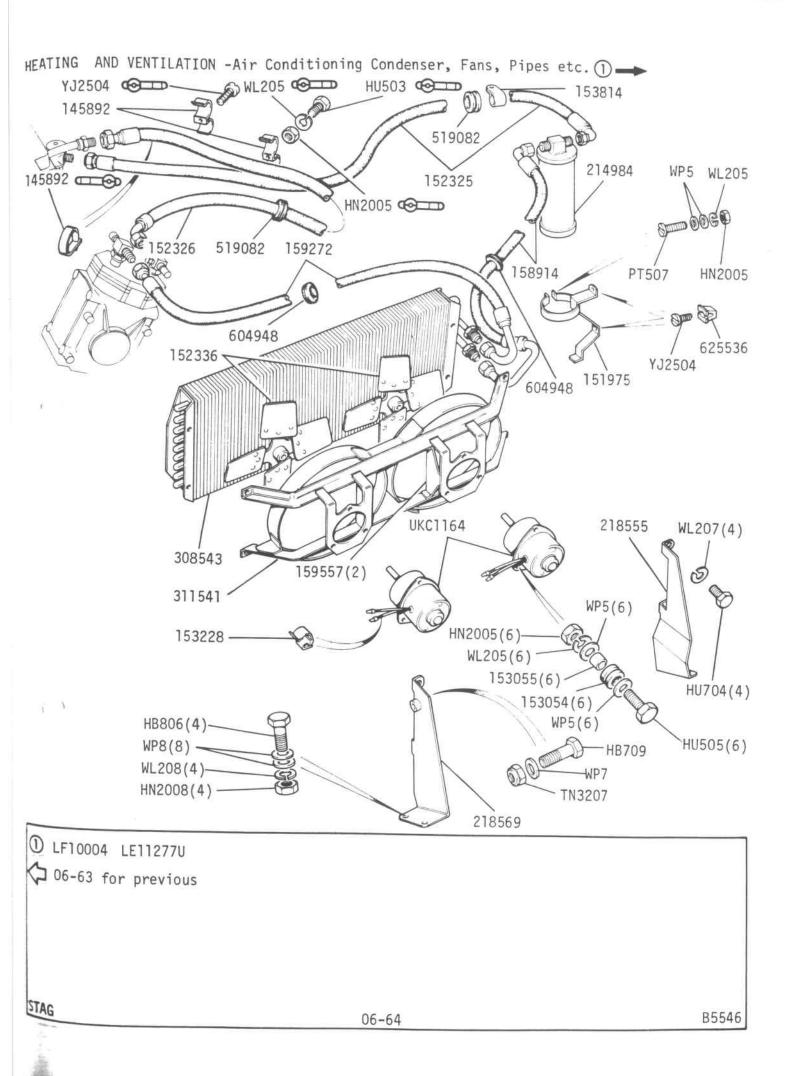

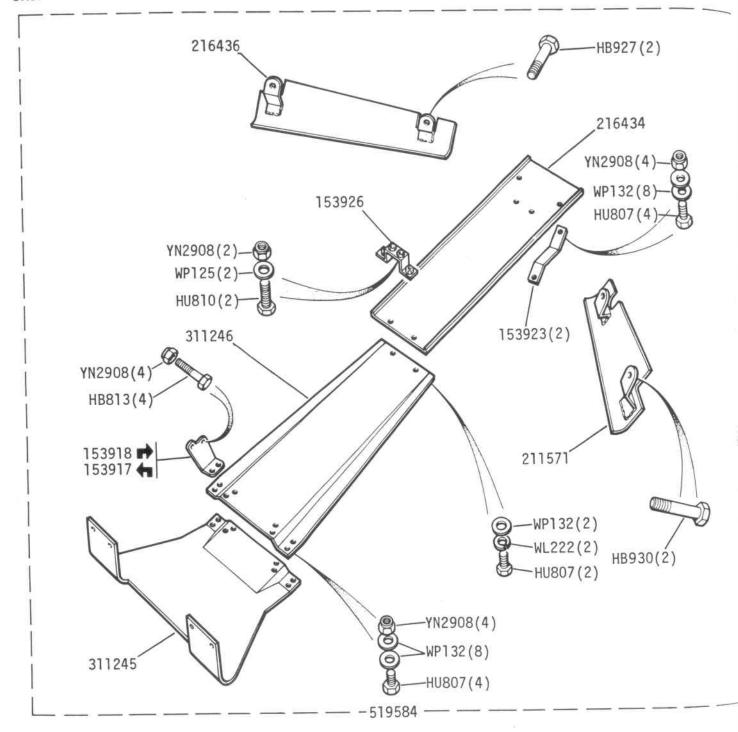

06-65

CESSORIES - Touch-In Paints




Aerosol Paint GAP153 White GAP154 Signal Red GAP156 Wedgewood Blue GAP157 Royal Blue GAP161 Sienna Brown GAP163 Laurel GAP164 Slate Grey GAP165 Jasmine GAP166 Valencia Blue GAP167 Damson GAP276 Saffron GAP281 Emerald Green GAP282 Mallard GAP283 Ice Blue GAP403 Inca Yellow GAP402 Russet Brown

GAP401 Tahiti Blue



4 Pint Paint Cans GTU153 White GTU154 Signal Red GTU156 Wedgewood Blue GTU157 Royal Blue GTU161 Sienna Brown GTU163 Laurel GTU164 Slate Grey GTU165 Jasmine GTU166 Valencia Blue GTU167 Damson GTU276 Saffron GTU281 Emerald Green GTU282 Mallard GTU283 Ice Blue GTU403 Inca Yellow GTU402 Russet Brown GTU401 Tahiti Blue

Touch-In

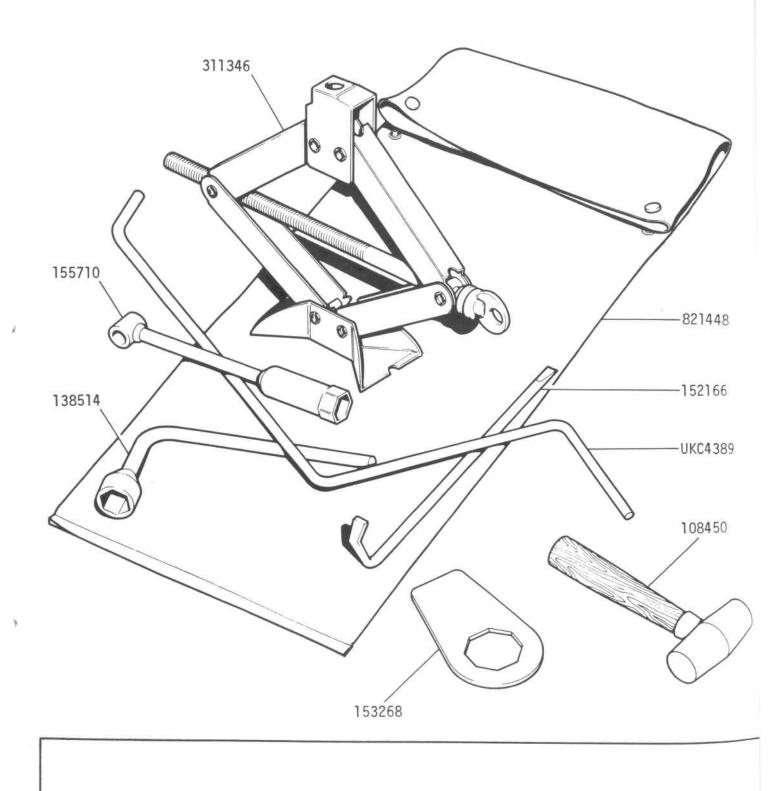

STAG 06-67 B5507

